


7. Combination Switch

A: REMOVAL

- 1) Turn ignition switch off.
- 2) Disconnect ground cable from battery and wait for at least 20 seconds before starting work.

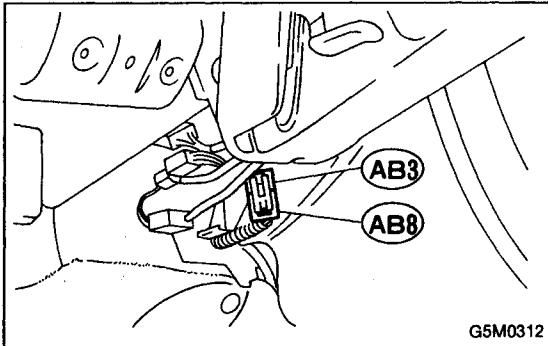


- 3) Remove lower cover. <Ref. to 5-4 [W1A0].☆1 > Disconnect airbag connector (AB3) and (AB8) below steering column.


CAUTION:

Do not reconnect airbag connector at steering column until combination switch is securely re-installed.


- 4) Disconnect combination switch connectors from body harness connector.

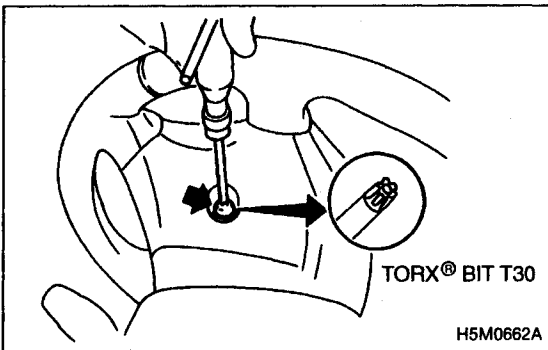

- 5) Set front wheels in straight ahead position. Using TORX® BIT T30, remove two TORX® bolts.

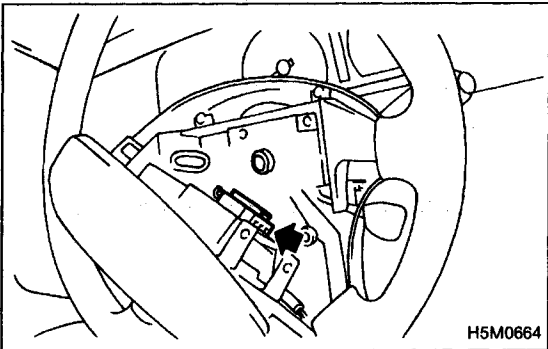


- 6) Disconnect airbag connector on back of airbag module. <Ref. to 5-5 [M2-6].☆1 > Remove airbag module, and place it with pad side facing upward. <Ref. to 5-5 [W300].☆1 >

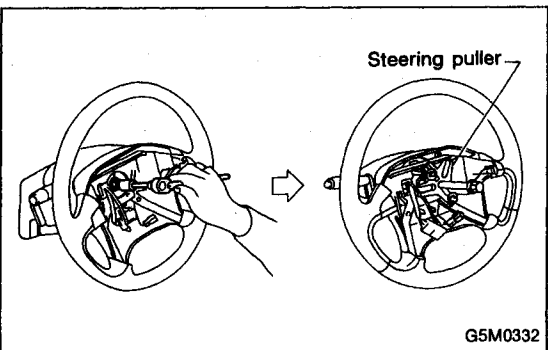

- 7) Using steering puller, remove steering wheel.

CAUTION:

Do not allow connector to interfere when removing steering wheel.

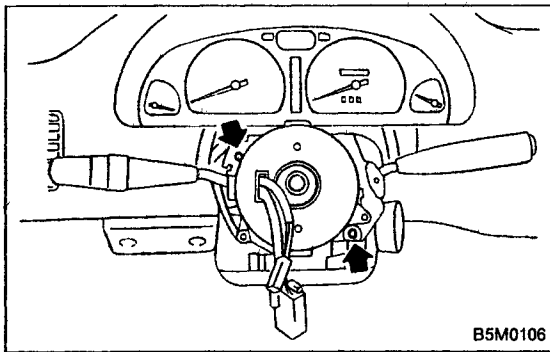


- 8) Remove steering column covers.
- 9) Removing two retaining screws, remove combination switch.

B: ADJUSTMENT


1. CENTERING ROLL CONNECTOR

Before installing steering wheel, make sure to center roll connector built into combination switch.

- 1) Make sure that front wheels are positioned straight ahead.
- 2) Install steering gearbox, steering shaft and combination switch properly. Turn roll connector pin ① **clockwise** until it stops.

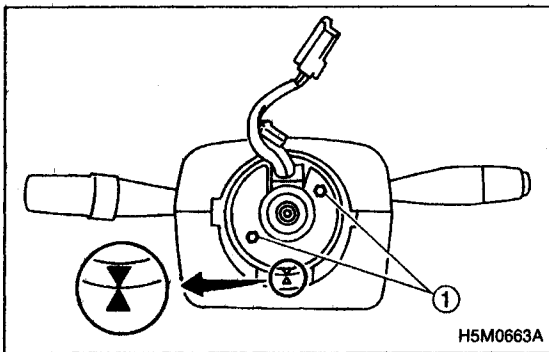

- 3) Then, back off roll connector pin ① approximately 2.65 turns until "▲" marks aligned.

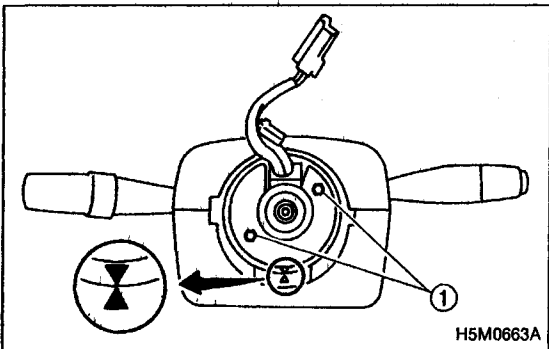

C: INSTALLATION

- 1) Before installing combination switch, check to ensure that combination switch is off and front wheels are set in the straight ahead position.

CAUTION:

Failure to do this might damage roll connector.

- 2) Install column cover and center roll connector.

- 3) Install steering wheel in neutral position. Carefully insert roll connector pin ① into hole on steering wheel.

NOTE:

If steering wheel angle requires fine adjustment, adjust tie-rod. <Ref. to 4-3 [W3F0].☆1>

- 4) Install airbag module and lower cover in the reverse order of removal.