



- ① Engine control module (ECM)
- ② Ignition coil
- ③ Ignitor
- ④ Crankshaft position sensor
- ⑤ Camshaft position sensor
- ⑥ Throttle position sensor
- ⑦ Fuel injectors
- ⑧ Pressure regulator
- ⑨ Engine coolant temperature sensor
- ⑩ Mass air flow sensor
- ⑪ Idle air control solenoid valve
- ⑫ Purge control solenoid valve
- ⑬ Fuel pump
- ⑭ PCV valve
- ⑮ Air cleaner
- ⑯ Canister
- ⑰ Main relay
- ⑱ Fuel pump relay
- ⑲ Fuel filter
- ⑳ Front catalytic converter
- ㉑ Rear catalytic converter
- ㉒ EGR valve
- ㉓ EGR control solenoid valve
- ㉔ Radiator fan
- ㉕ Radiator fan relay
- ㉖ Pressure sources switching solenoid valve
- ㉗ Knock sensor
- ㉘ Back-pressure transducer
- ㉙ Front oxygen sensor
- ㉚ Rear oxygen sensor (Except California model)
- ㉛ Pressure sensor
- ㉜ A/C compressor
- ㉝ Inhibitor switch
- ㉞ CHECK ENGINE malfunction indicator lamp (MIL)
- ㉟ Tachometer
- ㊱ A/C relay
- ㊲ A/C control module
- ㊳ Ignition switch
- ㊴ Transmission control module (TCM)
- ㊵ Vehicle speed sensor 2
- ㊶ Data link connector (For Subaru select monitor)
- ㊷ Data link connector (For Subaru select monitor and OBD-II general scan tool)
- ㊸ Two way valve
- ㊹ Rear oxygen sensor (California model only)
- ㊺ Filter