

1. Sunroof

Entry of water into compartment	<ul style="list-style-type: none"> ① Check roof panel and glass lid assembly for improper or poor sealing. ② Check drain tube for clogging. ③ Check sunroof frame seal and body for improper fit.
Booming noise	<ul style="list-style-type: none"> ① Check glass lid assembly and roof panel for improper clearance. ② Check sun shade and roof trim for improper clearance.
Abnormal motor noise	<ul style="list-style-type: none"> ① Check motor for looseness. ② Check gears and bearings for wear. ③ Check cable for wear. ④ Check cable pipe for deformities.
Failure of sunroof to operate (Motor operates properly.)	<ul style="list-style-type: none"> ① Check guide rail for foreign particles. ② Check guide rail for improper installation. ③ Check parts for mutual interference. ④ Check cable slider for improper clinching. ⑤ Check cable for improper installation. ⑥ Check clutch adjustment nut for improper tightness.
Motor does not rotate or rotates improperly. (Use sunroof wrench to check operation.)	<ul style="list-style-type: none"> ① Check fuse for blowout. ② Check switch for improper function. ③ Check motor for incorrect terminal voltage. ④ Check relay for improper operation. ⑤ Check poor grounding system. ⑥ Check cords for discontinuity and terminals for poor connections. ⑦ Check limit switch for improper operation.