


## 23. Seat Heater

### A: REMOVAL AND INSTALLATION


#### 1. SEAT HEATER

Refer to 5-3 [W1A0] as for removal of seat (including heater system).

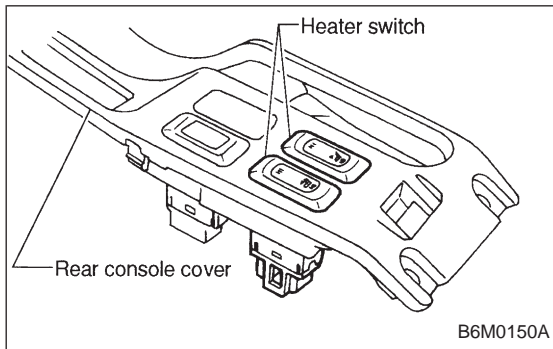

#### 2. SEAT HEATER SWITCH

- 1) Remove screws which secure rear console cover, and then remove rear console cover.
- 2) Remove seat heater switch from console cover.

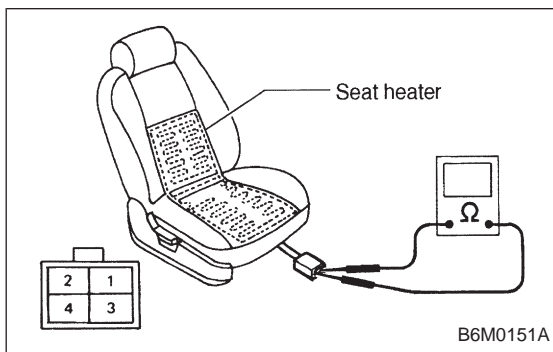


### B: INSPECTION

#### 1. SEAT HEATER

Check continuity between terminals of seat heater connector.

- Between terminals No. 1 and No. 3
- Between terminals No. 1 and No. 4
- Between terminals No. 3 and No. 4

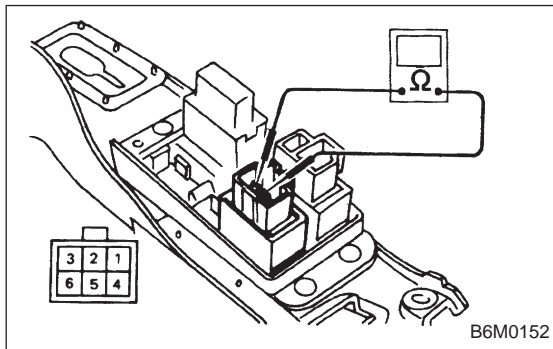

#### 2. SEAT HEATER SWITCH

Set switch to each position and check continuity between terminals as indicated in table below:

Switch	Terminal	5	6	2		3	4		1
OFF					○	⊗	○	○	⊗
LO		○	○		○	⊗	○	○	⊗
HI		○		○	○	⊗	○	○	⊗