



## 16. Main Relay

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery ground cable.
- 2) Remove lower cover and then disconnect connectors.
- 3) Lower transmission control module.
- 4) Remove the front pillar lower trim.  
<Ref. to 5-3 [W5A1].>
- 5) Remove fuse box mounting nuts.
- 6) Lower fuse box.
- 7) Remove fuse box mounting bracket.
- 8) Remove screw which retains bracket of main relay ① and fuel pump relay ②.
- 9) Disconnect connector from main relay.
- 10) Installation is in the reverse order of removal.
  - ① Main relay
  - ② Fuel pump relay