


4. Schematic

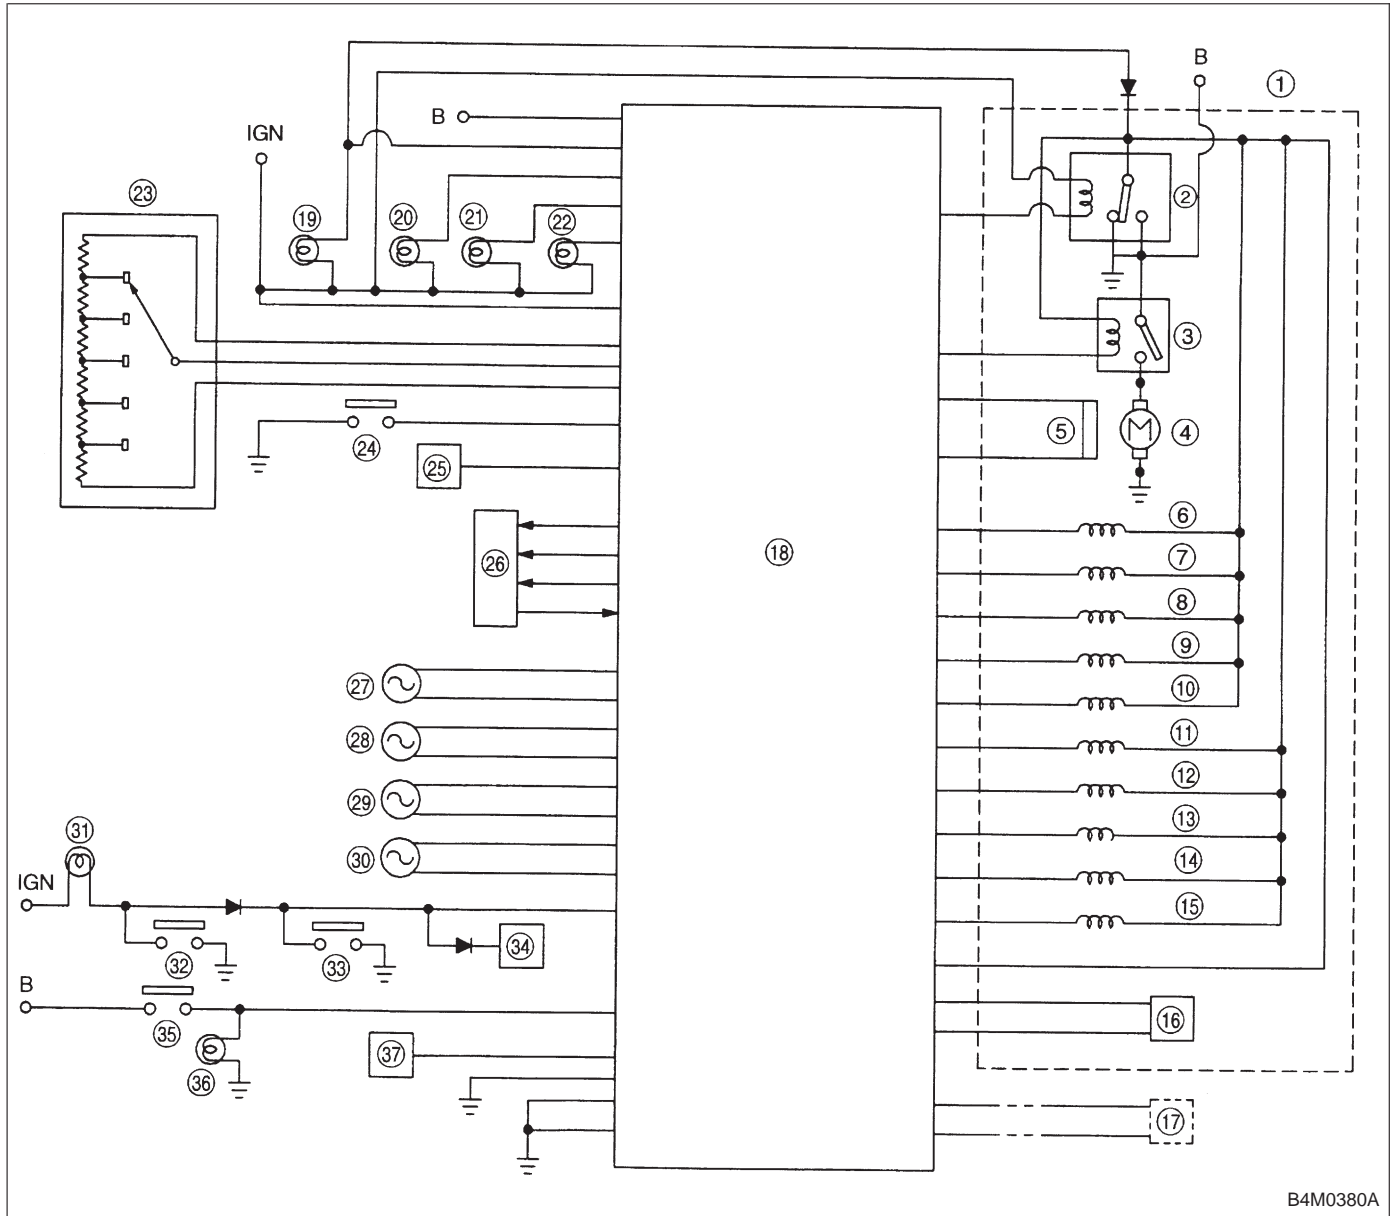

B4M0380A

- | | | |
|-------------------------------------|-----------------------------------|----------------------------|
| ① Hydraulic control unit | ⑭ Rear left outlet solenoid valve | ⑳ Engine control module |
| ② Valve relay | ⑮ TCS solenoid valve 1 | ㉑ Rear right ABS sensor |
| ③ Motor relay | ⑯ Pressure switch | ㉒ Front right ABS sensor |
| ④ Motor | ⑰ Data link connector | ㉓ Front left ABS sensor |
| ⑤ Motor sensor | ⑱ ABS/TCS control module | ㉔ Rear left ABS sensor |
| ⑥ Front left inlet solenoid valve | ㉑ ABS warning light | ㉕ Brake warning light |
| ⑦ Front left outlet solenoid valve | ㉒ TCS operating indicator light | ㉖ Parking brake switch |
| ⑧ Rear right inlet solenoid valve | ㉓ TCS OFF indicator light | ㉗ Brake fluid level sensor |
| ⑨ Rear right outlet solenoid valve | ㉔ TCS warning light | ㉘ Generator |
| ⑩ TCS solenoid valve 2 | ㉕ Stroke sensor | ㉙ Stop lamp switch |
| ⑪ Front right inlet solenoid valve | ㉖ TCS OFF switch | ㉚ Stop lamp |
| ⑫ Front right outlet solenoid valve | ㉗ Diagnosis connector | ㉛ AT control module |
| ⑬ Rear left inlet solenoid valve | | |