

SERVICE BULLETIN

APPLICABILITY ALL LEGACY MODELS WITH CD PLAYERS

DATE

10/18/96

SUBJECT Panasonic single CD player models P511/P512 operating characteristics

When a CD is inserted in the player, the player disables the radio in the vehicle. When the CD is ejected, the player signals the radio to resume its function. The radio must be "on" to acknowledge the receipt of this signal. Therefore, if when you're finished listening to a CD, you turn off the radio before ejecting the CD, the radio will not function when turned back on again.

Please advise your customers of this by providing them with the notice below.

AUDIO NOTICE

COMPACT DISCS SHOULD ONLY BE EJECTED WHILE THE RADIO IS IN THE "ON" POSITION

If the radio is turned "OFF" while a CD is playing and then the CD is ejected from the CD player, "the radio will not function".

<u>To restore radio operation</u> insert a CD into the CD player with the radio in the "ON" position, then eject the CD from the player.