



Illustrated index

■ Exterior

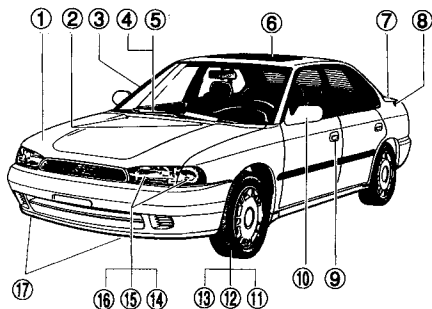


HB0001

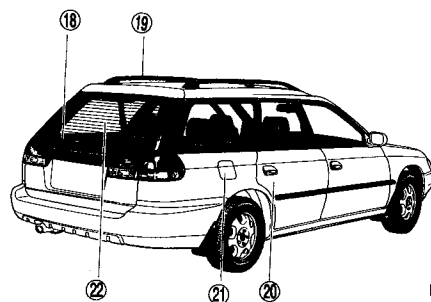

HB0002

- | | |
|--|--|
| ① Engine hood (page 1-22) | ⑬ Tire inflation pressure (page 10-41) |
| ② Windshield washer (page 3-19) | ⑭ Replacement of light bulbs (page 10-51) |
| ③ Antenna (page 5-2) | ⑮ Adjustment of headlight aim (page 10-48) |
| ④ Wiper switch (page 3-19) | ⑯ Light switch (page 3-12) |
| ⑤ Replacement of wiper blade (page 10-33) | ⑰ Towing eyelet (page 8-17) |
| ⑥ Sunroof (page 1-23) | ⑱ Rear window wiper and washer (page 3-20) |
| ⑦ Trunk (page 1-16) | ⑲ Roof rail (Page1-26) |
| ⑧ Antenna (page 5-2) | ⑳ Child safety lock (page 1-6) |
| ⑨ Locking and unlocking of door (page 1-3) | ㉑ Fuel filler lid (page 1-20) |
| ⑩ Outside mirror (page 3-24) | ㉒ Rear gate (page 1-19) |
| ⑪ Tire chain (page 7-41) | |
| ⑫ Replacement of tire (page 10-40) | |

■ Interior

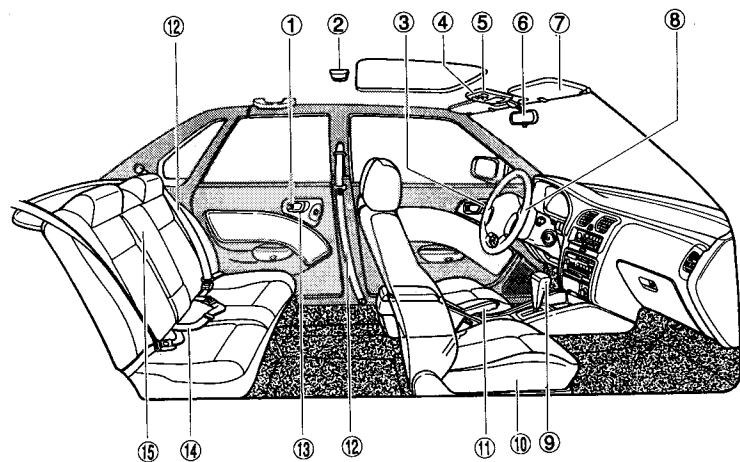


HB0003

- ① Lock lever (page 1-3)
- ② Interior light (page 6-10)
- ③ Power window switch (page 1-11)
- ④ Spot light (page 6-10)
- ⑤ Sunroof switch (page 1-24)
- ⑥ Inside mirror (page 3-23)
- ⑦ Sun visor (page 6-2)
- ⑧ Tilt steering wheel (page 7-25)
- ⑨ Selector lever/Gearshift lever (page 7-18/7-15)
- ⑩ Front seat (page 2-2)
- ⑪ Parking brake lever (page 7-31)
- ⑫ 3-point type seat belt (combination lap/shoulder belts) (page 2-11)
- ⑬ Inside door handle (page 1-5)
- ⑭ 2-point type seat belt (lap only belt) (page 2-16)
- ⑮ Rear seat (page 2-6)


– CONTINUED –

■ Luggage compartment

Sedan

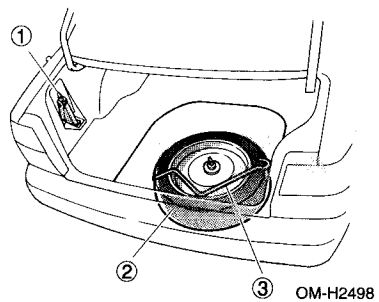


Wagon

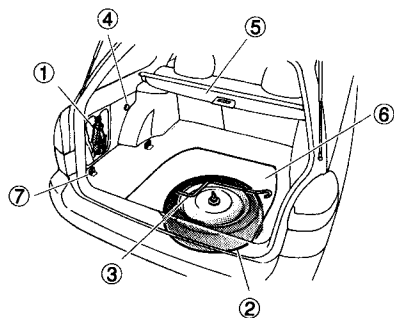

HB0005

- ① Jack (page 8-13)
- ② Spare tire (page 8-12)
- ③ Jack handle (page 8-13)
- ④ Accessory socket (page 6-6)
- ⑤ Luggage cover (page 6-12)
- ⑥ Storage tray (page 6-14)
- ⑦ Cargo anchorage eyelets (page 6-13)


■ Instrument panel

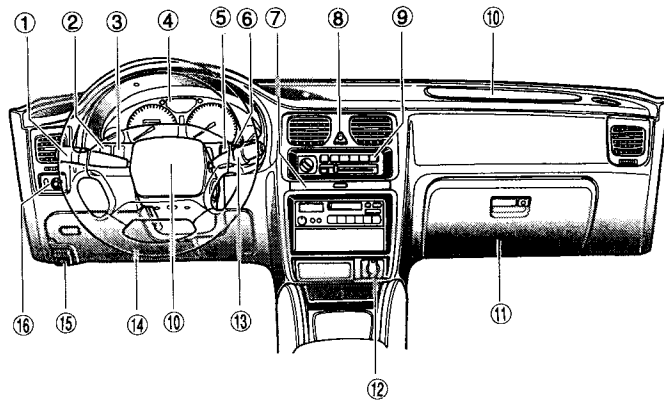

HB0006

- | | |
|--|--|
| ① Lighting, turn signal and illumination brightness control switch (page 3-12) | ⑧ Hazard warning flasher (page 3-12) |
| ② Security system indicator light (Page 1-8) or TCS OFF switch (page 7-37) (TCS OFF indicator light [Page 7-37]) | ⑨ Heater or air conditioner control (page 4-3) |
| ③ Fog light switch (page 3-16) | ⑩ SRS AIRBAG (page 2-28) |
| ④ Combination meter (page 3-4) | ⑪ Glove compartment (page 6-3) |
| ⑤ Rear window defogger switch (page 3-22) | ⑫ Accessory socket (page 6-7) |
| ⑥ Cruise control main switch (page 7-26) | ⑬ Windshield wiper and washer switch (page 3-19) |
| ⑦ Cup holder (page 6-5) | ⑭ Steering (page 7-25) |
| | ⑮ Hood lock release (page 1-22) |
| | ⑯ Remote control mirror switch (page 3-24) |


— CONTINUED —

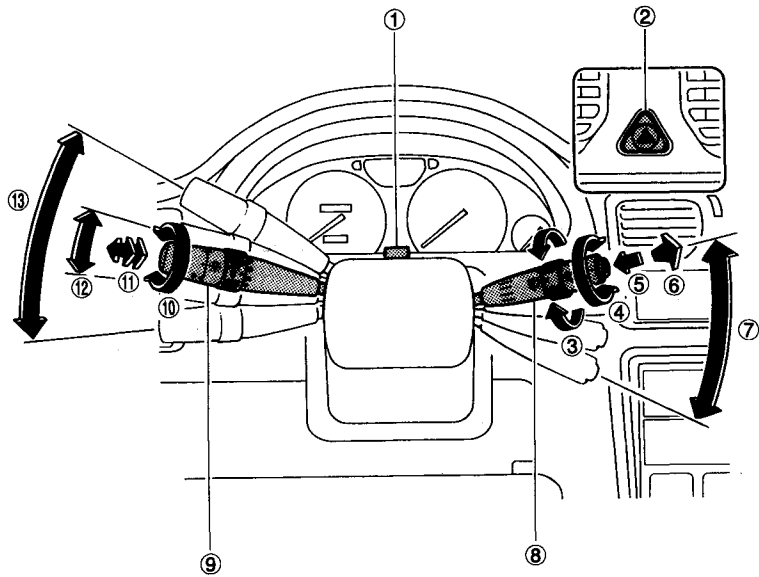

OM-H2500

- | | |
|--|---|
| ① Parking light switch
(page 3-16) | ⑦ Windshield wiper (page 3-19) |
| ② Hazard warning flasher switch
(page 3-12) | ⑧ Wiper control (page 3-17) |
| ③ Wiper intermittent time control
(page 3-19) | ⑨ Light control (page 3-12) |
| ④ Rear window wiper and
washer switch (page 3-20) | ⑩ Headlight ON/OFF
(page 3-13) |
| ⑤ Windshield washer
(page 3-20) | ⑪ Headlight flasher/High/Low
beam change (page 3-13) |
| ⑥ Mist (page 3-20) | ⑫ Turn signal (for lane change)
(page 3-14) |
| | ⑬ Turn signal (page 3-14) |


■ Instrument panel (Right hand drive vehicles)

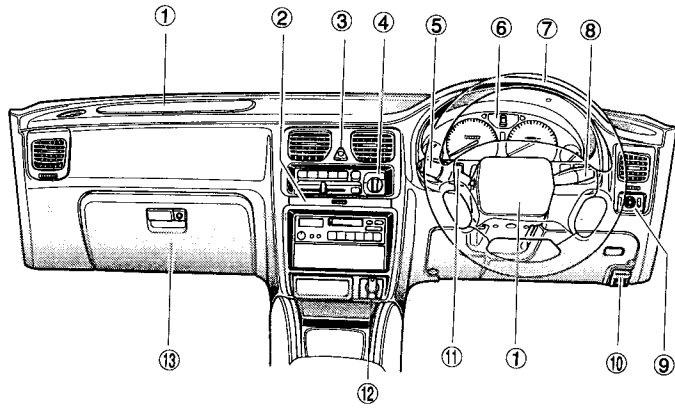

HB0066

- ① SRS AIRBAG (page 2-28)
- ② Cup holder (page 6-5)
- ③ Hazard warning flasher (page 3-12)
- ④ Heater or air conditioner control (page 4-16)
- ⑤ Lighting, turn signal and illumination brightness control switch (page 3-12)
- ⑥ Combination meter (page 3-4)
- ⑦ Steering (page 7-25)
- ⑧ Windshield wiper and washer switch (page 3-19)
- ⑨ Remote control mirror switch (page 3-24)
- ⑩ Hood lock release (page 1-22)
- ⑪ Rear window defogger switch (page 3-22)
- ⑫ Accessory socket (page 6-7)
- ⑬ Glove compartment (page 6-3)


– CONTINUED –

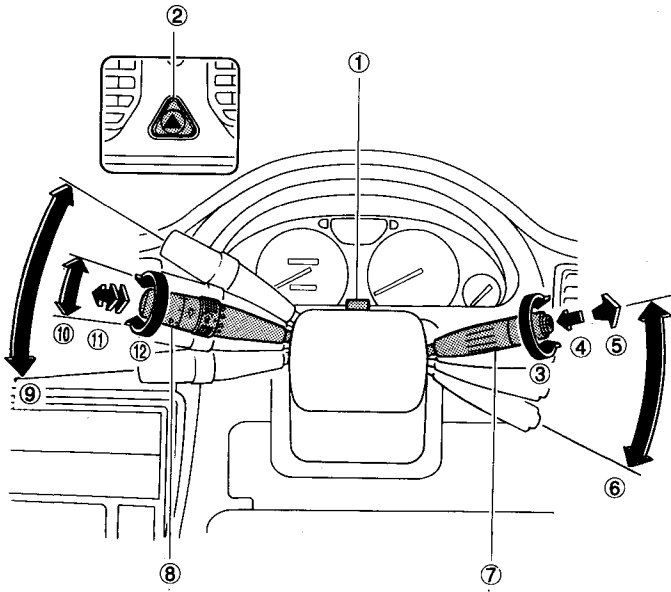


OM-H2502

- | | |
|--|---|
| ① Parking light switch
(page 3-16) | ⑦ Wiper control (page 3-17) |
| ② Hazard warning flasher
switch (page 3-12) | ⑧ Light control (page 3-12) |
| ③ Rear window wiper and
washer switch (page 3-20) | ⑨ Turn signal (page 3-14) |
| ④ Windshield washer
(page 3-20) | ⑩ Turn signal (for lane change)
(page 3-14) |
| ⑤ Mist (page 3-20) | ⑪ Headlight flasher/
High/Low beam change
(page 3-13) |
| ⑥ Windshield wiper (page 3-19) | ⑫ Headlight ON/OFF
(page 3-13) |

■ Combination meter

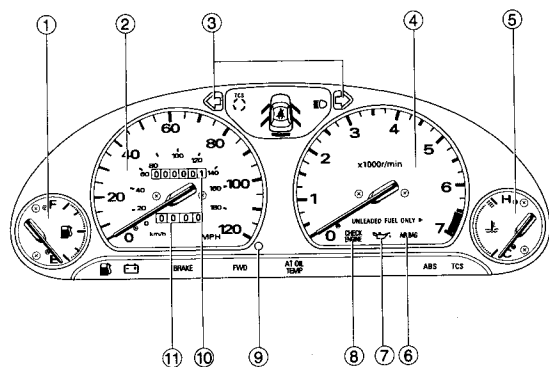

HB0007

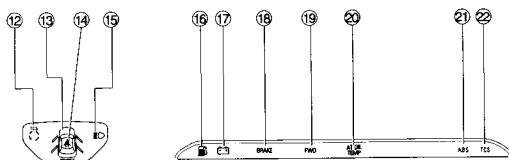

HB0008

- | | |
|--|---|
| ① Fuel gauge (page 3-6) | ⑬ Door open warning lights
(page 3-11) |
| ② Speedometer (page 3-5) | ⑭ Seatbelt warning light
(page 3-7) |
| ③ Turn signal indicator light
(page 3-11) | ⑮ High beam indicator light
(page 3-11) |
| ④ Tachometer (page 3-5) | ⑯ Low fuel warning light
(page 3-11) |
| ⑤ Temperature gauge (page 3-6) | ⑰ Charge warning light (page 3-8) |
| ⑥ SRS AIRBAG warning light
(page 3-7) | ⑱ Brake system warning light
(page 3-8) |
| ⑦ Oil pressure warning light
(page 3-8) | ⑲ Front-wheel drive warning light
(page 3-11) |
| ⑧ CHECK ENGINE warning light/
Malfunction indicator light
(page 3-9) | ⑳ AT oil temperature warning light
(page 3-11) |
| ⑨ Trip meter reset knob (page 3-5) | ㉑ ABS warning light (page 3-9) |
| ⑩ Odometer (page 3-5) | ㉒ TCS warning light (page 3-10) |
| ⑪ Trip meter (page 3-5) | |
| ⑫ TCS indicator light (page 3-10) | |