



Combination meter overview

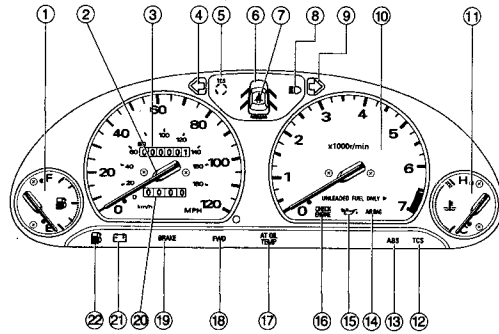

HB0022

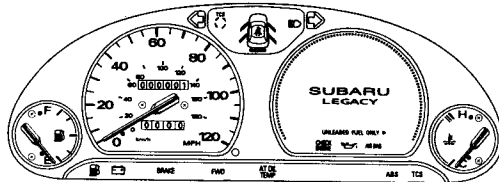

HB0070

- | | |
|---|---|
| ① Fuel gauge (page 3-6) | ⑬ ABS warning light (page 3-9) |
| ② Speedometer (page 3-5) | ⑭ SRS AIRBAG warning light (page 3-7) |
| ③ Odometer (page 3-5) | ⑮ Oil pressure warning light (page 3-8) |
| ④ Turn signal indicator light (page 3-11) | ⑯ CHECK ENGINE warning light/ Malfunction indicator lamp (page 3-9) |
| ⑤ TCS indicator light (page 3-10) | ⑰ AT oil temperature warning light (page 3-11) |
| ⑥ Door open warning light (page 3-11) | ⑱ Front-wheel drive warning light (page 3-11) |
| ⑦ Seatbelt warning light (page 3-7) | ⑲ Brake system warning light (page 3-8) |
| ⑧ High beam indicator light (page 3-11) | ⑳ Trip meter (page 3-5) |
| ⑨ Turn signal indicator light (page 3-11) | ㉑ Charge warning light (page 3-8) |
| ⑩ Tachometer (page 3-5) | ㉒ Low fuel warning light (page 3-11) |
| ⑪ Temperature gauge (page 3-6) | |
| ⑫ TCS warning light (page 3-10) | |