


## Fuses and circuits

### ■ Fuse panel located under the dashboard

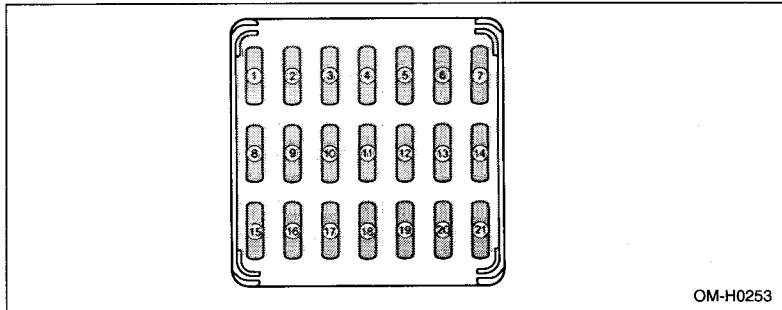


OM-H0253

Fuse panel	Fuse rating	Circuit
1	15A	<ul style="list-style-type: none"><li>● Back-up light</li><li>● Turn signal light</li></ul>
2	20A	<ul style="list-style-type: none"><li>● Windshield wiper and washer</li></ul>
3	20A	<ul style="list-style-type: none"><li>● Front accessory socket</li><li>● Remote controlled rear view mirrors</li></ul>
4	Empty	
5	10A	<ul style="list-style-type: none"><li>● Tail light (right side)</li></ul>
6	15A	<ul style="list-style-type: none"><li>● Front fog light</li></ul>
7	20A	<ul style="list-style-type: none"><li>● Rear window defogger</li></ul>
8	15A	<ul style="list-style-type: none"><li>● SRS AIRBAG</li></ul>
9	10A	<ul style="list-style-type: none"><li>● Illumination brightness control</li></ul>
10	Empty	

<b>Fuse panel</b>	<b>Fuse rating</b>	<b>Circuit</b>
11	20A	● Power door lock
12	20A	● Brake light ● Horn
13	20A	● Cooling fan
14	10A	● Automatic transmission control unit
15	10A	● Meter ● AIRBAG indicator light
16	15A	● Engine ignition system ● SRS AIRBAG
17	15A	● Radio
18	10A	● Cruise control ● ABS control
19	20A	● ABS solenoid
20	15A	● Heater fan
21	15A	● Heater fan

**- CONTINUED -**

■ Fuse panel behind the instrument panel lower cover

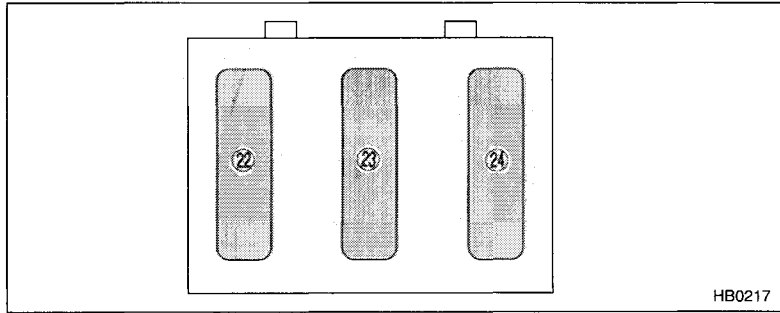


Fuse panel	Fuse rating	Circuit
22	15A* <sup>1</sup> or 20A* <sup>2</sup>	<ul style="list-style-type: none"><li>● Rear accessory socket</li><li>● Seat heater</li></ul>
23	Empty	
24	Empty	

\*<sup>1</sup>: For vehicle with either rear accessory socket (in luggage compartment) or seat heater

\*<sup>2</sup>: For vehicle with both seat heater and rear accessory socket.

■ Fuse panel located in the engine compartment

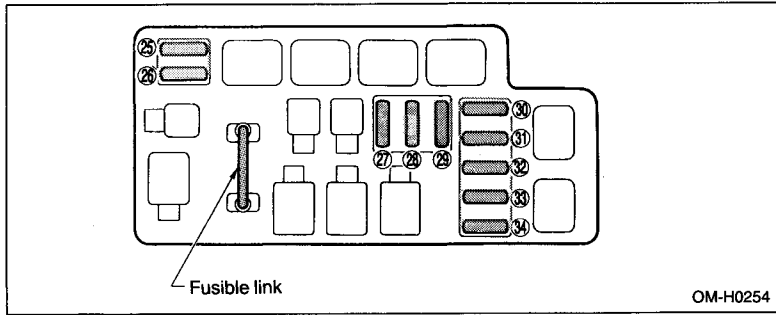

Fuse panel	Fuse rating	Circuit
25	20A	● Cooling fan
26	10A	● Air conditioner
27	Spare	(Not used)
28	Spare	(Not used)
29	Spare	(Not used)
30	15A	● Hazard warning flasher
31	20A	● Lighting switch
32	15A	● Headlight (left side)
33	15A	● Clock ● Interior light
34	15A	● Headlight (right side)