


4. Schematic

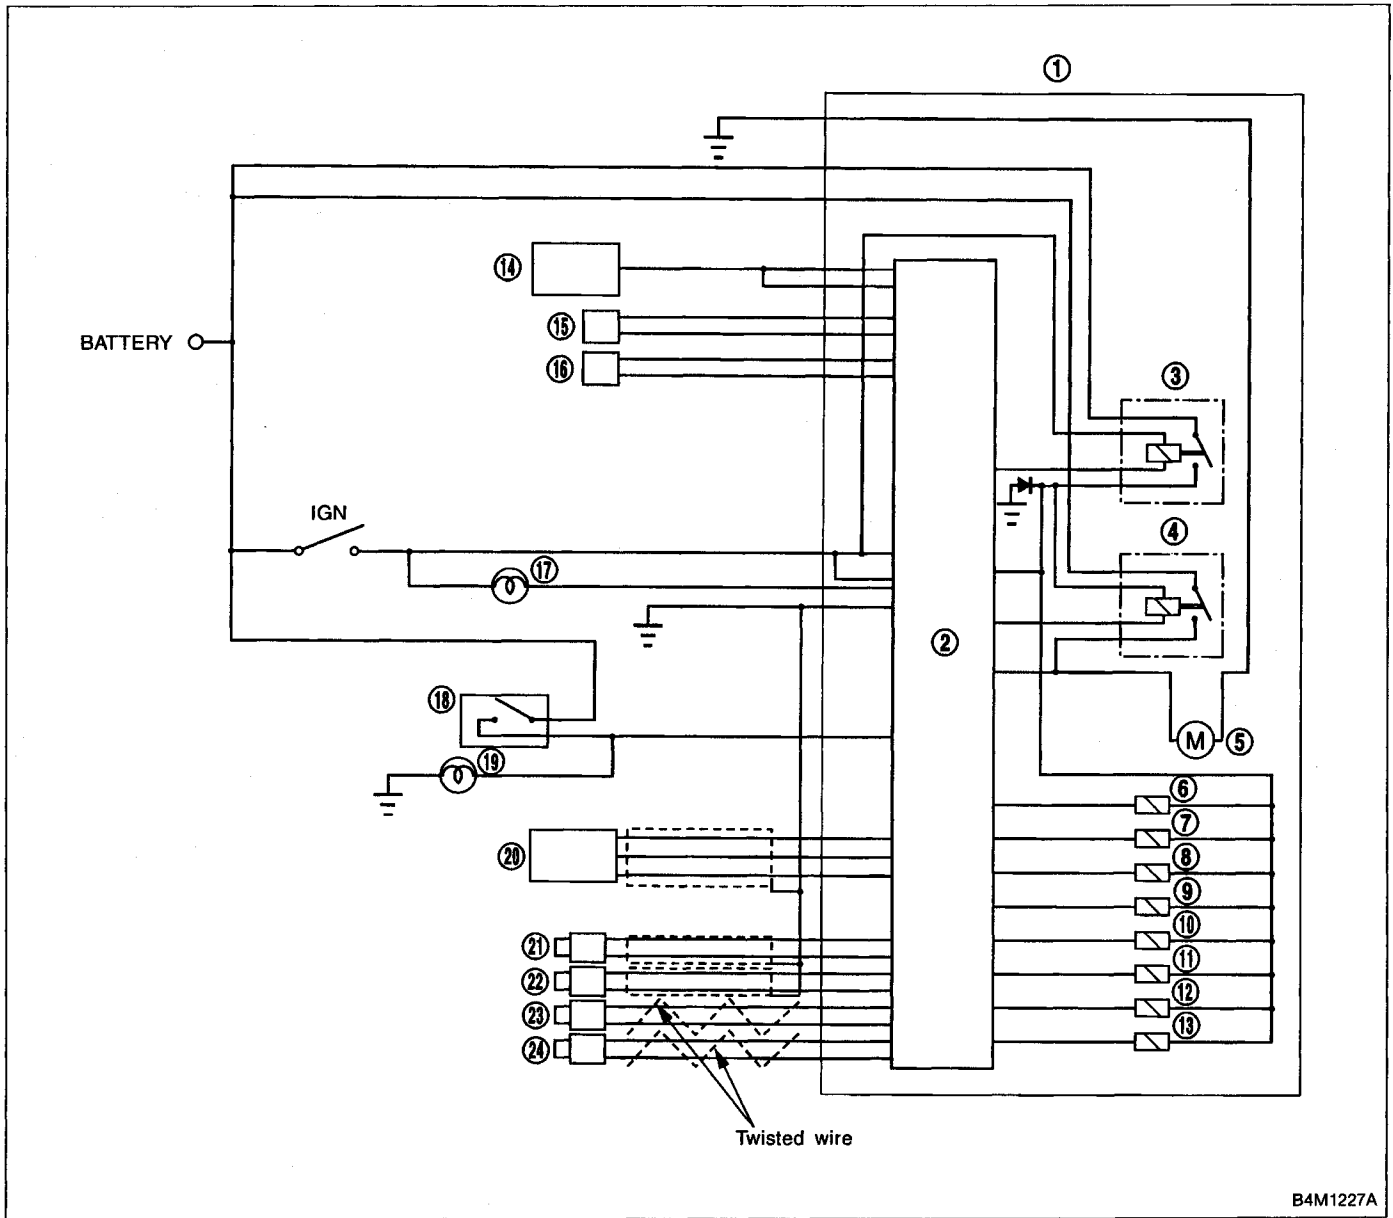

B4M1227A

- |   |   |
|---|---|
| ① ABS control module and hydraulic control unit (ABSCM&H/U) | ⑬ Rear right outlet solenoid valve            |
| ② ABS control module area                                   | ⑭ Transmission control module (only AT model) |
| ③ Valve relay   | ⑮ Diagnosis connector                         |
| ④ Motor relay   | ⑯ Data link connector                         |
| ⑤ Motor   | ⑰ ABS warning light                           |
| ⑥ Front left inlet solenoid valve                           | ⑱ Stop light switch                           |
| ⑦ Front left outlet solenoid valve                          | ⑲ Stop light                                  |
| ⑧ Front right inlet solenoid valve                          | ⑳ G sensor (only AWD model)                   |
| ⑨ Front right outlet solenoid valve                         | ㉑ Front left ABS sensor                       |
| ⑩ Rear left inlet solenoid valve                            | ㉒ Front right ABS sensor                      |
| ⑪ Rear left outlet solenoid valve                           | ㉓ Rear left ABS sensor                        |
| ⑫ Rear right inlet solenoid valve                           | ㉔ Rear right ABS sensor                       |