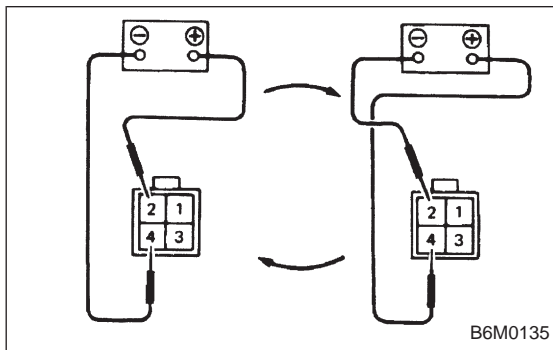
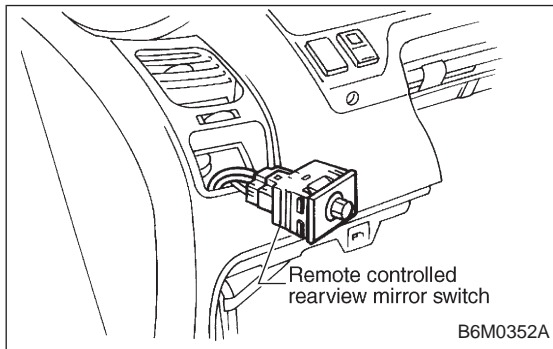
**B: INSPECTION****1. DOOR LOCK SWITCH (DRIVER'S AND FRONT PASSENGER'S DOOR)**

- 1) Remove door trim panel. <Ref. to 5-2 [W2A2].>
- 2) Set switch to each position and check continuity between terminals as indicated in table below:

Terminal Switch position	5	4	2
UNLOCK	○—	○—	
LOCK	○—		○—

**2. ACTUATOR**

- 1) Remove door trim panel. <Ref. to 5-2 [W2A2].>
- 2) Disconnect connector of actuator.
- 3) Make sure that door link moves to LOCK or UNLOCK position when battery voltage is applied between terminals as described below:
  - Connect battery positive (+) terminal to terminal No. 2, and negative (-) terminal to terminal No. 4 at a moment.
  - Connect battery positive (+) terminal to terminal No. 4, and negative terminal (-) to terminal No. 2 at a moment.


**18. Remote Controlled Rearview Mirror****A: REMOVAL AND INSTALLATION****1. REMOTE CONTROLLED REARVIEW MIRROR SWITCH**

- 1) Remove rearview mirror switch from instrument panel by using a small standard screwdriver.

**CAUTION:**


**Do not pry rearview mirror switch forcefully as this may scratch instrument panel.**

- 2) Remove rearview mirror switch while disconnecting connector.

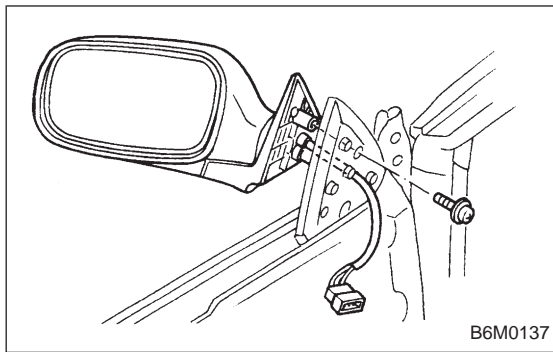

**2. REARVIEW MIRROR**

- 1) Remove door trim panel. <Ref. to 5-2 [W2A2].>
- 2) Disconnect connector of rearview mirror.
- 3) Remove screws which secure rearview mirror, and then remove rearview mirror.

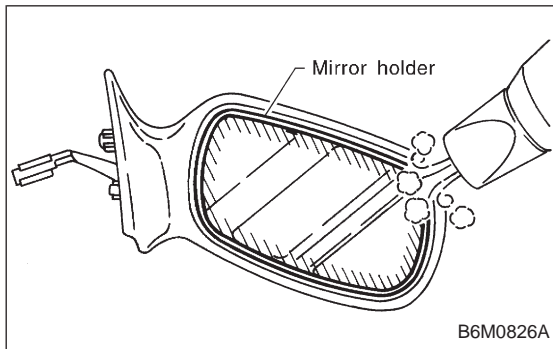


**3. MIRROR PLATE**

- 1) Remove rearview mirror. <Ref. to 6-2 [W18A2].>
- 2) Warm around the mirror holder by hair dryer.

**CAUTION:**

The mirror holder will become extremely hot. Avoid carelessly touching it.

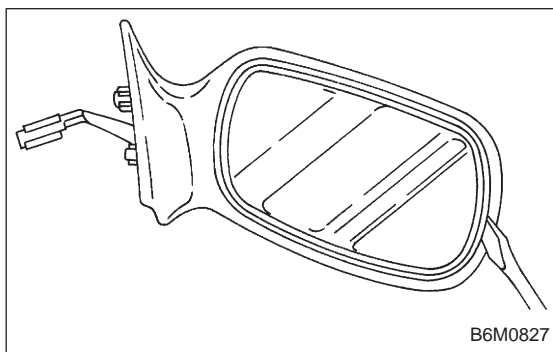


- 3) Remove mirror plate while lifting the mirror holder using a flat bladed screwdriver.

**NOTE:**

When removing mirror plate in vehicles with mirror heater, disconnect mirror connector which is on the back side.

- 4) Installation is in the reverse order of removal.

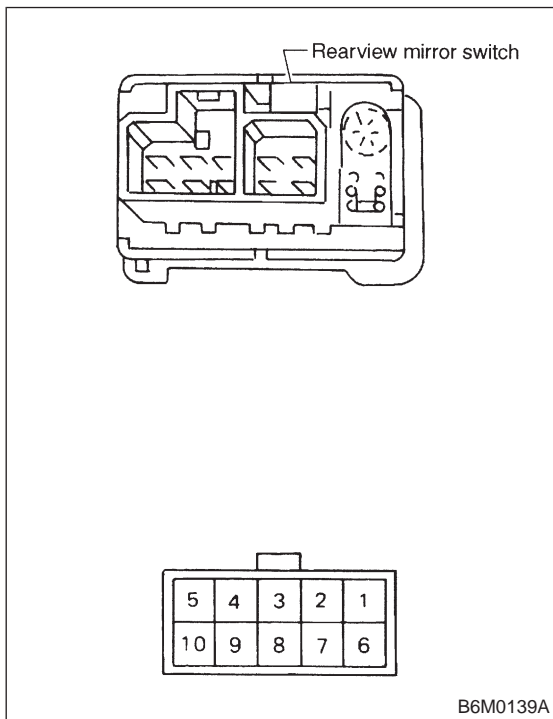


**B: INSPECTION**

**1. REARVIEW MIRROR SWITCH**

Move rearview mirror switch to each position and check continuity between terminals as indicated in table below:

Terminal	Mirror switch					Left/Right changing switch		
	OFF	Right	Left	Up	Down	Left	N	Right
7						○		
9							○	
6								○
8								○
2		○	○	○	○			
1		○	○	○	○	○		○
4		○	○	○	○	○		○
3								

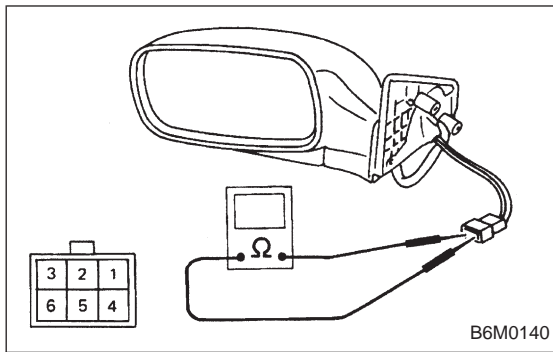

## 2. REARVIEW MIRROR

Check to ensure that rearview mirror moves properly when battery voltage is applied to terminals as indicated in table below:

Operation	Terminal connection	
	(+)	(-)
UP	3	1
DOWN	1	3
RIGHT	1	2
LEFT	2	1