

**1. Starter**

Trouble		Probable cause
Starter does not start.	Magnet switch does not operate. (no clicks are heard.)	Magnet switch poor contact or discontinuity of pull-in coil circuit
		Improper sliding of magnet switch plunger
	Magnet switch operates. (clicks are issued.)	Poor contact of magnet switch's main contact point
		Layer short of armature
		Contaminants on armature commutator
		High armature mica
		Improper grounding of yoke field coil
		Insufficient carbon brush length
	Insufficient brush spring pressure	
Starter starts but does not crank engine.	Failure of pinion gear to engage ring gear	Worn pinion teeth
		Improper sliding of overrunning clutch
		Improper adjustment of stud bolt
	Clutch slippage	Faulty clutch roller spring
Starter starts but engine cranks too slowly.		Poor contact of magnet switch's main contact point
		Layer short of armature
		Discontinuity, burning or wear of armature commutator
		Poor grounding of yoke field coil
		Insufficient brush length
		Insufficient brush spring pressure
	Abnormal brush wear	
Starter overruns.		Magnet switch coil is a layer short.