

11) On AWD model, after removing fuel sub meter unit, drain fuel from there.


**WARNING:**

**Do not use a motor pump when draining fuel.**


## 2. On-Car Services

### A: MEASUREMENT OF FUEL PRESSURE

- 1) Release fuel pressure. <Ref. to 2-8 [W1A0].>
- 2) Connect connector to fuel pump.

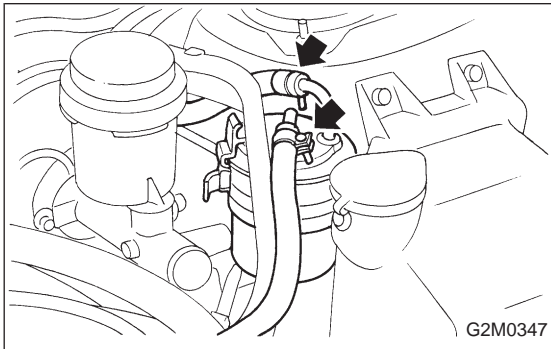

3) Disconnect fuel delivery hoses from fuel filter, and connect fuel pressure gauge.

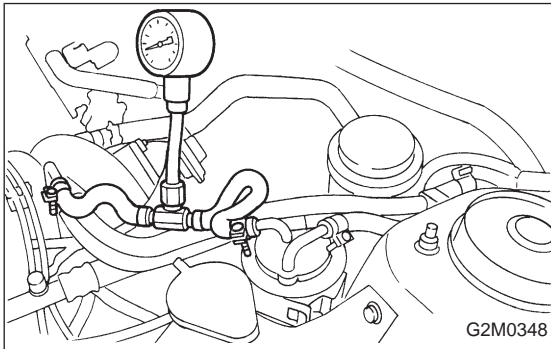

- 4) Start the engine.
- 5) Measure fuel pressure while disconnecting pressure regulator vacuum hose from collector chamber.

**Fuel pressure:**

**235 — 265 kPa (2.4 — 2.7 kg/cm<sup>2</sup>, 34 — 38 psi)**

6) After connecting pressure regulator vacuum hose, measure fuel pressure.

**Fuel pressure:**

**177 — 206 kPa (1.8 — 2.1 kg/cm<sup>2</sup>, 26 — 30 psi)**

**WARNING:**

**Before removing fuel pressure gauge, release fuel pressure.**

**NOTE:**

If out of specification as measured at step 6), check or replace pressure regulator and pressure regulator vacuum hose.