


## 15. Condenser Fan Assembly

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Disconnect harness connector from fan motor.
- 3) Remove condenser fan bolt from radiator.
- 4) Pull condenser fan assembly.
- 5) Install the condenser fan assembly in the reverse order of removal.

#### **Tightening torque:**

**T:  $7.4 \pm 2.0$  N·m ( $0.75 \pm 0.2$  kg·m,  $5.4 \pm 1.4$  ft·lb)**

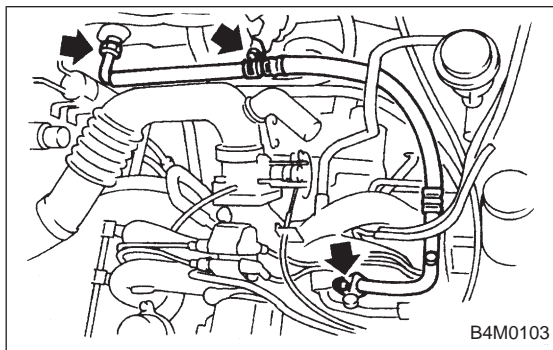

## 16. Flexible Hose

### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Discharge refrigerant using refrigerant recovery system. <Ref. to 4-7 [W601].>
- 3) Remove low-pressure hose.
  - (1) Remove hose attaching bolts.

#### **CAUTION:**

**Plug the opening to prevent foreign matter from getting in.**

- (2) Disconnect the connector at evaporator module.

- 4) Remove high-pressure hose.

- (1) Disconnect hose attaching bolt (compressor side).
- (2) Disconnect hose attaching bolt (condenser side).

#### **CAUTION:**

**Plug the opening to prevent foreign matter from getting in.**

- 5) Installation is in the reverse order of removal.
- 6) Charge refrigerant. <Ref. to 4-7 [W708].>

