

1. Supplemental Restraint System "Airbag"

Airbag system wiring harness is routed near the instrument panel, heater unit, blower motor and control unit.

CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the instrument panel, heater unit, blower motor and control unit.

2. Heater Unit

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove heater hoses (inlet, outlet) in engine compartment.

NOTE:

Drain as much coolant from heater unit as possible, and plug disconnected hose with cloth.

<Ref. to 2-5 [W1A0].>

- 3) Remove instrument panel.


<Ref. to 5-4 [W1A0].>

- 4) Remove steering support beam.

<Ref. to 5-1 [C700].>

- 5) Remove evaporator. (With A/C model)

<Ref. to 4-7 [W14A0].>

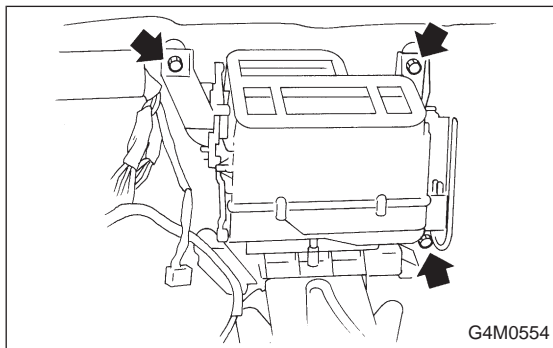



- 6) Remove heater unit.

7) Installation is in the reverse order of removal.

Fitted length of heater hose over pipe:

25 — 30 mm (0.98 — 1.18 in)

8) Pour coolant. <Ref. to 2-5 [W1B0].>

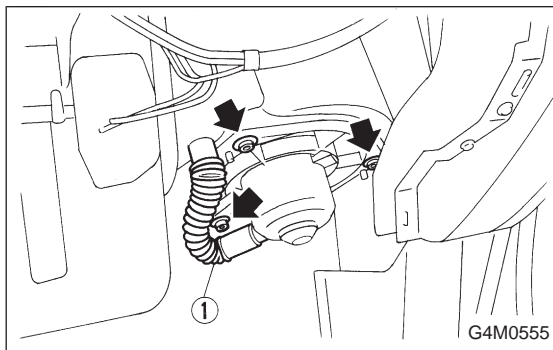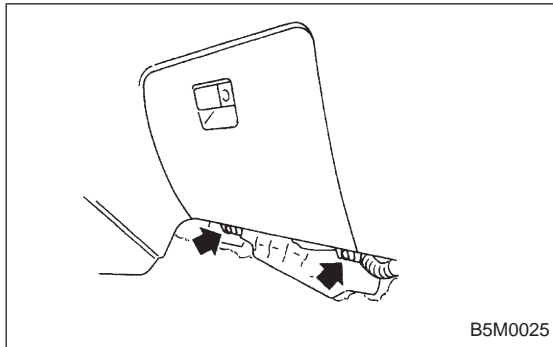

3. Blower Motor Assembly

A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box and pocket back panel. <Ref. to 5-4 [W1A0].>
- 3) Disconnect blower motor harness connector.
- 4) Disconnect aspirator pipe ①.
- 5) Remove blower motor mounting screw.
- 6) Remove blower motor assembly.
- 7) Installation is in the reverse order of removal.