
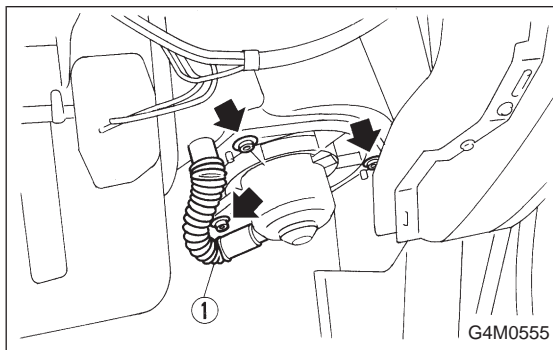


7) Installation is in the reverse order of removal.

***Fitted length of heater hose over pipe:***

***25 — 30 mm (0.98 — 1.18 in)***

8) Pour coolant. <Ref. to 2-5 [W1B0].>

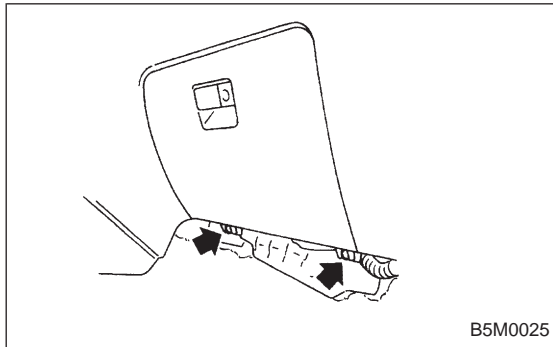

### 3. Blower Motor Assembly

#### A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box and pocket back panel. <Ref. to 5-4 [W1A0].>
- 3) Disconnect blower motor harness connector.
- 4) Disconnect aspirator pipe ①.
- 5) Remove blower motor mounting screw.
- 6) Remove blower motor assembly.
- 7) Installation is in the reverse order of removal.