

24. Seat Heater


A: REMOVAL AND INSTALLATION

1. SEAT HEATER

Remove and install front seat (including heater system). <Ref. to 5-3 [W1A0].>

2. SEAT HEATER SWITCH

- 1) Remove screws which secure rear console cover, and then remove rear console cover.
- 2) Remove seat heater switch from console cover.

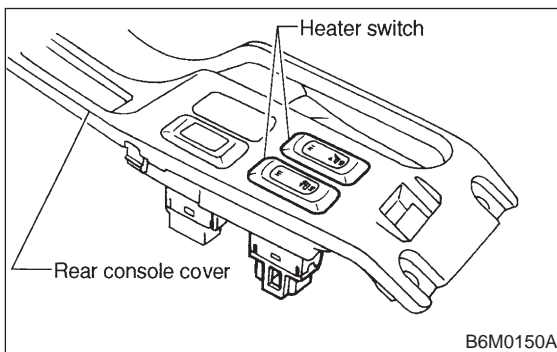


- 3) Installation is in the reverse order of removal.

B: INSPECTION

1. SEAT HEATER

Check continuity between terminals of seat heater connector:

- Between terminals No. 1 and No. 3
- Between terminals No. 1 and No. 4
- Between terminals No. 3 and No. 4

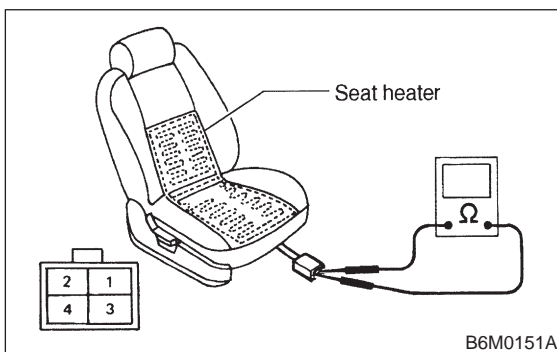

2. SEAT HEATER SWITCH

Set switch to each position and check continuity between terminals.

Terminal Switch	5	6	2		3	4	1
OFF				○ ⊕	○	○ ⊕	○
LO	○	○		○ ⊕	○	○ ⊕	○
HI	○		○	○ ⊕	○	○ ⊕	○