


## 13. Pressure Sources Switching Solenoid Valve (AT model)

### A: REMOVAL AND INSTALLATION

- 1) Disconnect connector from pressure sources switching solenoid valve.
- 2) Disconnect hoses from pressure sources switching solenoid valve.
- 3) Remove pressure sources switching solenoid valve from bracket.
- 4) Installation is in the reverse order of removal.

#### Tightening torque:


**$6.4 \pm 0.5 \text{ N}\cdot\text{m}$  ( $0.65 \pm 0.05 \text{ kg}\cdot\text{m}$ ,  $4.7 \pm 0.4 \text{ ft}\cdot\text{lb}$ )**

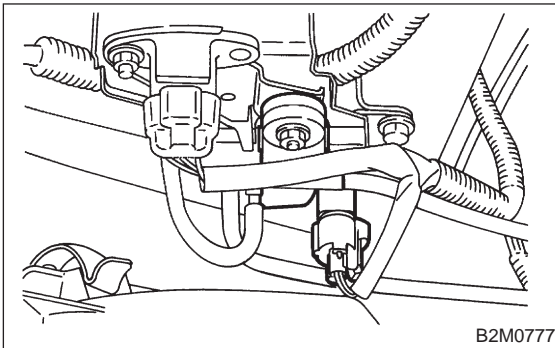


## 14. Fuel Injector

### A: REMOVAL AND INSTALLATION

- 1) Release fuel pressure.  
<Ref. to 2-8 [W1B0].>
- 2) Disconnect connector from fuel injector.

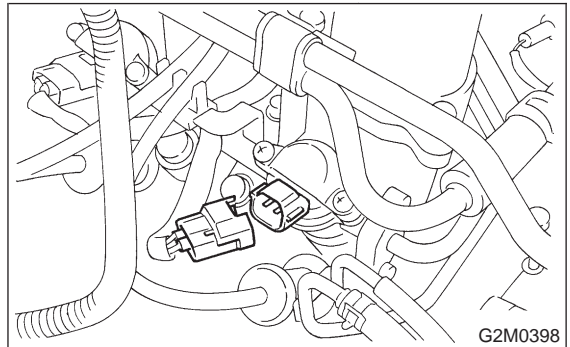

- 3) Remove fuel injector from fuel pipe assembly.

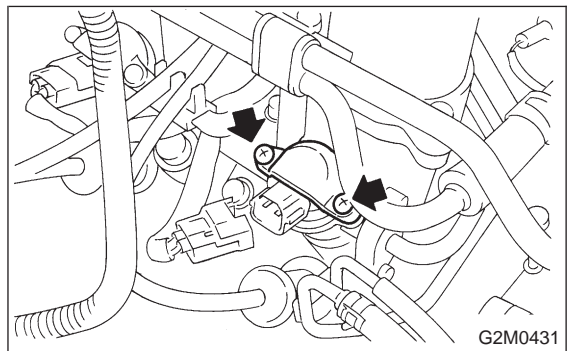


- 4) Installation is in the reverse order of removal.

#### CAUTION:

Replace O-rings and insulator.

#### Tightening torque:

**$T: 3.4 \pm 0.5 \text{ N}\cdot\text{m}$  ( $0.35 \pm 0.05 \text{ kg}\cdot\text{m}$ ,  $2.5 \pm 0.4 \text{ ft}\cdot\text{lb}$ )**

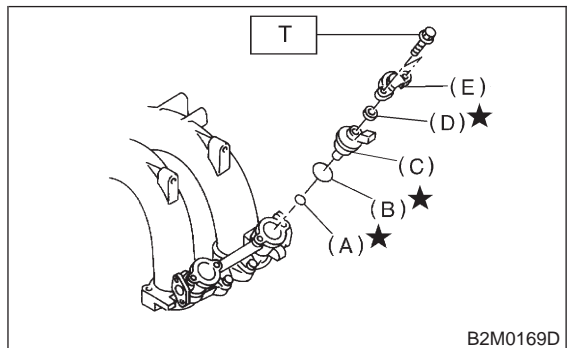

- (A) O-ring B
- (B) O-ring A
- (C) Fuel injector
- (D) Insulator
- (E) Fuel injector cup