

## 1. Supplemental Restraint System “Airbag”

### CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuit.
- Be careful not to damage Airbag system wiring harness when servicing the instrument panel, heater unit, blower motor and control unit.

Airbag system wiring harness is routed near the instrument panel, heater unit, blower motor and control unit.

## 2. Heater Unit


### A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove heater hoses (inlet, outlet) in engine compartment.

### NOTE:

Drain as much coolant from heater unit as possible, and plug disconnected hose with cloth. <Ref. to 2-5 [W1A0].>

- 3) Remove instrument panel. <Ref. to 5-4 [W1A0].>
- 4) Remove steering support beam. <Ref. to 5-1 [C600].>
- 5) Remove evaporator. (With A/C model) <Ref. to 4-7 [W14A0].>
- 6) Remove heater unit.

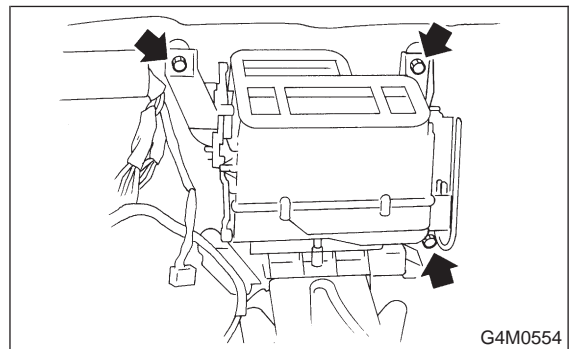

- 7) Installation is in the reverse order of removal.

**Fitted length of heater hose over pipe:**

**25 — 30 mm (0.98 — 1.18 in)**

- 8) Pour coolant. <Ref. to 2-5 [W1B0].>