



### 3. Blower Motor Assembly

#### A: REMOVAL AND INSTALLATION

- 1) Disconnect GND cable from battery.
- 2) Remove glove box and pocket back panel.  
<Ref. to 5-4 [W1A0].>
- 3) Disconnect blower motor harness connector.

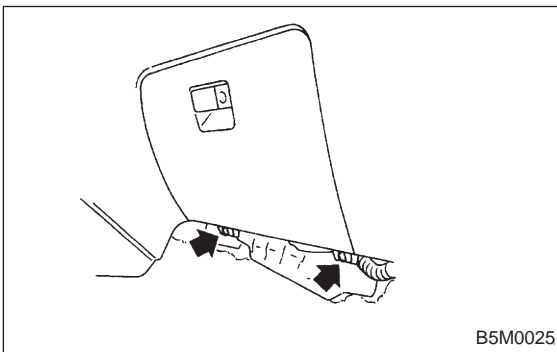

- 4) Disconnect aspirator pipe (A).
- 5) Remove blower motor mounting screw.

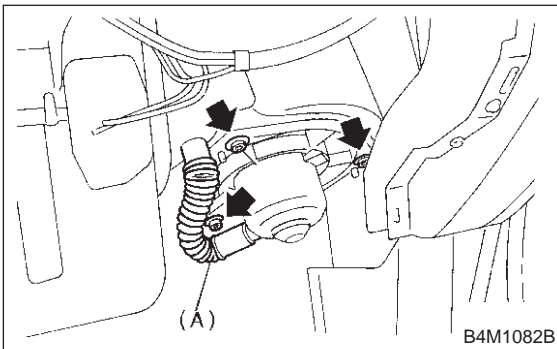

- 6) Remove blower motor assembly.
- 7) Installation is in the reverse order of removal.


### 4. Control Unit

#### A: REMOVAL AND INSTALLATION


- 1) Disconnect GND cable from battery.
- 2) Set temperature control lever to "FULL COLD" position.
- 3) Remove temperature control cable from heater unit.

**NOTE:**


Do not attempt to move link of heater unit during installation.

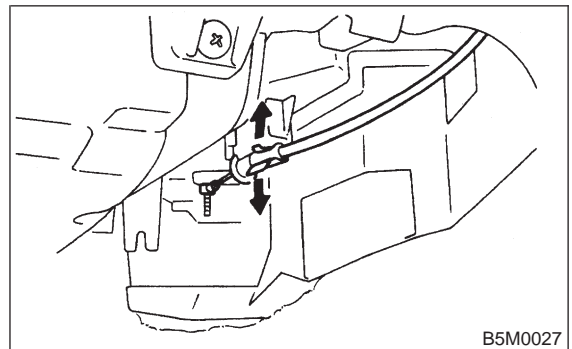

- 4) Remove cup holder.
- 5) Remove center panel and then disconnect connector.

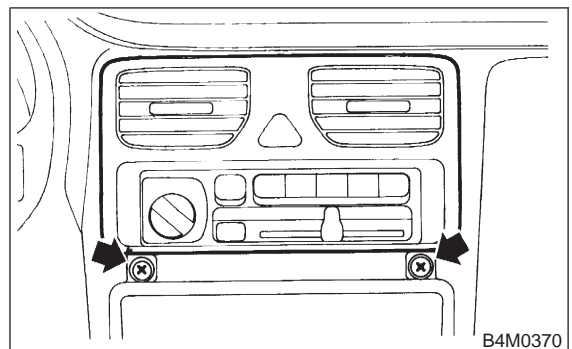

- 6) Remove control unit assembly and disconnect connector.

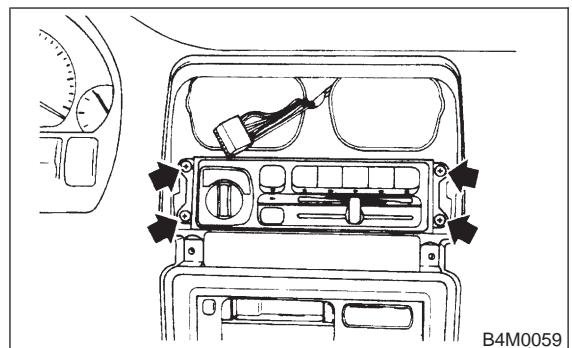

- 7) Installation is in the reverse order of removal.

**NOTE:**

Before control unit installation, set temperature control lever to "FULL COLD" position.