


- assembly, and tighten self-locking nut.
- 9) Connect stabilizer link to lateral link.
 - 10) Install crossmember reinforcement lower to crossmember (4 door model only).
 - 11) Install ABS sensor clamps and parking brake cable bracket.

7. Full Wheel Cap

A: REMOVAL

Pry off the full wheel cap with a wheel cap remover inserted between openings in the cap.

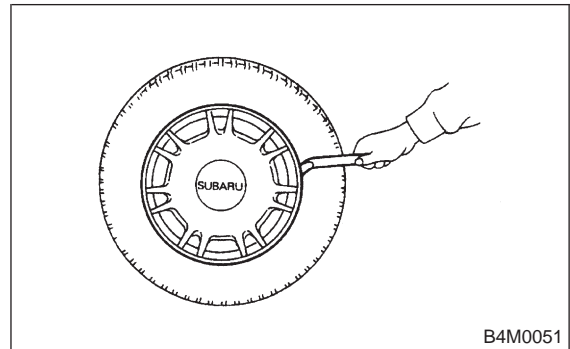

B: INSTALLATION

Align the valve hole in the wheel cap with the valve on the wheel and secure the wheel cap by tapping four points by hand.