


16. Trunk Lid

A: REMOVAL AND INSTALLATION

1. TRUNK LID

- 1) Open trunk lid.
- 2) Disconnect trunk lid harness connector.
- 3) Remove trunk lid mounting bolts and detach trunk lid from hinges.

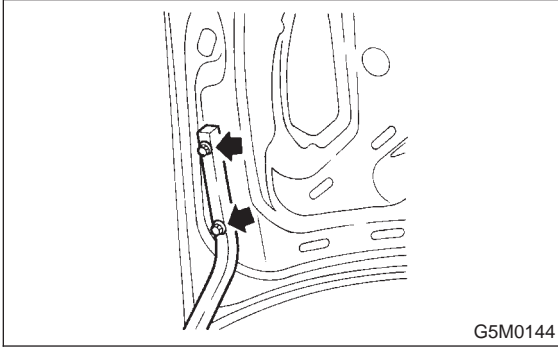


- 4) Installation is in the reverse order of removal.

2. TORSION BAR

- 1) Open trunk lid. Remove torsion bars from hinge links using ST.
- ST 927780000 REMOVER

CAUTION:

Be careful because torsion bar quickly swings back when released.

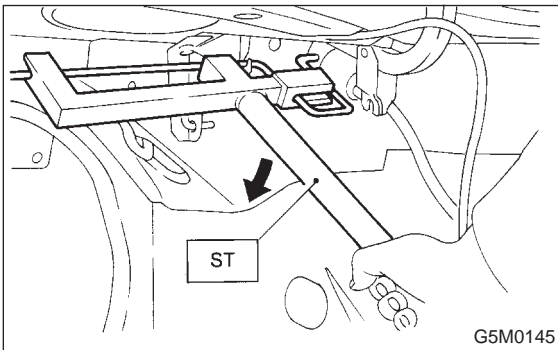

- 2) Remove the left and right torsion bars.

WARNING:

Be careful because trunk lid drops under its own weight when torsion bars are removed.


- 3) Installation is in the reverse order of removal.

NOTE:

Apply a coat of grease to the rotary section of hinges and contact surfaces of torsion bars.

3. TRUNK LID LOCK ASSEMBLY

- 1) Remove rod of lock assembly from rod holder of key lock assembly.
- 2) Remove lock assembly cover (A).
- 3) Remove nuts which hold lock assembly and remove lock assembly (B).

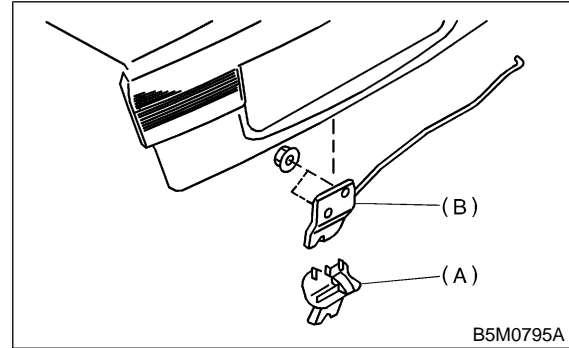


- 4) Installation is in the reverse order of removal.

NOTE:

Apply grease to sliding surfaces of lock assembly and striker.

4. TRUNK LID OPENER

- 1) Remove rear seats, center pillar lower cover, floor mat, rear arch cover and side sill cover (on the driver's side).
- 2) Remove all clips which hold cable.
- 3) Disconnect cable from pull handle assembly.
- 4) Remove bolts and detach pull handle assembly.
- 5) Loosen bolts which hold lock assembly, and remove it.
- 6) Remove striker from trunk lid.

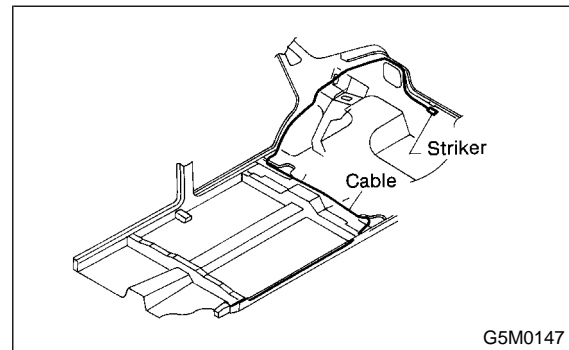

- 7) Disconnect cable from striker.

NOTE:

Be careful not to bend or break cable.

- 8) Installation is in the reverse order of removal.

CAUTION:

● When installing cover to pull handle assembly, observe the following:

- Be careful not to catch harness.
- Engage pull handle assembly pawls firmly.