


## 19. Rear Spoiler

### A: REMOVAL AND INSTALLATION

- 1) Open trunk lid.
- 2) Disconnect high-mounted stop light connector (a).
- 3) Remove rear spoiler mounting nuts and then detach rear spoiler.

**CAUTION:**

When removing nuts, be careful not to drop them inside trunk lid.

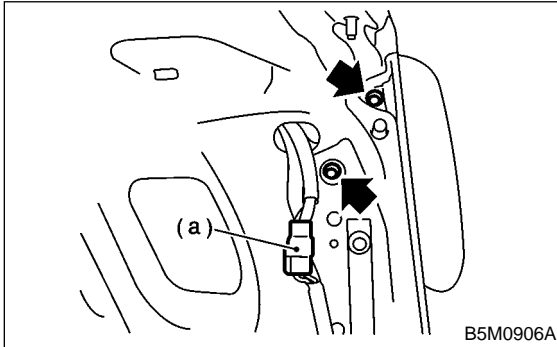

- 4) Installation is in the reverse order of removal.

**Tightening torque:**

**$7.4 \pm 2.0$  N·m ( $0.75 \pm 0.2$  kg·m,  $5.4 \pm 1.4$  ft·lb)**