


1. Front Seat

A: REMOVAL


CAUTION:

- Be careful not to scratch seat when removing it from vehicle.
- After the front seat has been removed from side airbag equipped vehicle, store it as instructed in section 5-5 AIRBAG REPAIR SECTION. <Ref. to 5-5 [W3A0].>


- 1) Disconnect ground cable from battery.
- 2) While operating button (located on top of backrest), lift headrest out with hand placed between backrest and headrest.

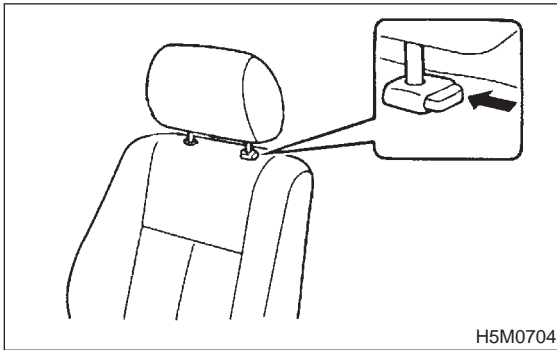

- 3) Pull reclining lever back to fold backrest all the way forward. Move seat all the way forward.
- 4) Disconnect connector under the seat.
- 5) Disconnect side airbag connector. (Side airbag equipped vehicle) <Ref. to 5-5 [M2F2].>
- 6) Remove bolt cover at rear end of slide rail.
- 7) Remove bolts securing seat rear.

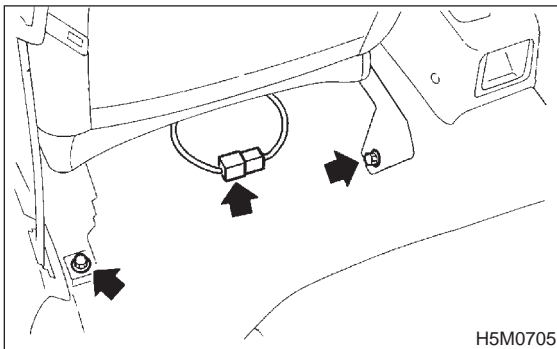


- 8) Slide seat all the way back.
- 9) Remove bolts securing front of seat.

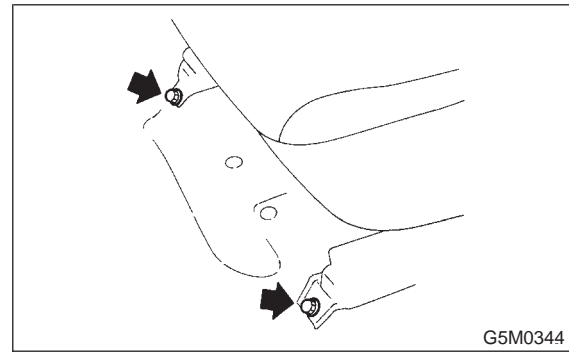

- 10) Remove front seat from vehicle, then install headrest.

B: INSTALLATION

- 1) While operating button (located on top of backrest), lift headrest out by placing your hand between backrest and headrest.

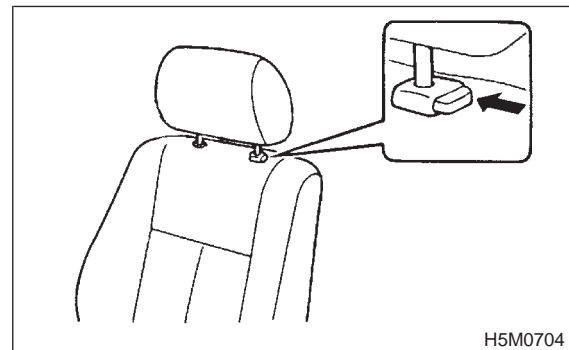

- 2) Pull reclining lever back to fold backrest all the way forward.
- 3) Position seat in compartment and align the holes on the seat with the holes on the vehicle body side.

NOTE:

Be sure to position seat so rear seat rails sit on their location bolt (A).

