


6. Rear Wiper and Washer


4) Reconnect battery and ensure that wiper motor stops at "AUTO STOP" after operating at low speed.

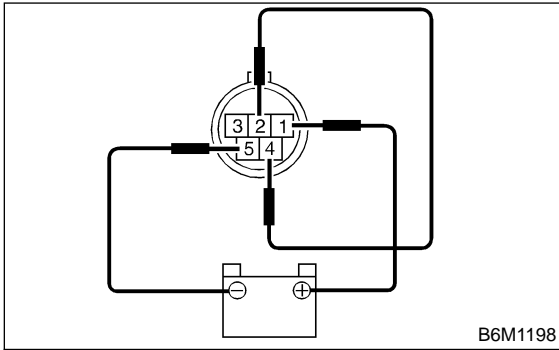

6. Rear Wiper and Washer

A: ADJUSTMENT

1) Adjust so that the blades meet the rear defogger heat wire (A).

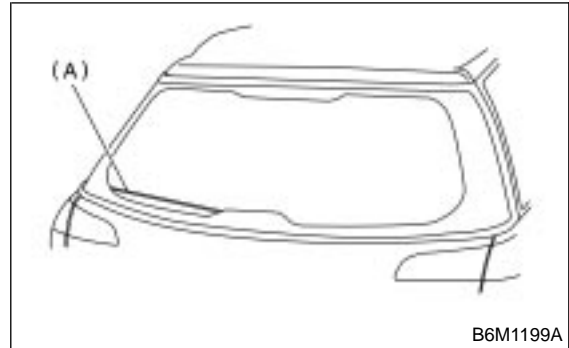


2) Adjust washer ejecting point on rear gate window as shown in figure when the vehicle stops.

Ejecting point:

A: 60 mm (2.36 in)


B: 42°

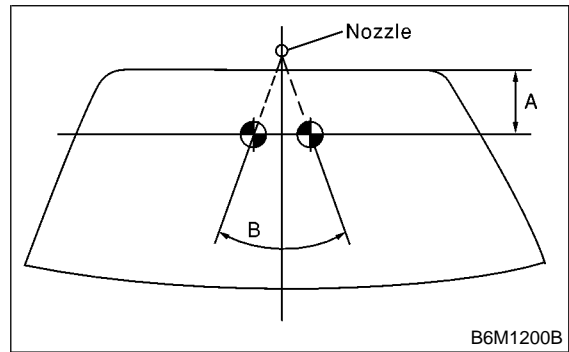

B: REMOVAL AND INSTALLATION

1. BLADE


1) Pull out blade following the arrow direction, from arm while pushing up locking clip.

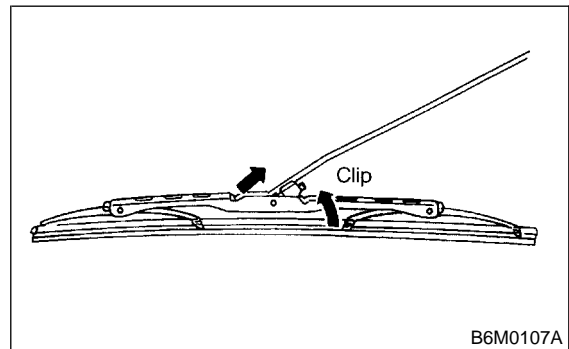

2) Installation is in the reverse order of removal.

2. WIPER ARM

- 1) Tilt up the head cover (A).
- 2) Remove nut and wiper arm.

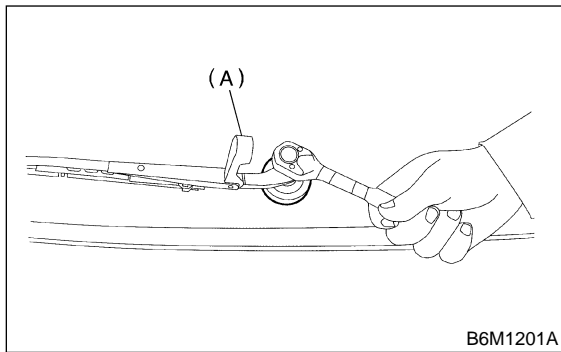

- 3) Installation is in the reverse order of removal.

NOTE:


Remove metal sludge from the wiper arm fixture before installing it.

Tightening torque:

$5.9 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $4.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)

3. WIPER MOTOR

- 1) Remove wiper arm. <Ref. to 6-2 [W6B2].>
- 2) Remove cap (A), nut (B) and spacer (C) from rear wiper shaft.

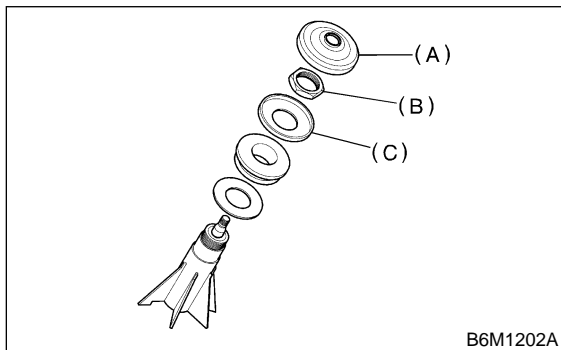


- 3) Remove rear gate trim.
- 4) Undo clips which secure harness, and disconnect connector of wiper motor.

- 5) Remove attaching screws and take out wiper motor assembly (A).

CAUTION:

Be careful not to damage O-ring when removing wiper motor assembly.

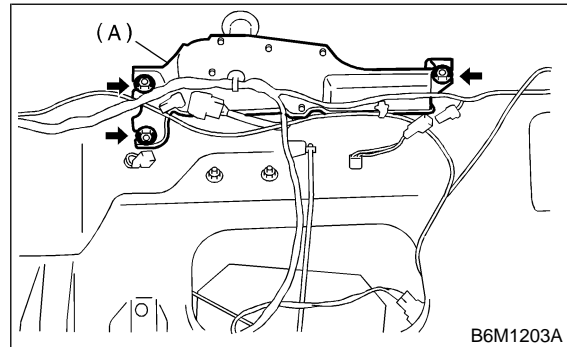

- 6) Installation is in the reverse order of removal.

Tightening torque:

$5.9 \pm 1.5 \text{ N}\cdot\text{m}$ ($0.6 \pm 0.15 \text{ kg}\cdot\text{m}$, $4.3 \pm 1.1 \text{ ft}\cdot\text{lb}$)


C: INSPECTION

1. COMBINATION SWITCH (REAR WIPER)

Set rear wiper and washer switch to each position and check continuity between terminals.

Terminal Switch position	10	12		2
WASH	○	○	—	○
OFF				
ON	○			○
WASH	○	○	—	○


H6M0502C

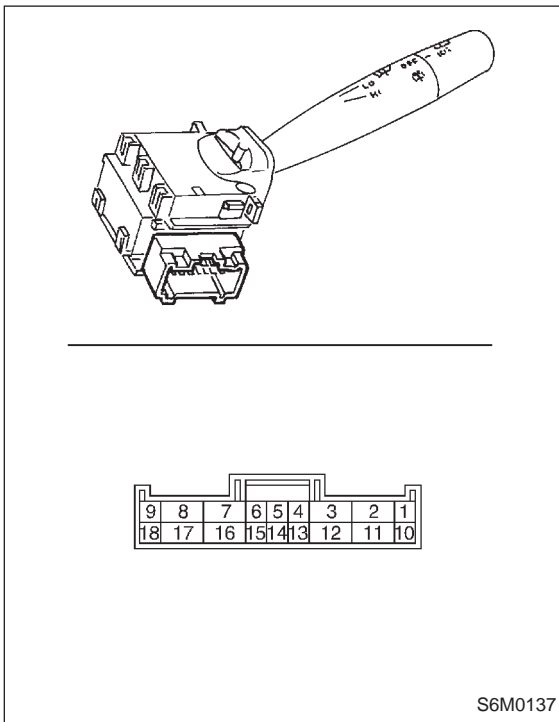

S6M0137


2. WIPER MOTOR

1) Operational check:
Connect battery to wiper motor and check operation of wiper motor.

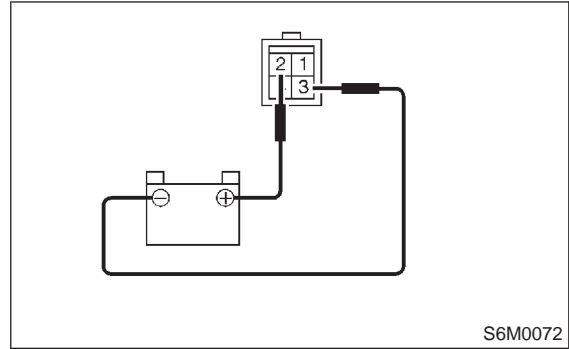


S6M0072

2) Check wiper motor for proper stoppage:
After operating wiper motor, disconnect battery from wiper motor.

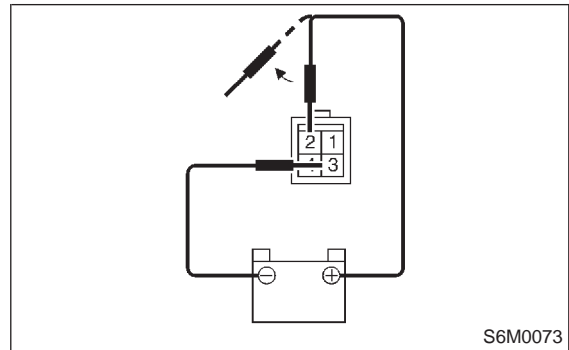

S6M0073

3) Reconnect battery and ensure that wiper motor stops at "AUTO STOP" after it has been operated.

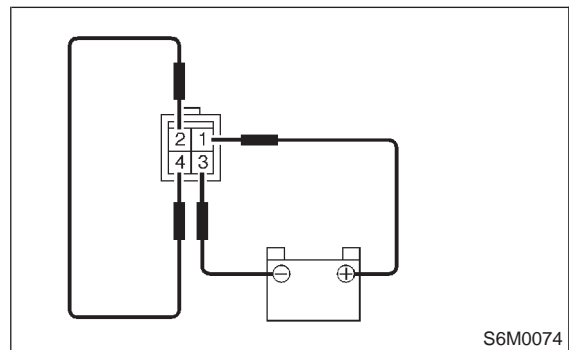

S6M0074