



5. Crankshaft Position Sensor

A: REMOVAL AND INSTALLATION


- 1) Disconnect battery ground cable.

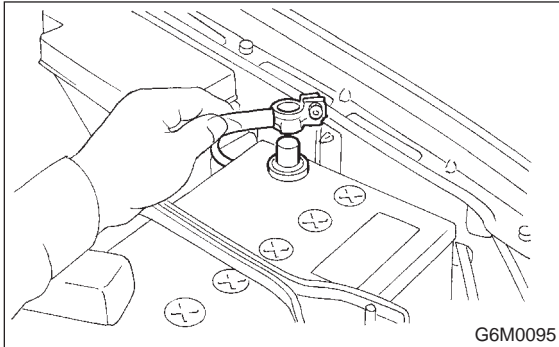

- 2) Remove bolt which install crankshaft position sensor to cylinder block.

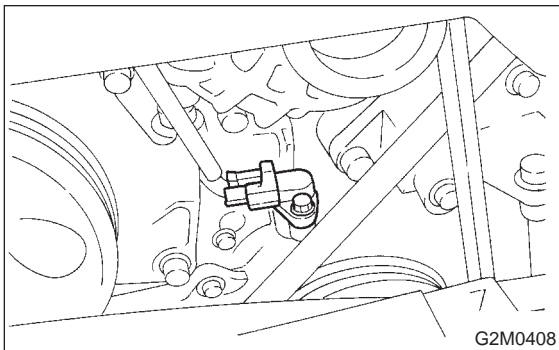

- 3) Remove crankshaft position sensor, and disconnect connector from it.

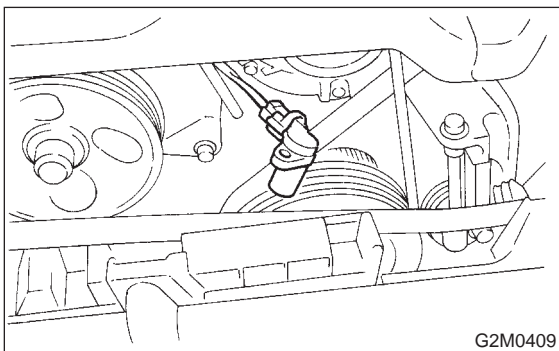

- 4) Installation is in the reverse order of removal.

Tightening torque:

T: 6.4 ± 0.5 N·m (0.65 ± 0.05 kg·m, 4.7 ± 0.4 ft·lb)

