

GENERAL INFORMATION**[G3A0] 1-3**

3. Vehicle Identification Numbers (V.I.N.)

3. Vehicle Identification Numbers (V.I.N.)**A: APPLICABLE V.I.N. IN THIS MANUAL**


Sedan body	L	5MT	4	S	3	B	E	6	3	5	X	Y	6	2	0	0	0	0	1	and after
		4AT	4	S	3	B	E	6	3	5	X	Y	7	2	0	0	0	0	1	and after
	GT	5MT	4	S	3	B	E	6	4	5	X	Y	6	2	0	0	0	0	1	and after
		4AT	4	S	3	B	E	6	4	5	X	Y	7	2	0	0	0	0	1	and after
	GT-LTD	5MT	4	S	3	B	E	6	5	6	X	Y	6	2	0	0	0	0	1	and after
		4AT	4	S	3	B	E	6	5	6	X	Y	7	2	0	0	0	0	1	and after
OUTBACK-LTD	4AT	4	S	3	B	E	6	8	6	X	Y	7	2	0	0	0	0	1	and after	
Wagon body	BRIGHTON	5MT	4	S	3	B	H	6	2	5	X	Y	6	3	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	2	5	X	Y	7	3	0	0	0	0	1	and after
	L	5MT	4	S	3	B	H	6	3	5	X	Y	6	3	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	3	5	X	Y	7	3	0	0	0	0	1	and after
	GT	5MT	4	S	3	B	H	6	4	5	X	Y	6	3	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	4	5	X	Y	7	3	0	0	0	0	1	and after
	OUTBACK	5MT	4	S	3	B	H	6	6	5	X	Y	6	6	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	6	5	X	Y	7	6	0	0	0	0	1	and after
	OUTBACK-CW	5MT	4	S	3	B	H	6	7	5	X	Y	6	6	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	7	5	X	Y	7	6	0	0	0	0	1	and after
	OUTBACK-LTD	5MT	4	S	3	B	H	6	8	6	X	Y	6	6	0	0	0	0	1	and after
		4AT	4	S	3	B	H	6	8	6	X	Y	7	6	0	0	0	0	1	and after

1-3 [G3B0]

GENERAL INFORMATION

3. Vehicle Identification Numbers (V.I.N.)

B: THE MEANING OF V.I.N.

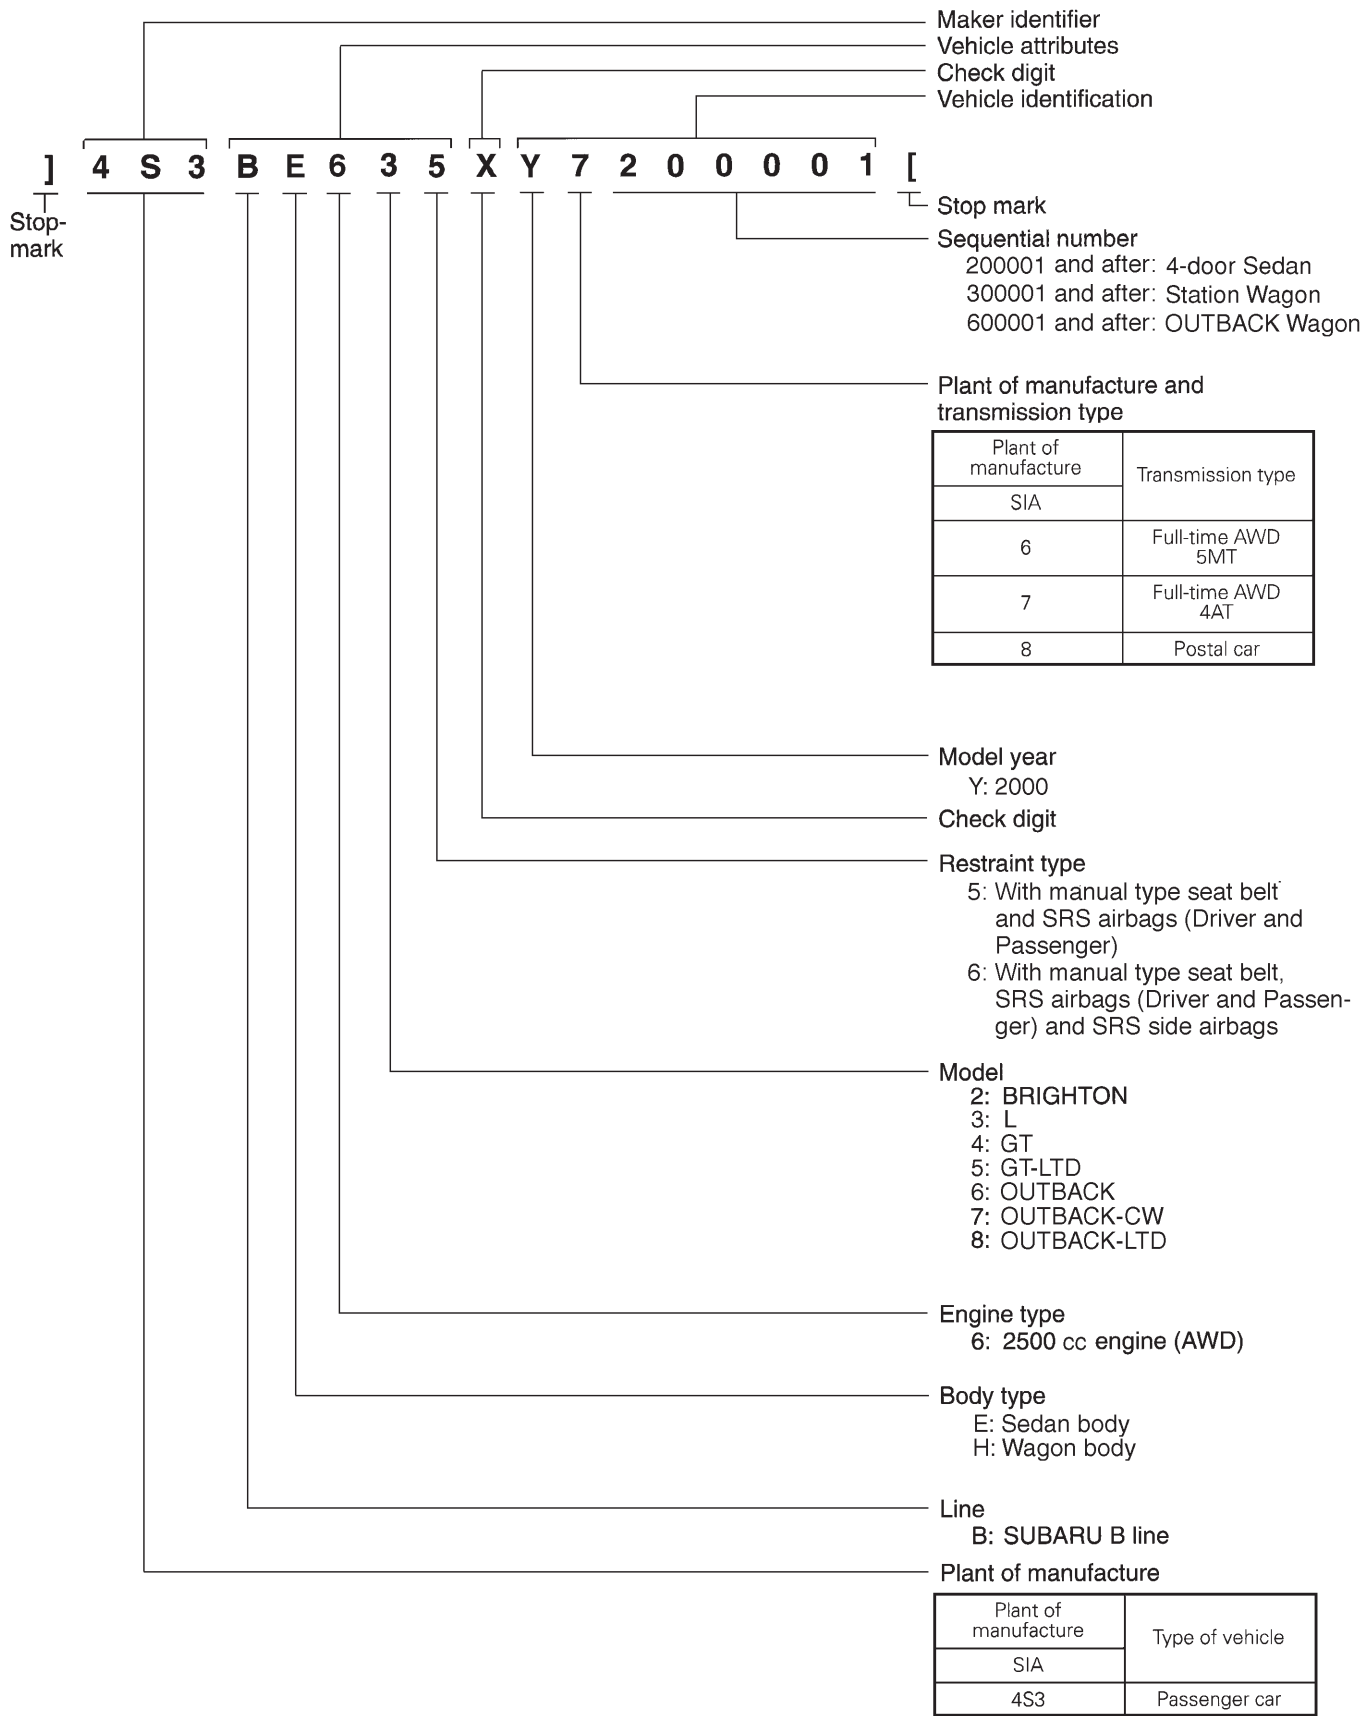

B1H0168D