

- The slope of hood is the same as the parts of body surrounding it.
- The hood and weatherstrip stick fast to each other.

### C: DOOR, DOOR LOCK AND POWER WINDOW OPERATION

#### CHECK POINTS


1. Door "Open-close" operation
2. Operation of door release and lock
3. Loose or damaged parts
4. Position of door window glass
5. Operation of power window switches
6. Power door locking operation
7. Operation of child safety locks

#### 1. CHECK THE OPENING AND CLOSING OF DOORS AND REAR GATE

- 1) First open the door completely and then close it fully by operating the inside door handle from the driver's seat.
- 2) Repeat the preceding step two or three times to see how the door opens and closes. Pay attention to the operating effort, any abnormal noise and positive operation.
- 3) Operate the outside door handle from the outside and check how the door opens and closes. Also, check that there is a uniform clearance between the door and vehicle body without any grade difference.

#### NOTE:

- To examine the closed state and sinking of the door, observe from the front right-hand door.
- If the striker drags during opening when the outside door handle is pulled, adjust by relocating the striker.

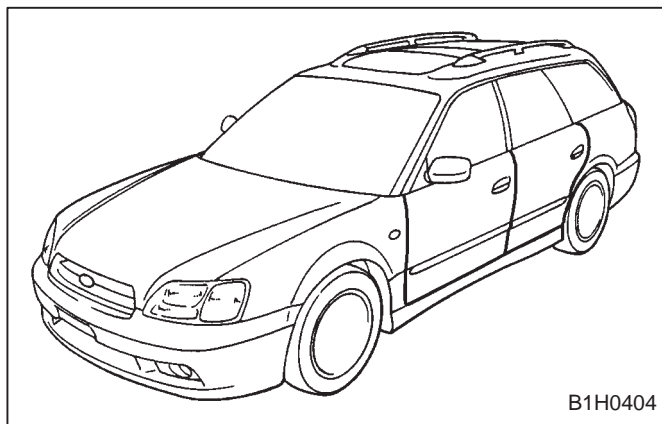


#### 2. CHECK THE OPERATION OF DOOR LOCKS

- 1) Close the door completely, lock it with the key plate and pull the all outside door handles to ensure the door does not open.

#### NOTE:

- Do not pull the outside door handle with greater force than necessary.
- While inspecting the door and lock, check the lock in the rear part of the door and the door striker attached to the pillar.

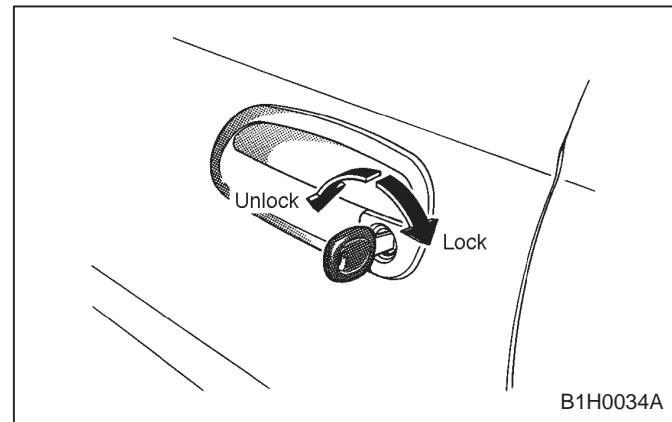

- 2) Again operate the key plate to ensure the door unlocks.

#### NOTE:

Replace the lock cylinder if it malfunctions. When the door lock seems to be operating slowly, lubricate the moving parts with grease or oil.

- 3) Vehicles with manual door locks:

Sit in the driver seat, close the door completely, and move the lock lever to the lock position. Then, pull the inside door handle to ensure the door will not open.

- 4) Vehicles with power door locks:

Sit in the driver seat, close the driver's door completely, and place the door lock knob (A) to the lock position. Then pull the all inside door handles (B) to ensure that the all doors will not open.

For other doors, place the lock levers to the lock positions and then pull the inside door handles to ensure that the doors will not open.