

D: TACHOMETER, RADIO, ETC.

CHECK POINT

1. *Operation of tachometer, radio, etc.*

1. TACHOMETER

Race the engine two or three times, and check the tachometer's operation.

CAUTION:

Do not race the engine more than necessary.

2. RADIO

Check the operation according to the "Owner's manual".

3. CIGARETTE LIGHTER

To operate, push in the knob completely and wait for a moment. The lighter will click out of holder automatically when ready to use.

CAUTION:

- **To avoid the possibility of being burned, do not hold the cigarette lighter in by hand. This may also cause damage to the lighter heating element.**
- **When replacing the cigarette lighter knob, it is recommended that you use only a genuine part. If you use either non-genuine parts or any combination of parts different from original knob-and-socket combination, it may cause overheating due to a short circuit.**

E: LIGHTS AND SWITCHES

CHECK POINTS

1. *Visual inspection of lights (installation, damage, dirty lenses, water inside, etc.)*
2. *Operation of all lights and switches*
3. *Horn operation*

F: WASHER AND WIPERS

CHECK POINTS

1. *Checking of fluid level*
2. *Direction and quantity of washer fluid sprayed*
3. *Operation of wiper and washer*

CAUTION:

- **Do not operate the washer when the reservoir is empty.**
 - **Before operating the wipers, be sure to eject washer fluid onto the window. If the window is dry, the wipers' operating speed and angle of operation will be different from when it is wet.**
 - **If the position at which washer fluid is ejected is wrong: Using an eyeleteer or similar tool, adjust the direction of the nozzle, be careful not to damage the nozzle hole.**
 - **Grease, wax, insects or other material on the windshield or the wiper blades results in jerky wiper operation and unclear frontal view. If you can not get clear view after operating the windshield washer or wiper operation is jerky, clean the outer surface of the windshield and wiper blades with a neutral detergent.**
- Wiper blades, windshield and rear window should be cleaned with sponge, soft cloth or mild-abrasive cleaner.
- After cleaning, rinse the windshield and wiper blades with clean water. The windshield is clear if beads do not form when you rinse the windshield with water.