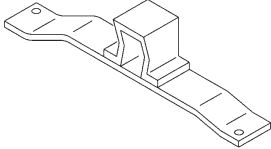
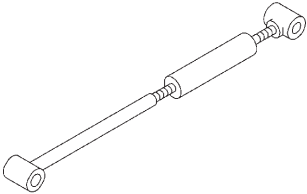
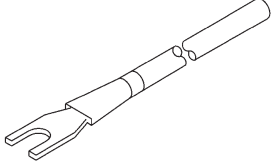
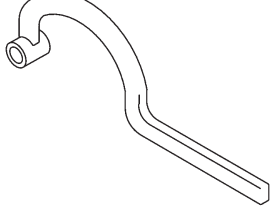
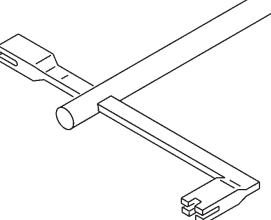


9. Body Tools

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p data-bbox="524 675 615 697">B1H0264</p>	41099AA010	ENGINE SUPPORT BRACKET	Used for supporting engine.
 <p data-bbox="524 1005 615 1028">B1H0265</p>	41099AA020	ENGINE SUPPORT	Used for supporting engine.
 <p data-bbox="524 1340 615 1363">B1H0266</p>	925580000	PULLER	Used for removing trim clip.
 <p data-bbox="524 1671 615 1694">B1H0267</p>	925610000	WRENCH	Used for removing and installing door hinge.
 <p data-bbox="524 1992 615 2015">B1H0268</p>	927780000	REMOVER	Used for removing and installing trunk torsion bar.