


7) Install high-pressure hose (B) (Flexible hose Pd) and low-pressure hose (A) (Flexible hose Ps): Connect high-pressure hose (B) and low-pressure hose (A) with compressor.

**CAUTION:**

Be sure to apply compressor oil to the periphery of O-ring.

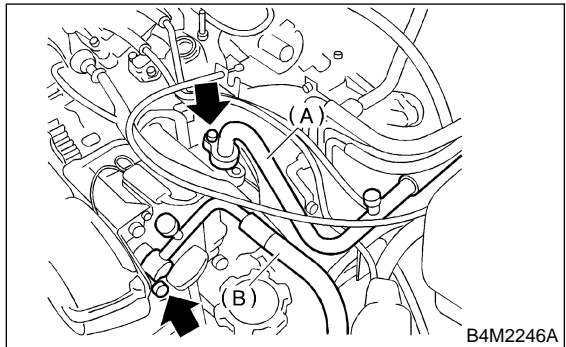

8) Install belt cover.

**CAUTION:**

- After installing belt cover, make sure it is not misaligned or twisted.
- After installing belt cover, check the clearance between pulley and belt cover.

9) Connect ground cable to negative terminal of battery.


10) Charging refrigerant. <Ref. to 4-7 [W700].>

11) Install duct.

## 12. Condenser


### A: REMOVAL AND INSTALLATION

- 1) Disconnect battery negative terminal.
- 2) Remove duct (A).

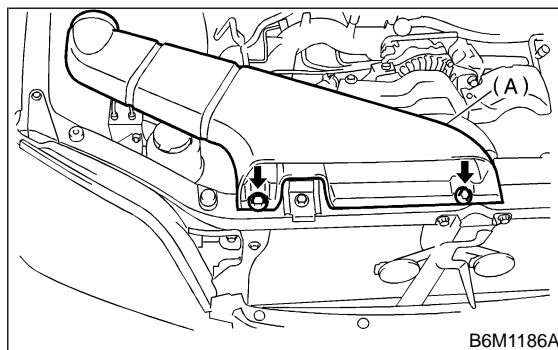

3) Discharge refrigerant using refrigerant recovery system. <Ref. to 4-7 [W600].>

4) Disconnect high-pressure hose (A) and high-pressure pipe (B) from condenser.

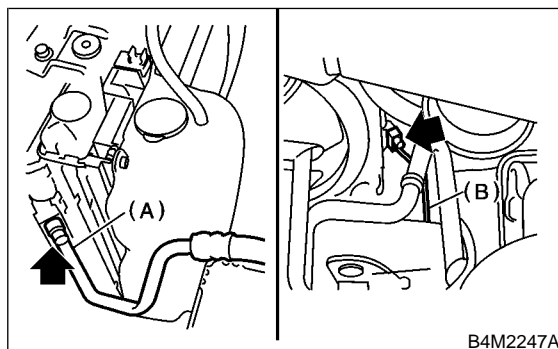

5) Remove the radiator bracket (A).

