


## 5. Front Stabilizer

### A: REMOVAL

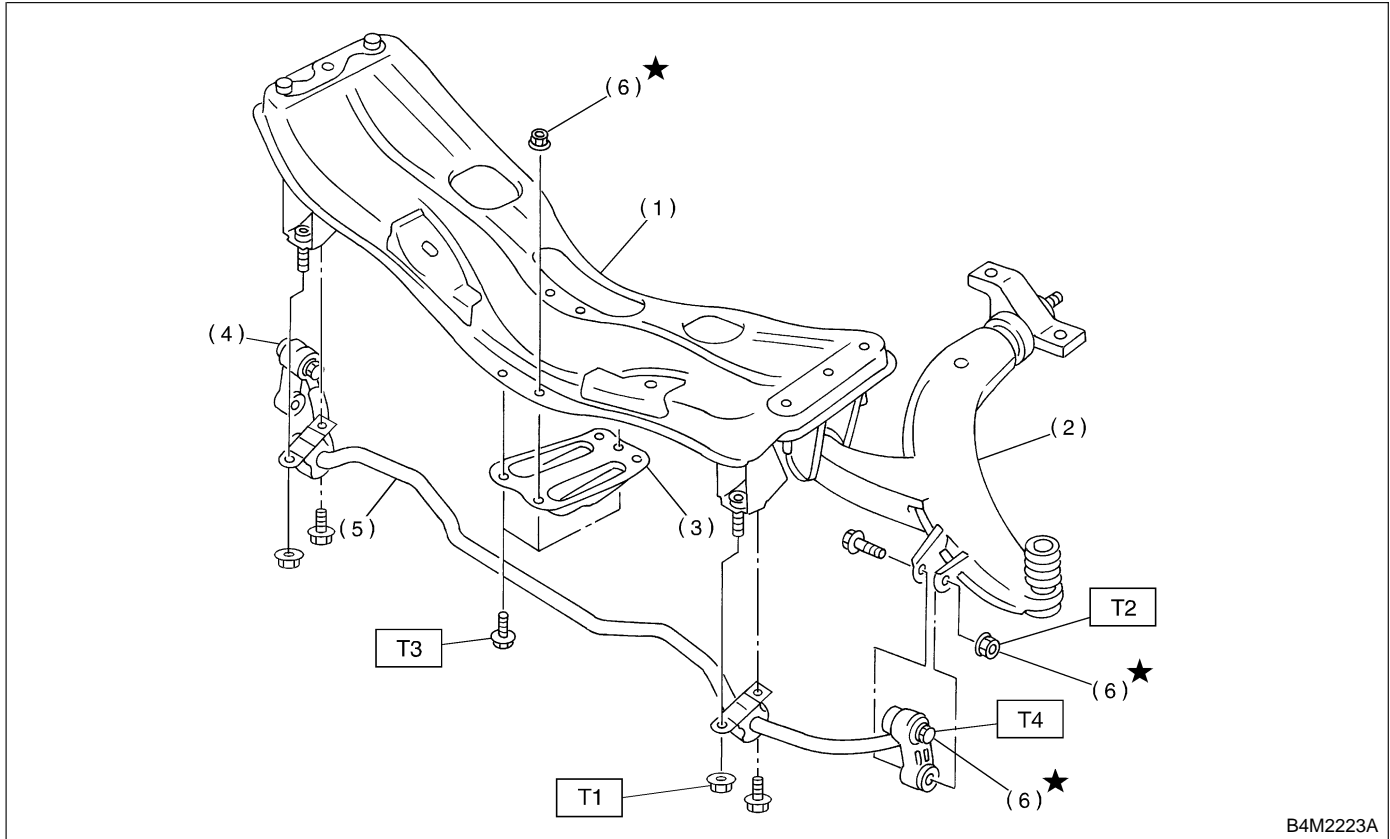

B4M2223A

- (1) Front crossmember
- (2) Transverse link
- (3) Jack-up plate
- (4) Stabilizer link
- (5) Front stabilizer

- (6) Self-locking nut

**Tightening torque: N·m (kg·m, ft·lb)**

**T1: 25±4 (2.5±0.4, 18.1±2.9)**


**T2: 29±5 (3.0±0.5, 21.7±3.6)**

**T3: 18±5 (1.8±0.5, 13.0±3.6)**


**T4: 44±6 (4.5±0.6, 32.5±4.3)**

- 1) Jack-up the front part of the vehicle and support it with safety stand (rigid racks).
- 2) Remove jack-up plate from lower part of crossmember.
- 3) Remove bolts which secure stabilizer to crossmember.

- 4) Remove bolts which secure stabilizer link to front transverse link.

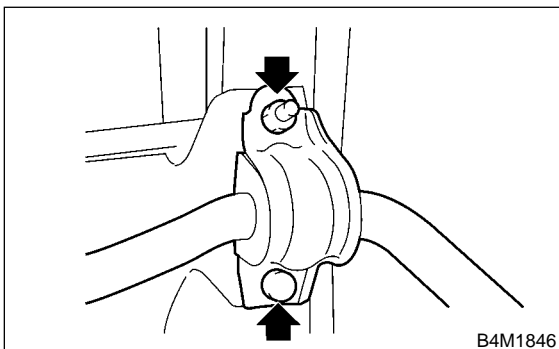

B4M1846

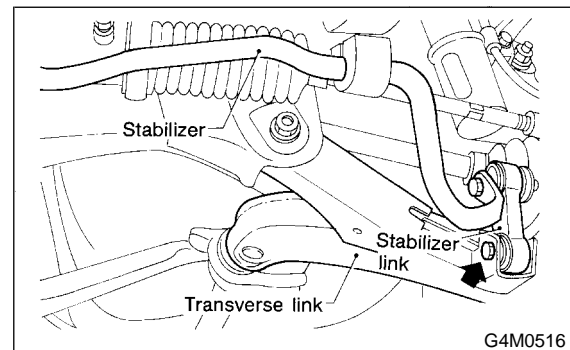

G4M0516