


3) If rim runout exceeds specifications, remove tire from rim and check runout while attaching dial gauge to positions shown in figure.

4) If measured runout still exceeds specifications, replace the wheel.

7. Full Wheel Cap

A: REMOVAL

Pry off the full wheel cap with a wheel cap remover inserted between openings in the cap.

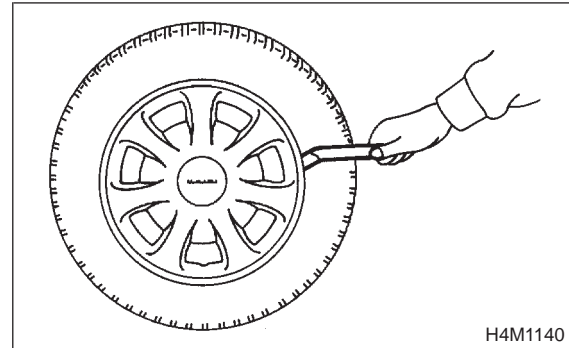

B: INSTALLATION

Align the valve hole in the wheel cap with the valve on the wheel and secure the wheel cap by tapping four points by hand.