

9. Security System

A: FEATURES

- The security system detects a theft action (unauthorized entry into the vehicle), and gives an alarm of that situation by letting the horn sound and the small light blink, and immobilizes the vehicle by interrupting the starter circuit.
- An unauthorized entry is monitored by the switches which are installed on all the doors and the rear gate or the trunk lid. When one of the switch is turned ON, this system judges it as an unauthorized entry into the vehicle being attempted, gives an alarm and immobilizes the vehicle.
- An unauthorized entry is also monitored by the impact sensor. The system operates in the same manner as mentioned above whenever the impact sensor senses an impact on the vehicle.

1. SYSTEM OPERATION

1) The security system will give the following alarm:

- The small light blinks and the horn sounds intermittently. In addition, the security indicator light blinks fast and the starter motor is inhibited to operate.
- The alarm automatically turns OFF after 30 seconds; however, the alarm will be reactivated if the vehicle is tampered with again.

2) The alarm is activated when:

- The door, rear gate or trunk lid is opened without using transmitter. (even if the door is opened by releasing the inside door handle or the trunk lid is opened by operating the trunk lid release lever.)
- Dealing an impact is sensed on vehicle body.

2. HOW TO ARM THE SYSTEM

- 1) Remove the key from the ignition switch.
- 2) Make sure that the trunk lid is closed.
- 3) Close all windows. Close and lock all doors and rear gate.
- 4) Push transmitter LOCK button.
- 5) The horn will chirp once and small light will blink once.

NOTE:

The system can be armed even if the windows are open.

6) Confirm that the security indicator light comes to blink. (If this indicator light remains illuminated, it is an indication that the any door, rear gate or trunk lid is not properly closed. Resume the procedure from beginning.) If during this 5 seconds time period, the door is unlocked by key and the ignition switch is turned ON, the system will disarm. The indicator light blinks every 2 seconds while the system is being armed, and continues to blink until the system is disarmed.

3. HOW TO DISARM THE SYSTEM

- 1) Push transmitter UNLOCK button.
- 2) The horn will chirp twice and small light will blink twice.
- 3) Security indicator light turns OFF.
- 4) Room light will illuminate for 30 seconds and then turn OFF. (However, if ignition switch is turned ON or arming procedure is performed again, room light will turn OFF.)

4. HOW TO STOP ALARMS

Push transmitter UNLOCK button or turn the ignition switch from ON to LOCK position repeatedly three times.