


4. Mode Door Control

The servo motor for the mode door control is installed on the driver's side lateral of the heater unit. Operation of the mode selector switch sends a signal to the servo motor. This makes a clockwise or counterclockwise rotation of the servo motor, which causes the mode door to operate through a link.

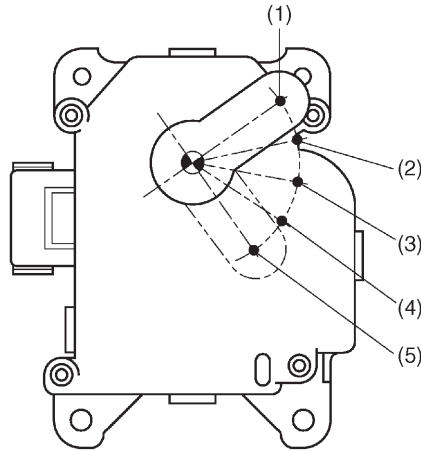

B4H1505A

- (1) DEF position
- (2) DEF/HEAT position
- (3) HEAT position
- (4) VENT/HEAT position
- (5) VENT position