

7. Clutch Switch S912258


A: REMOVAL S912258A18

Disconnect the connector from the switch, and then remove the switch. <Ref. to CL-21 DISASSEMBLY, Clutch Pedal.>

B: INSTALLATION S912258A11

Install in the reverse order of removal.

C: INSPECTION S912258A10

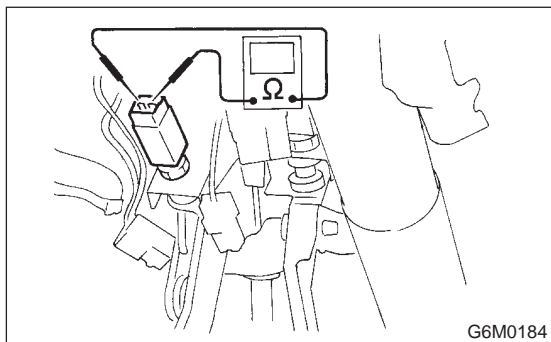

Check continuity between clutch switch terminals.

Switch	Pedal	Tester connection	Specified condition
Clutch	Released	1 — 2	Continuity
	Depressed	1 — 2	No continuity

If NG, replace the clutch switch.