

8. Inhibitor Switch S912243


A: REMOVAL S912243A18

Disconnect connector from switch, and then remove the switch. <Ref. to AT-29 REMOVAL, Inhibitor Switch.>

B: INSTALLATION S912243A11

Installation is in the reverse order of removal.

C: INSPECTION S912243A10

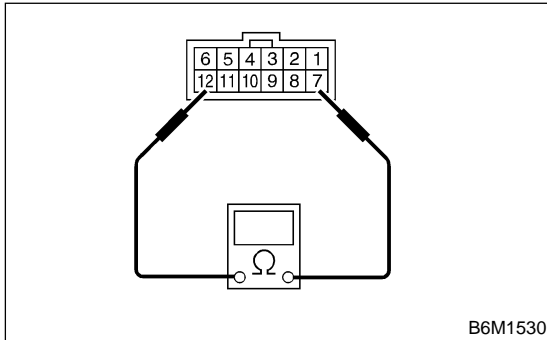

Check continuity between inhibitor switch terminals.

Selector lever position	Tester connection	Specified condition
P	7 — 12	Continuity
N		Continuity
Except P and N		No continuity

If NG, replace inhibitor switch.

MEMO: