


 
 
 


2. Radio System S901467

1. AUDIO EXCEPT MCINTOSH SYSTEM S901467A2101

A: SCHEMATIC S901467A21


AUDIO-01

AUDIO-01

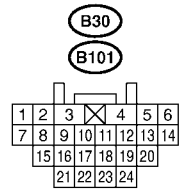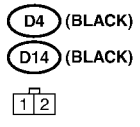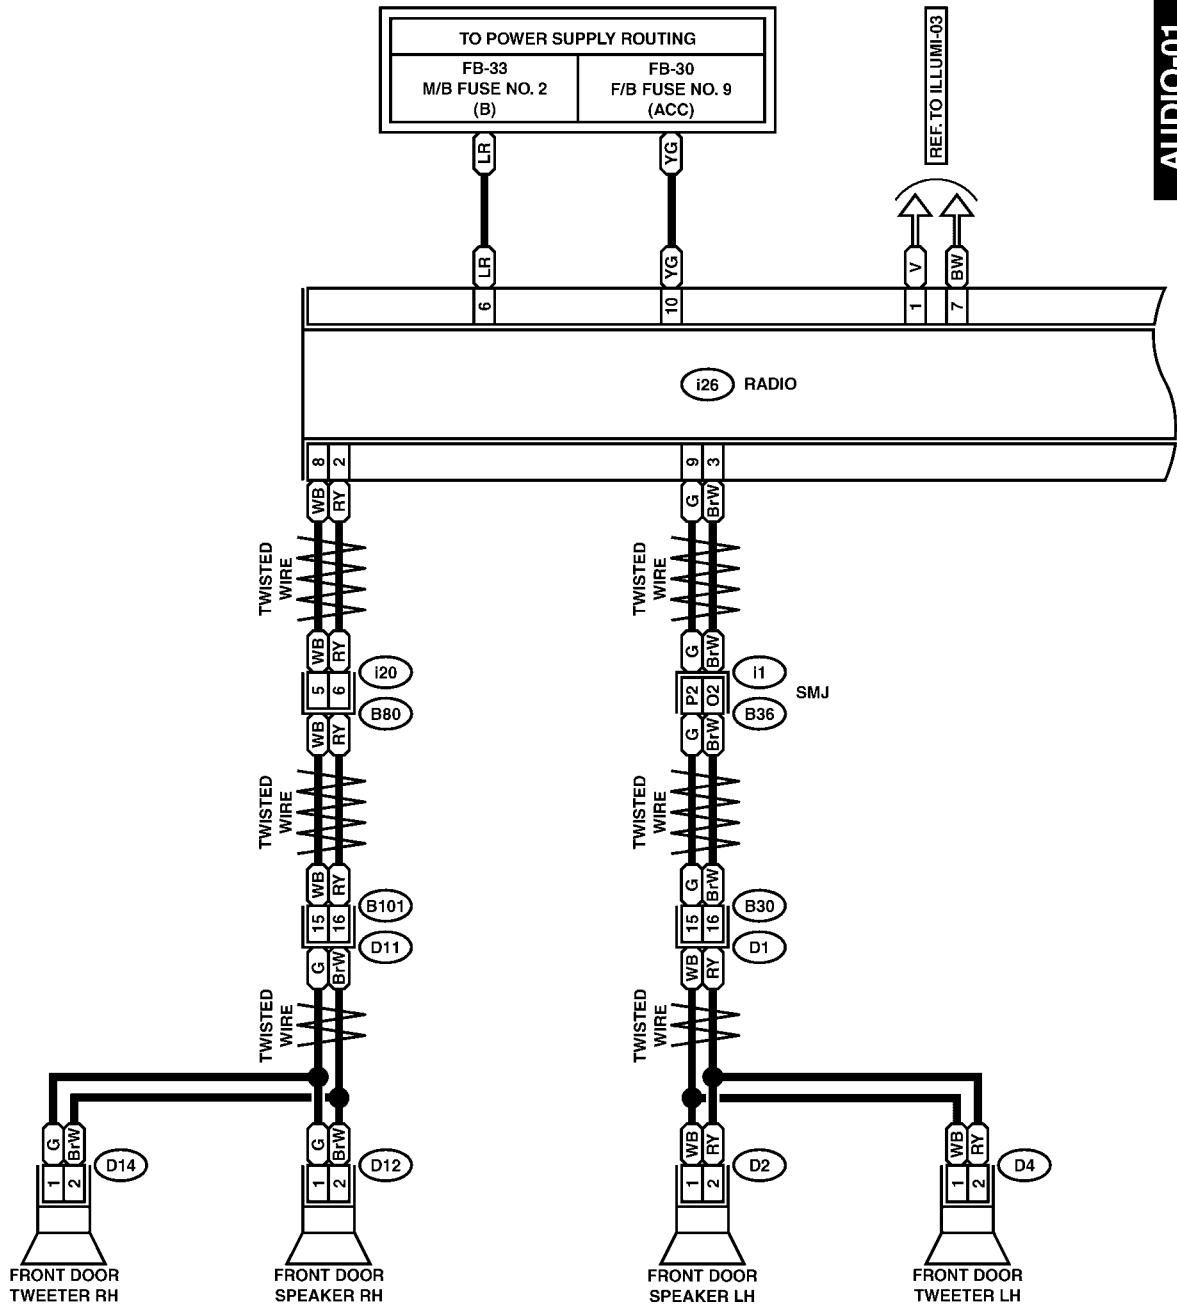

# RADIO SYSTEM

Entertainment

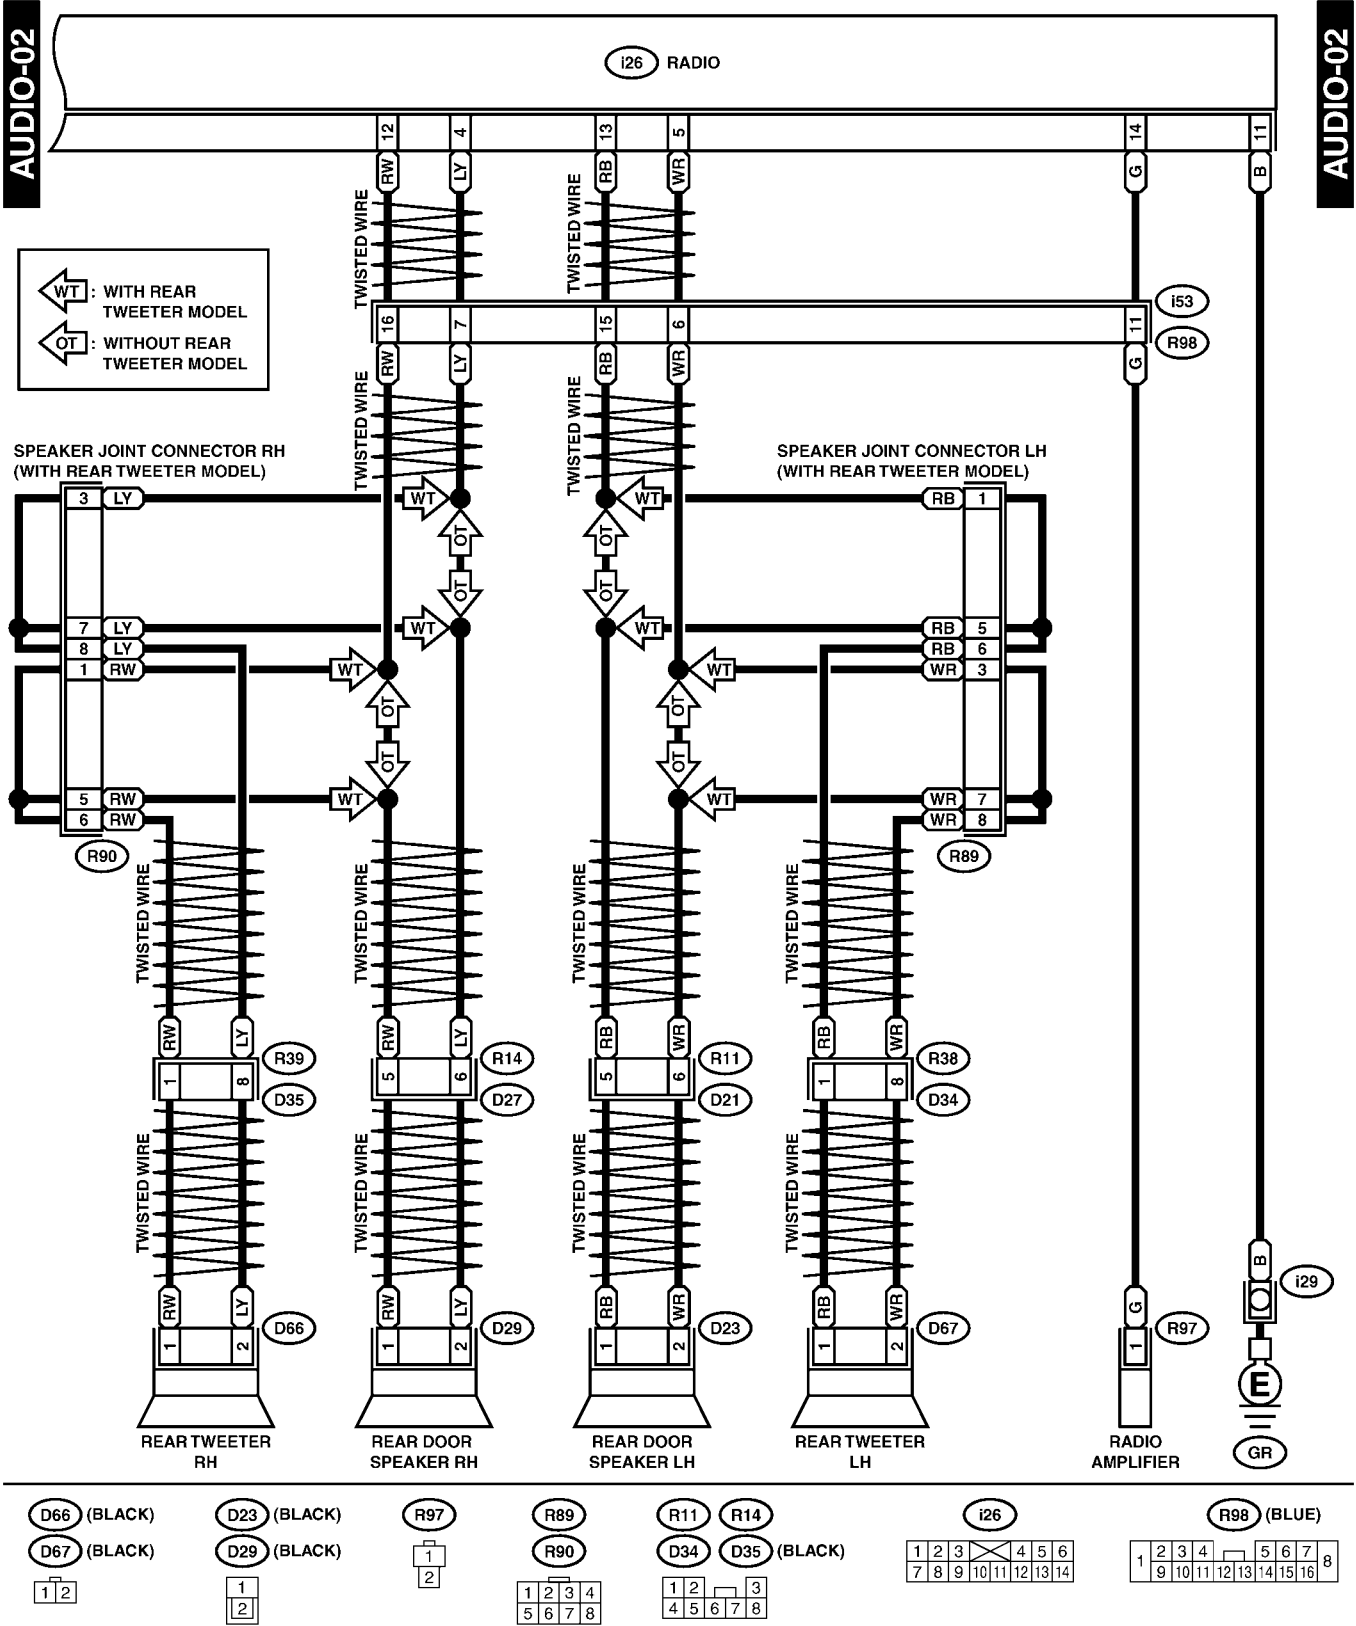

BU76-21B


ET-4

RADIO SYSTEM

Entertainment

2. AUDIO MCINTOSH SYSTEM

S901467A2102

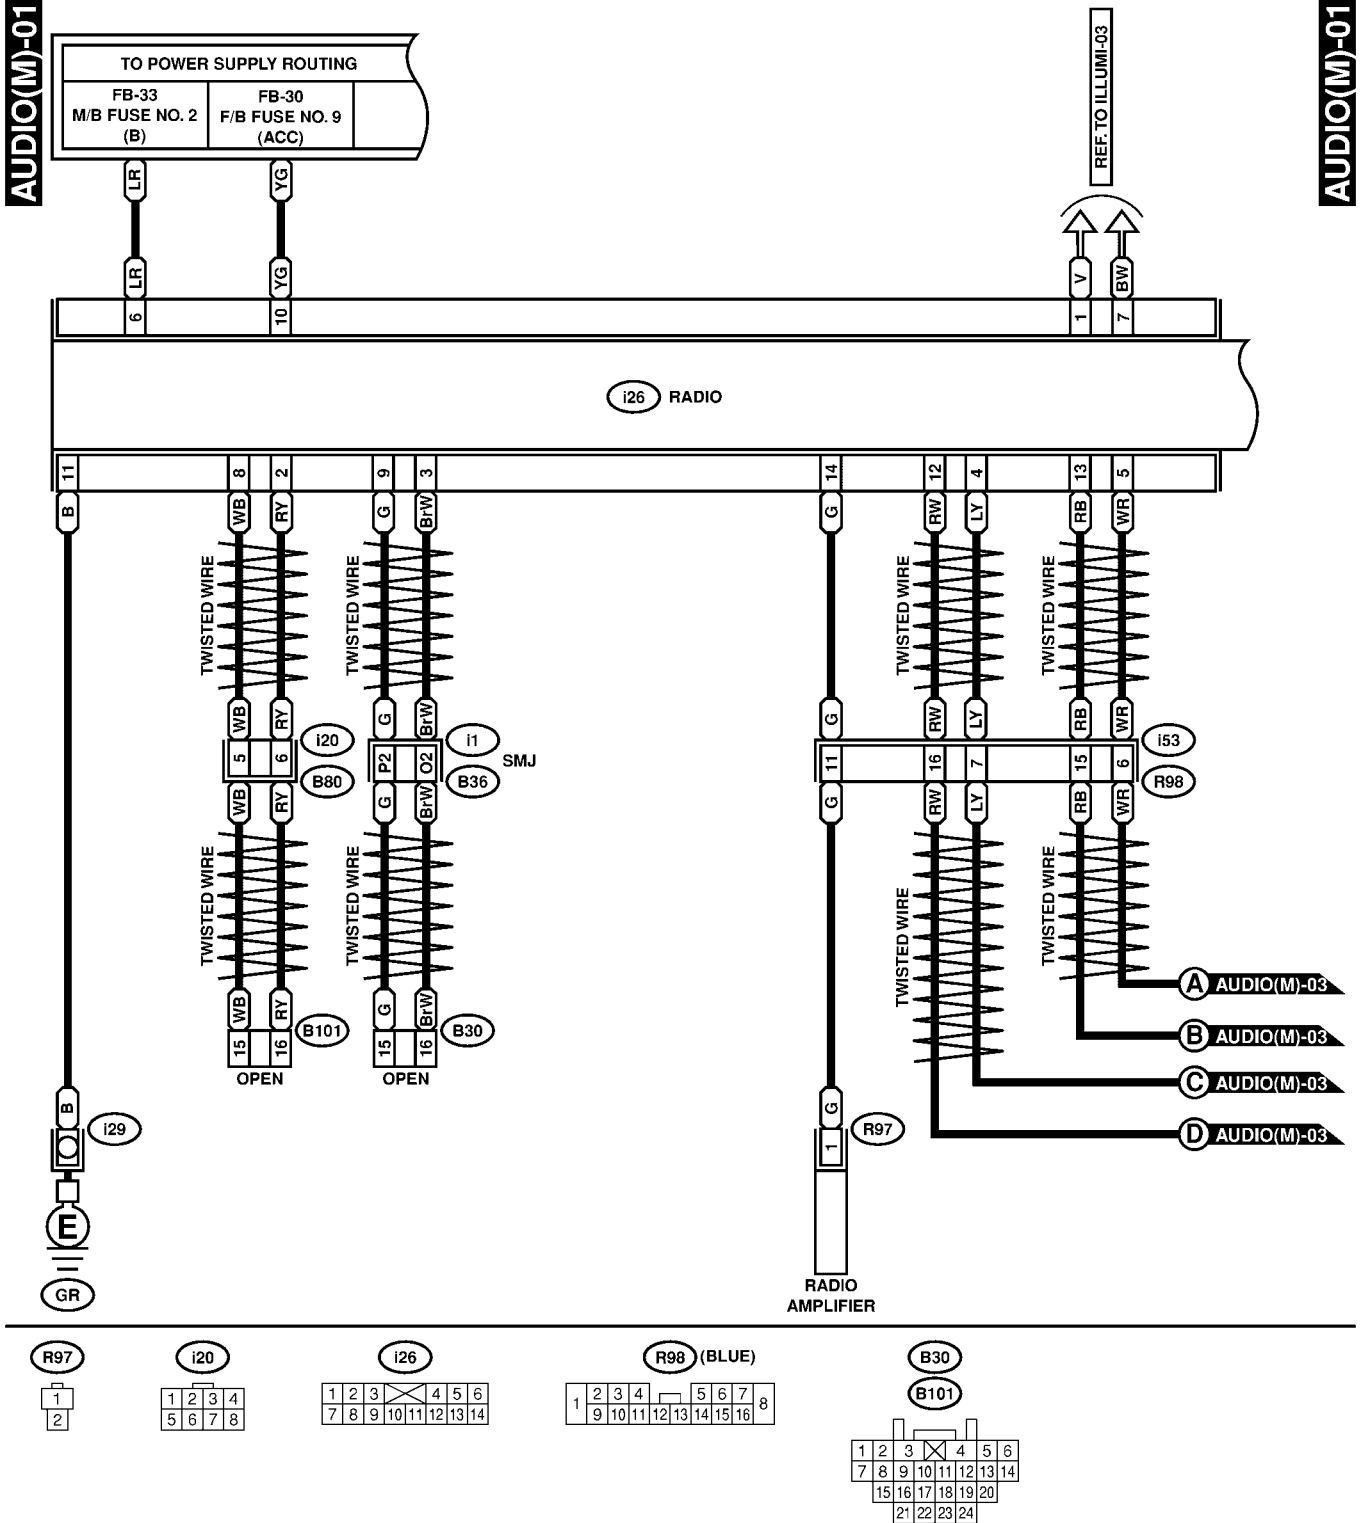


# RADIO SYSTEM

Entertainment

**AUDIO(M)-02**

**AUDIO(M)-02**

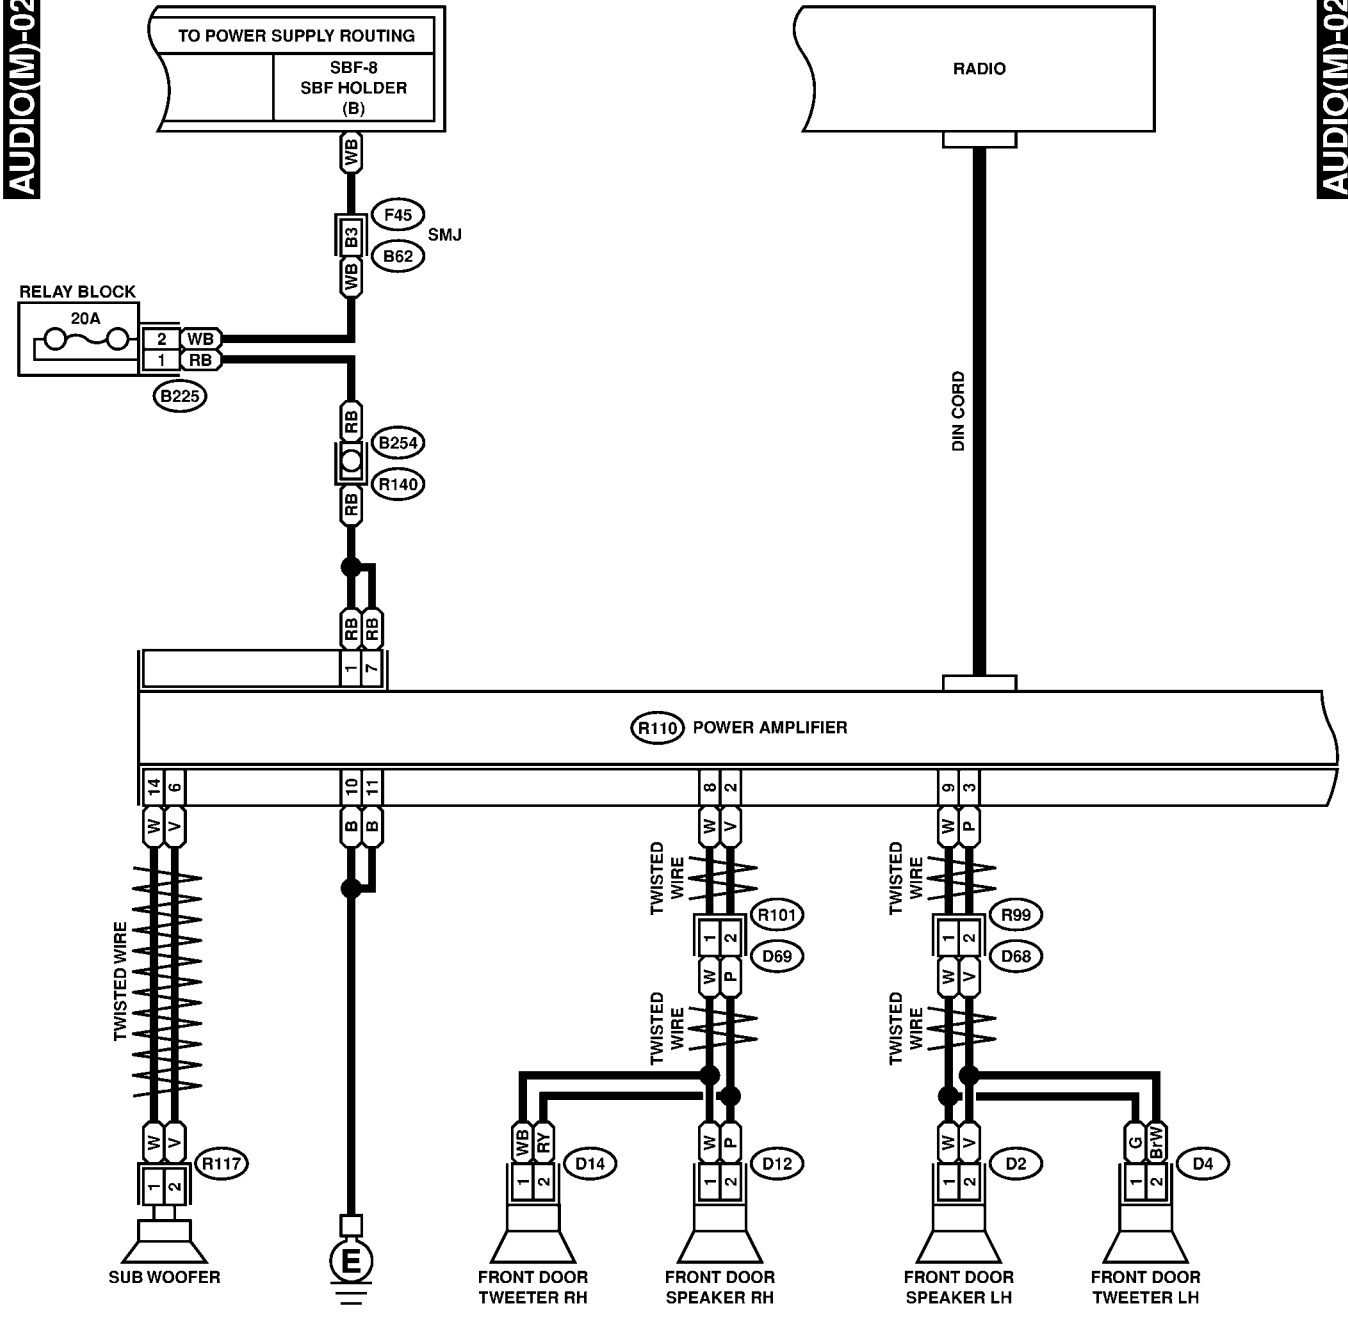

(D4) (BLACK)      (D2)      (R117)      (R110)      (B225)

(D14) (BLACK)      (D12)

1	2	3	4	5	6
7	8	9	10	11	12
13	14				

1	2
3	4
5	6
7	8
9	10
11	12
13	14
15	16
17	18
19	20
21	22
23	24
25	26
27	28
29	30
31	32
33	34
35	36
37	38

(D68)

1	2
---	---

**RELAY BLOCK (BLACK)**

(D69)

1	2
---	---

(D12)

1	2
---	---

(D2)


1	2
---	---

BU76-22B

ET-6

# RADIO SYSTEM

Entertainment

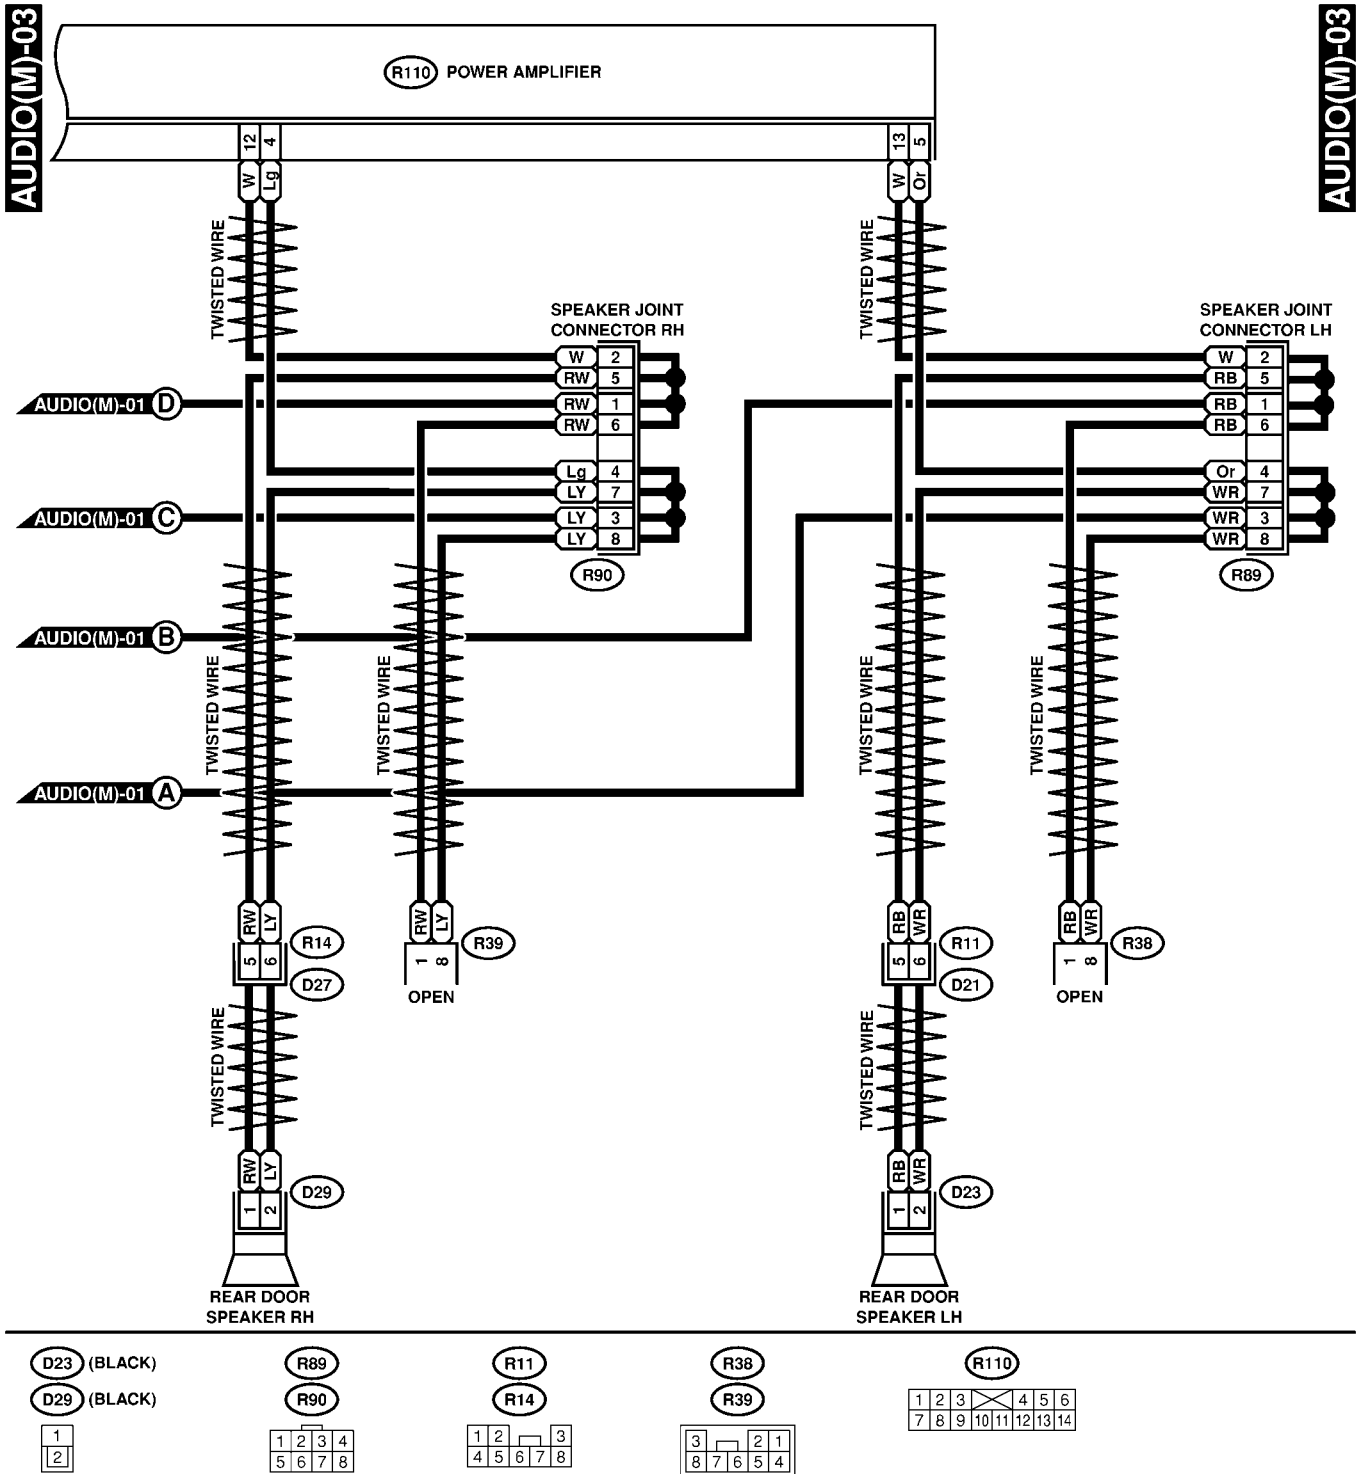

BU76-22C

ET-7

# RADIO SYSTEM

Entertainment

## B: INSPECTION S901467A10

Symptom	Repair order
No power coming in (No display and no sound from speakers)	(1) Check fuse and power supply for radio. (2) Check radio ground. (3) Remove radio for repair.
A specific speaker does not operate.	(1) Check speaker. (2) Check output circuit to speaker <ul style="list-style-type: none"><li>● between radio and speaker (except McIntosh system).</li><li>● between speaker amplifier and speaker (McIntosh system).</li></ul>
Radio controls are operational, but sound is not heard from speakers. (McIntosh system)	(1) Check fuse and power supply for speaker amplifier. (2) Check speaker amplifier ground.
Woofers does not operate (McIntosh system).	Check output circuit to woofer from speaker amplifier.
Radio generates noise with engine running	(1) Check radio ground. (2) Check generator. (3) Check ignition coil. (4) Remove radio for repair.
AM and FM modes are weak or noisy	(1) Check antenna. (2) Check antenna amplifier. (3) Check radio ground. (4) Remove radio for repair.