


## 10. Antenna Amplifier S901460

### A: REMOVAL S901460A18


#### 1. SEDAN S901460A1801

- 1) Remove rear pillar upper trim (left side). <Ref. to EI-44 REMOVAL, Rear Quarter Trim.>
- 2) Disconnect harness connector and terminal.
- 3) Remove mounting screw and detach antenna amplifier.

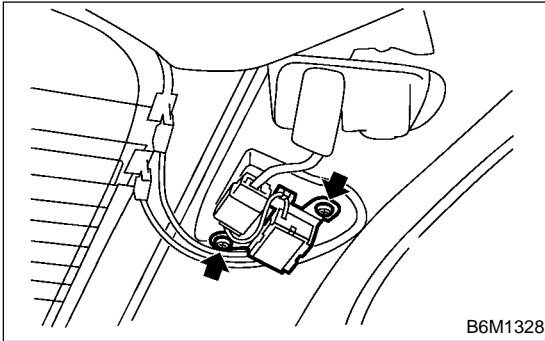

#### 2. WAGON S901460A1802

- 1) Remove rear quarter lower trim (left side). <Ref. to EI-44 REMOVAL, Rear Quarter Trim.>
- 2) Disconnect harness connector and terminal.
- 3) Remove mounting screw and detach antenna amplifier.

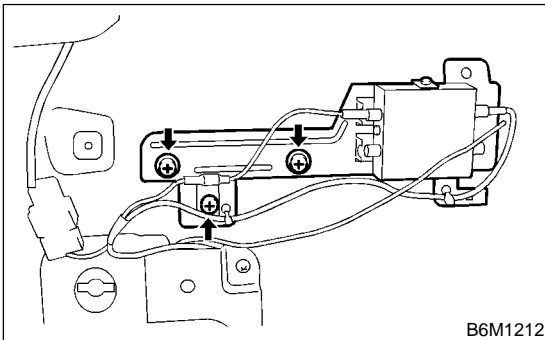


### B: INSTALLATION S901460A11

Install in the reverse order of removal.

### C: INSPECTION S901460A10


#### 1. SEDAN S901460A1001

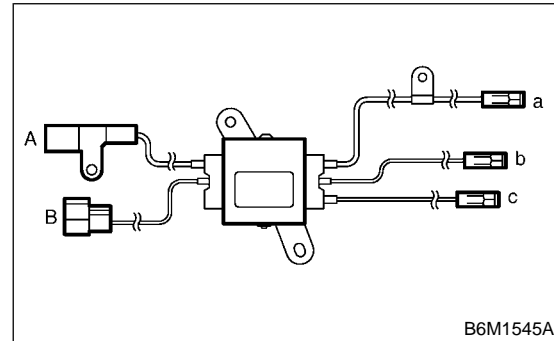

Measure resistance between terminal and amplifier body.

| Tester connection  | Resistance       |
|--------------------|------------------|
| A — Amplifier body | 0 Ω (Continuity) |
| B — Amplifier body | More than 100 kΩ |
| a — Amplifier body | 0 Ω (Continuity) |
| b — Amplifier body | More than 100 kΩ |
| c — Amplifier body | More than 100 kΩ |
| A — a              | 0 Ω (Continuity) |

#### 2. WAGON S901460A1002

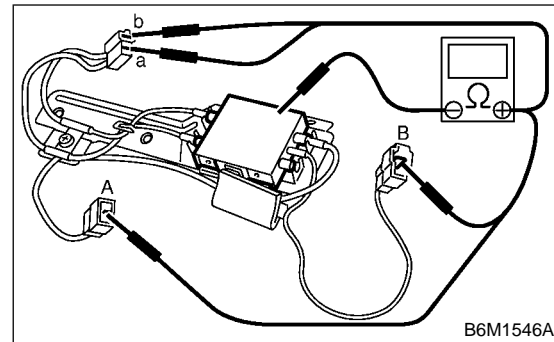

Measure resistance between terminal and amplifier body.

| Tester connection  | Resistance (Ω)   |
|--------------------|------------------|
| A — Amplifier body | More than 100 kΩ |
| B — Amplifier body | More than 100 kΩ |
| a — Amplifier body | More than 100 kΩ |
| b — Amplifier body | More than 100 kΩ |