


16. Roof Rail S911383

A: REMOVAL S911383A18

- 1) Remove roof trim. <Ref. to EI-47 REMOVAL, Roof Trim.>
- 2) Remove five mounting nuts and then detach roof rail carefully.

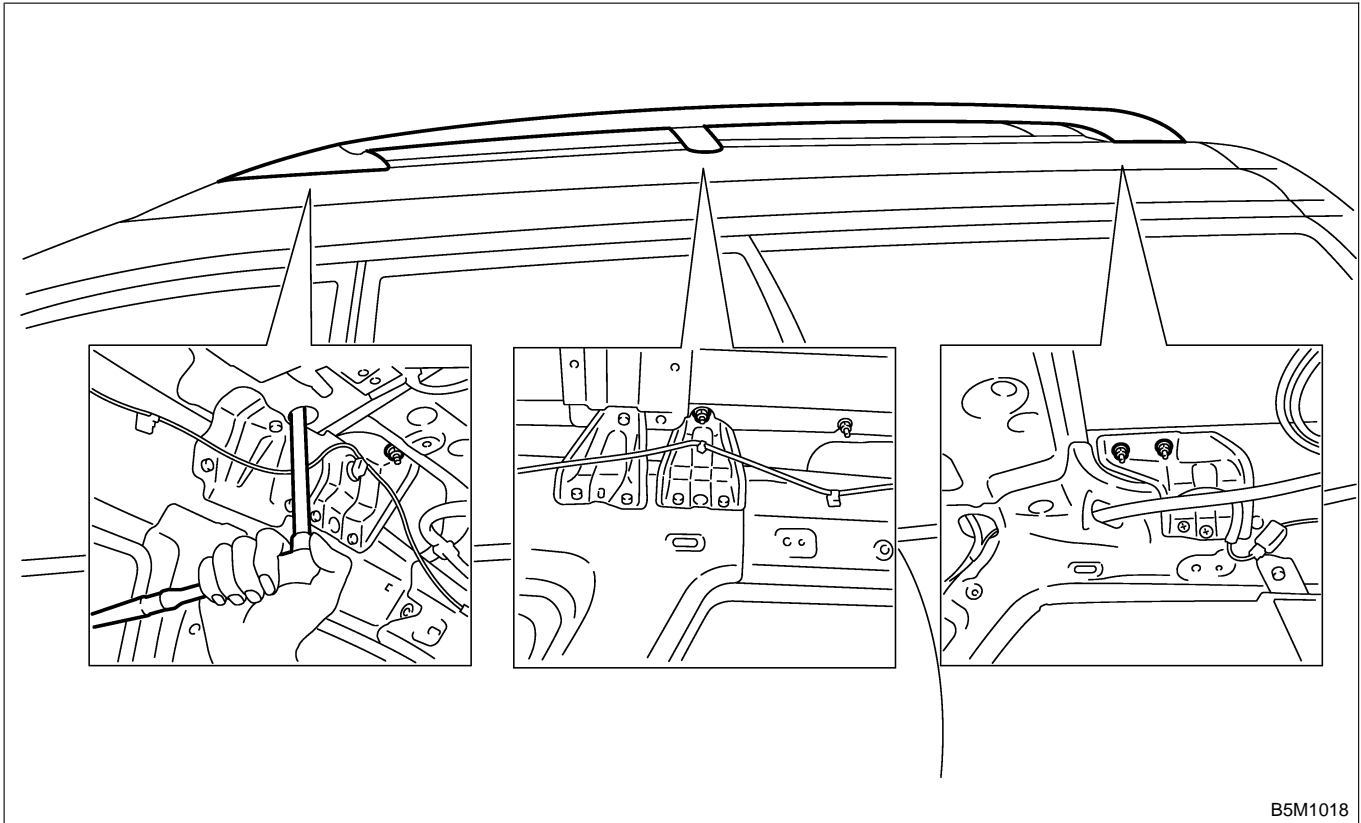

B5M1018

B: INSTALLATION S911383A11

Install in the reverse order of removal.

CAUTION:

Be careful not to scratch body panels with roof rail stud bolts when removing and installing them.