


5. Front Sealing Cover S913564

A: REMOVAL S913564A18

- 1) Remove front door trim. <Ref. to EI-32 REMOVAL, Front Door Trim.>
- 2) Remove front speaker. <Ref. to EI-11 REMOVAL, Front Speaker.>
- 3) Using a spatula, remove sealer.

CAUTION:

- Carefully remove sealer. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new one.

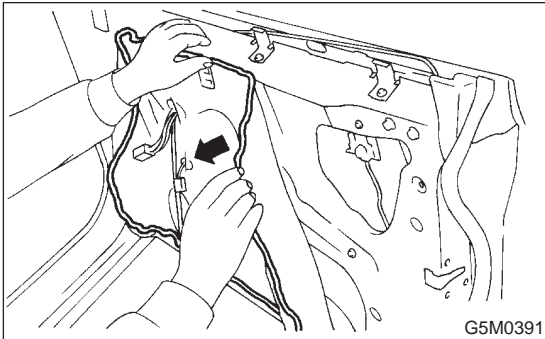

B: INSTALLATION S913564A11

- 1) Install in the reverse order of removal.
- 2) When replacing sealing cover, use CEMEDINE 5430L sealer.
- 3) Press sealer-applied area firmly to prevent any floating on surface.

Sealer:

CEMEDINE 5430L or equivalent

CAUTION:

- Apply a uniform bead of sealer.
- Attach sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

C: INSPECTION S913564A10

If sealing cover is damaged, replace it with a new one.