


## 7. Rear Sealing Cover S913565

### A: REMOVAL S913565A18

- 1) Remove rear door trim. <Ref. to EI-33 REMOVAL, Rear Door Trim.>
- 2) Remove rear speaker. <Ref. to ET-12 REMOVAL, Rear Speaker.>
- 3) Using a spatula, remove sealer.

#### CAUTION:

- Carefully remove sealer. Excessive force will easily break the cover.
- If cover gets broken, replace it with a new one.

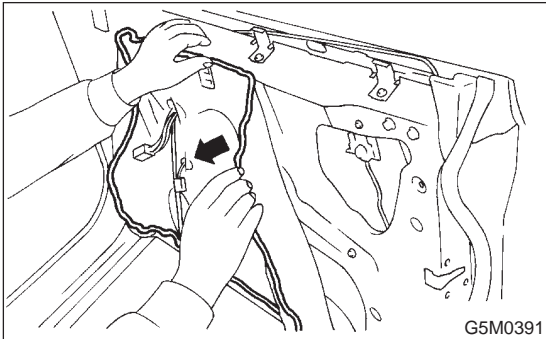

### B: INSTALLATION S913565A11

- 1) Install in the reverse order of removal.
- 2) When replacing sealing cover, use CEMEDINE 5430L sealer.
- 3) Press sealer-applied area firmly to prevent any floating on surface.

#### Sealer:

***CEMEDINE 5430L or equivalent***

#### CAUTION:

- Apply an uniform bead of sealer.
- Attach sealing cover, keeping it from becoming wrinkled.
- Breaks in the bead will allow water leakage and contamination.

### C: INSPECTION S913565A10

If sealing cover gets damaged, replace it with a new one.