

# COMBINATION METER SYSTEM

Instrumentation/Driver Info


## 2. Combination Meter System S907607

### A: SCHEMATIC S907607A21

#### 1. COMBINATION METER S907607A2101

METER-01

METER-01

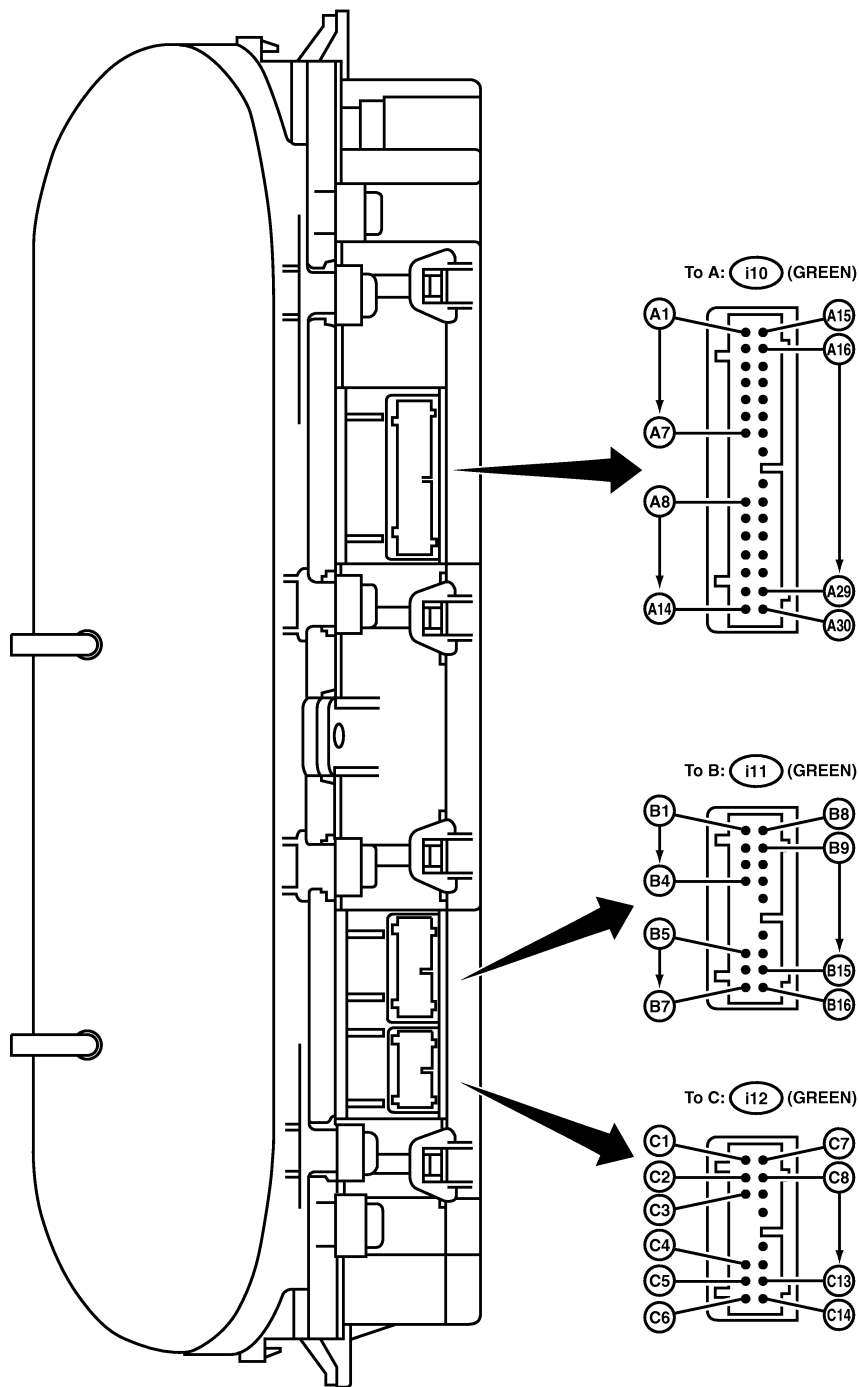

IDI-4


BU64-21A

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

METER-02

METER-02

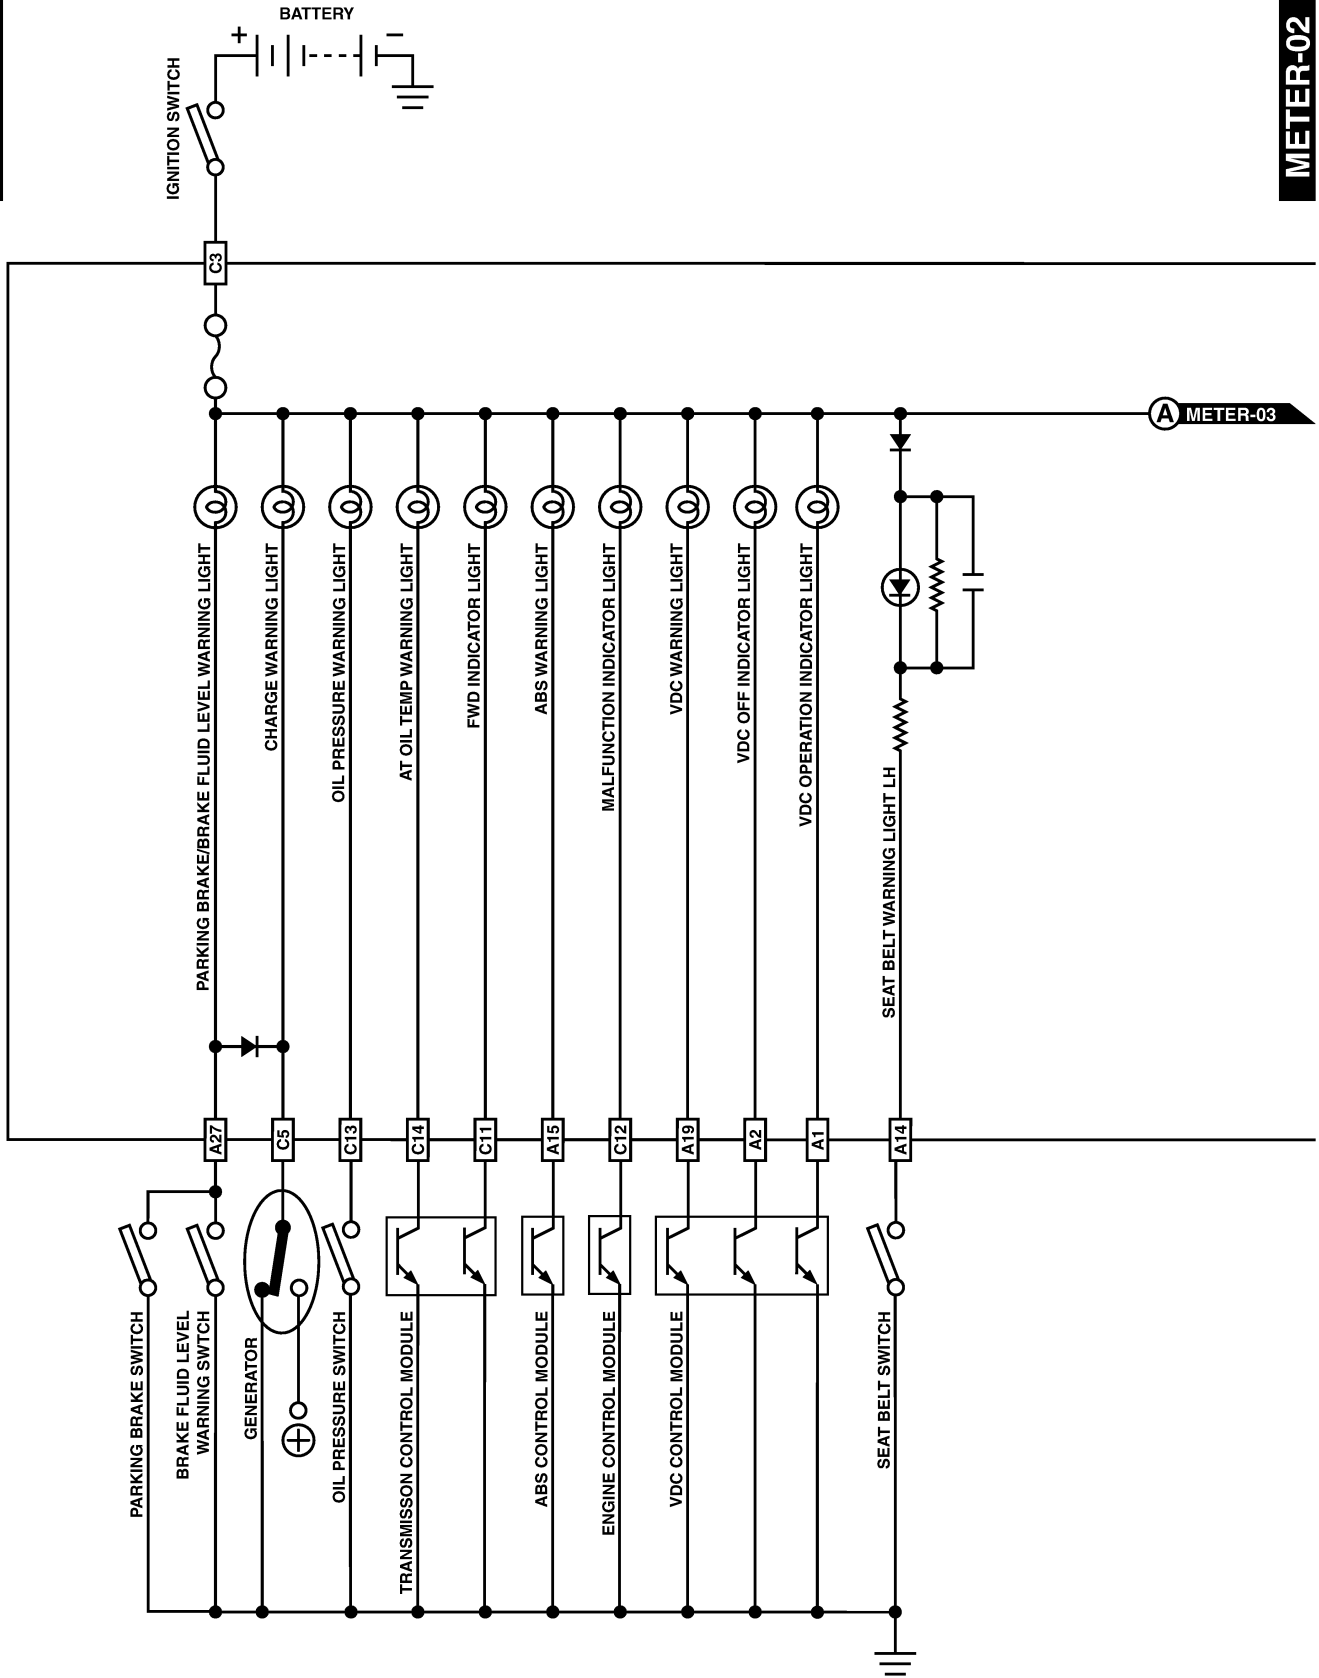


BU64-21B

IDI-5

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

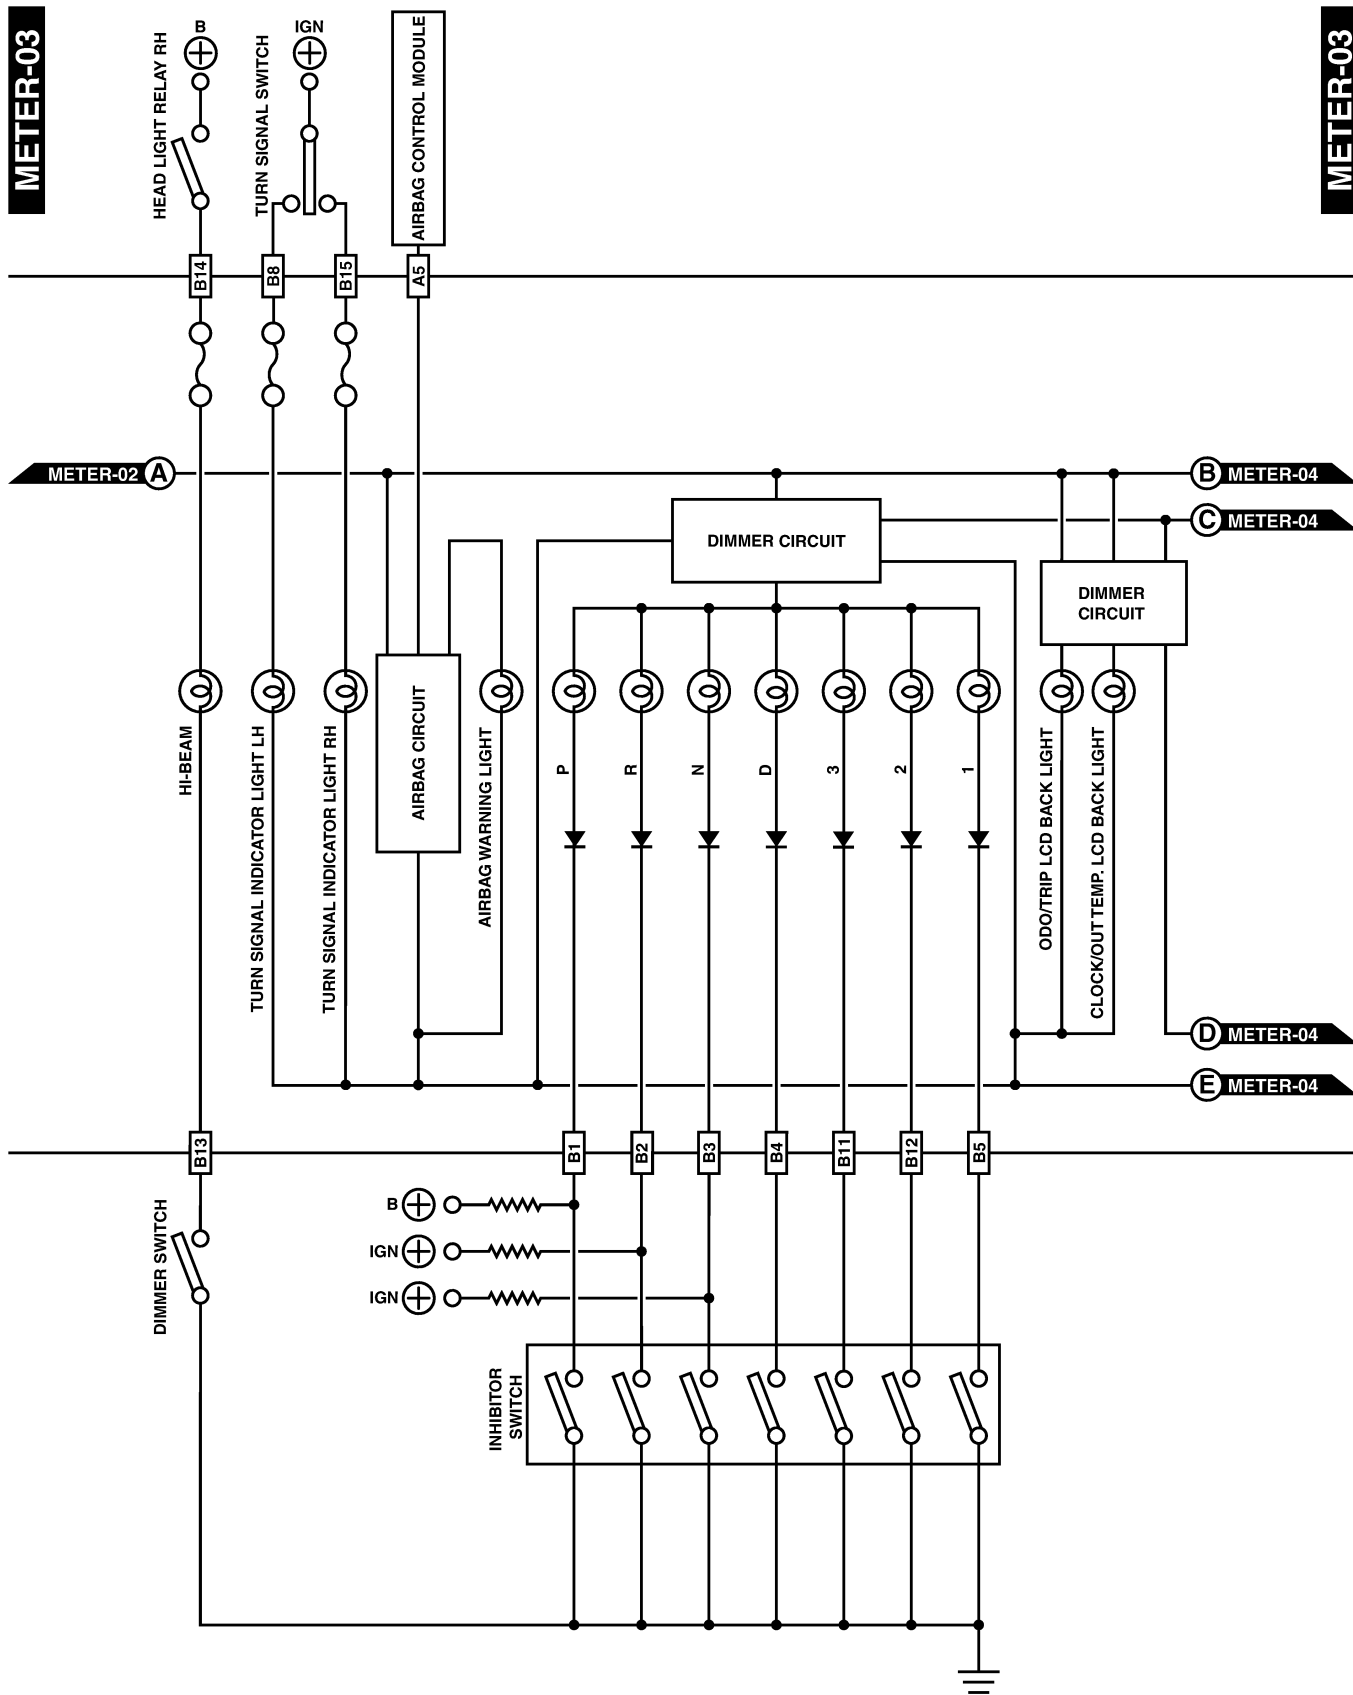


BU64-21C

IDI-6

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

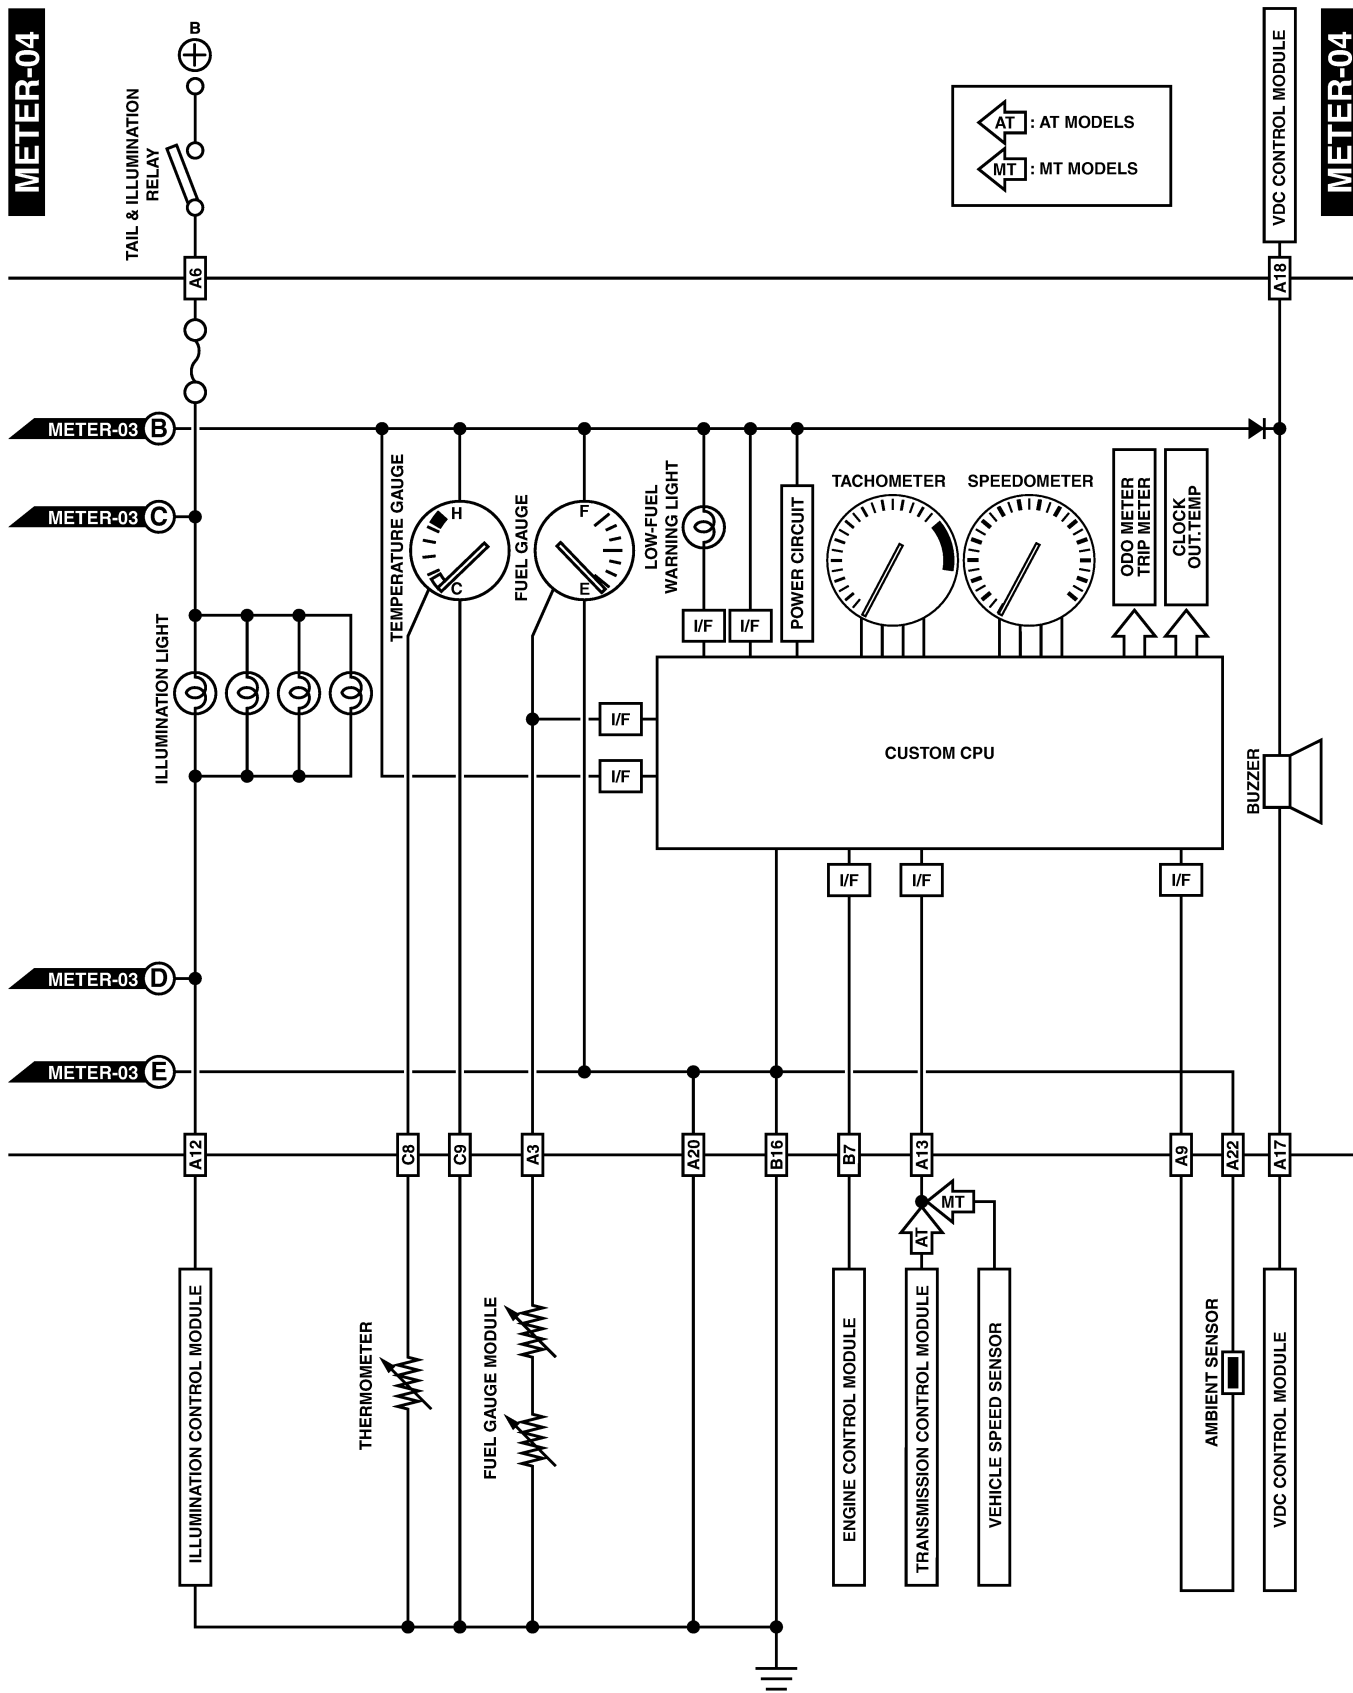


BU64-21D

IDI-7

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

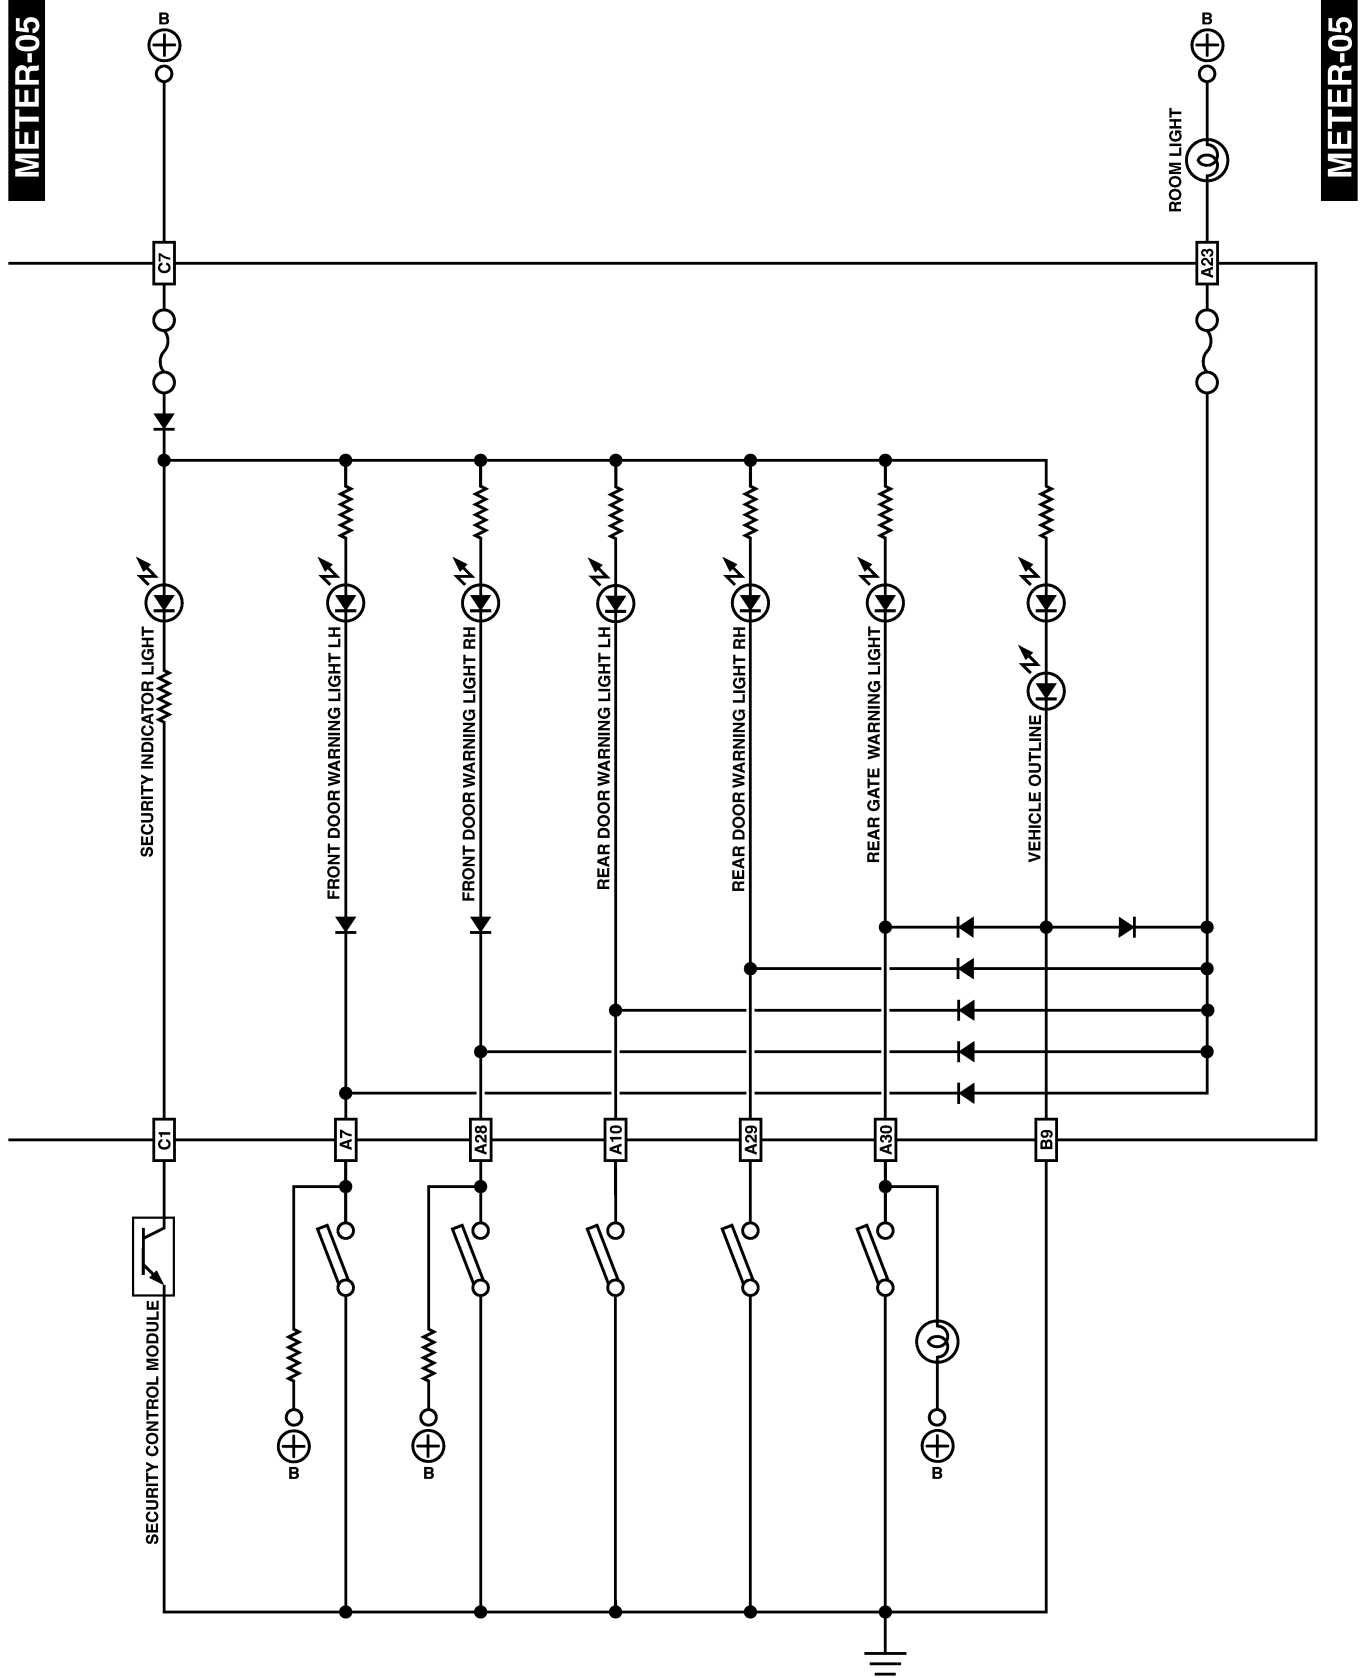


BU64-21E

IDI-8

## 2. OUTSIDE TEMPERATURE INDICATOR S907607A2102

O/TEMP-01


O/TEMP-01

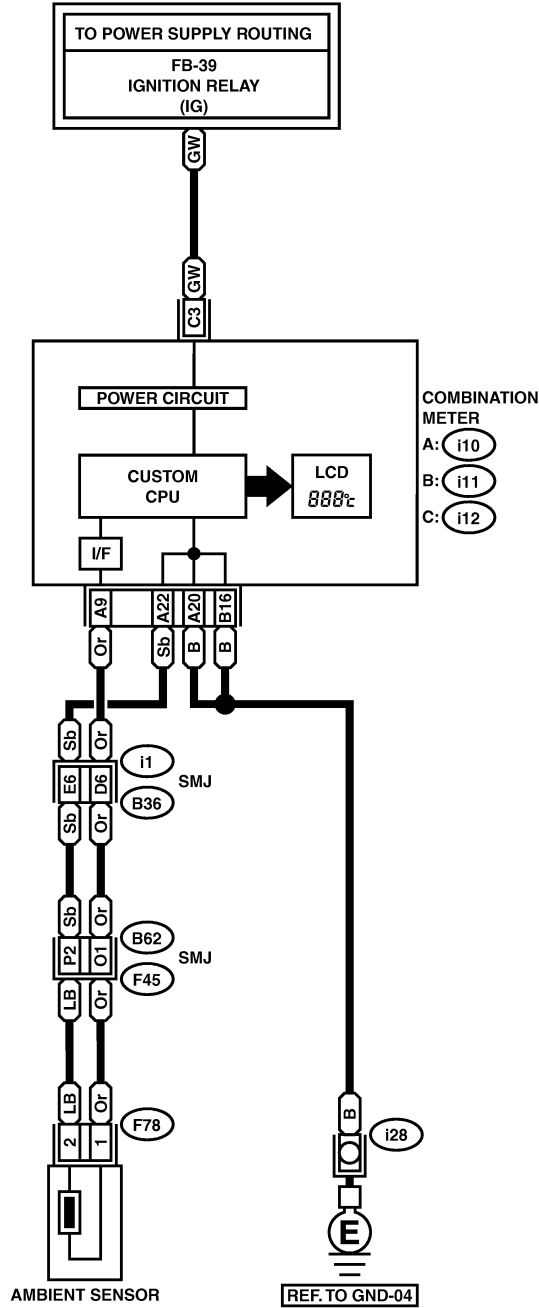


F78 (BLACK)



 
C: i12 (GREEN)



B: i11 (GREEN)

 

A: i10 (GREEN)

 

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

## B: INSPECTION S907607A10

### CAUTION:

When measuring voltage and resistance of the ECM, TCM, or each sensor, use a tapered pin with a diameter of less than 0.64 mm (0.025 in) in order to avoid poor contact. Do not insert the pin more than 5 mm (0.20 in).

### 1. SYMPTOM CHART S907607A1007

Symptom	Repair order	Reference
Combination meter assembly does not operate.	(1) Power supply (2) Ground circuit	<Ref. to IDI-11 CHECK POWER SUPPLY AND GROUND CIRCUIT, INSPECTION, Combination Meter System.>
Speedometer does not operate.	(1) (MT) Vehicle speed sensor (A/T) Transmission control module (2) Harness (3) Speedometer	<Ref. to IDI-12 CHECK VEHICLE SPEED SENSOR, INSPECTION, Combination Meter System.>
		<Ref. to IDI-13 CHECK TRANSMISSION CONTROL MODULE, INSPECTION, Combination Meter System.>
Tachometer does not operate.	(1) Engine control module (2) Harness (3) Tachometer	<Ref. to IDI-14 CHECK ENGINE CONTROL MODULE, INSPECTION, Combination Meter System.>
Fuel gauge does not operate.	(1) Fuel level sensor (2) Harness (3) Fuel gauge	<Ref. to IDI-15 CHECK FUEL LEVEL SENSOR, INSPECTION, Combination Meter System.>
Water temperature gauge does not operate.	(1) Engine coolant temperature sensor (2) Harness (3) Water temperature gauge	<Ref. to IDI-16 CHECK ENGINE COOLANT TEMPERATURE SENSOR, INSPECTION, Combination Meter System.>
Outside temperature indicator does not operate.	(1) Ambient sensor (2) Harness (3) Combination meter	<Ref. to IDI-16 CHECK OUTSIDE TEMPERATURE INDICATOR, INSPECTION, Combination Meter System.>

## 2. CHECK POWER SUPPLY AND GROUND CIRCUIT

S907607A1001

No.	Step	Check	Yes	No
1	<b>CHECK POWER SUPPLY FOR COMBINATION METER.</b> 1) Remove combination meter. <Ref. to IDI-17 REMOVAL, Combination Meter Assembly.> 2) Disconnect combination meter harness connector. 3) Turn ignition switch to ON. 4) Measure voltage between combination meter connector (i12) and chassis ground. <b>Connector &amp; terminal</b> <i>(i12) No. 3 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 2.	Check harness for open or short between ignition relay and combination meter.
2	<b>CHECK POWER SUPPLY FOR COMBINATION METER.</b> Measure voltage between combination meter connector (i12) and chassis ground. <b>Connector &amp; terminal</b> <i>(i12) No. 7 (+) — Chassis ground (-):</i>	Is the voltage more than 10 V?	Go to step 3.	Check harness for open or short between ignition relay and combination meter.
3	<b>CHECK GROUND CIRCUIT OF COMBINATION METER.</b> 1) Turn ignition switch to OFF. 2) Measure resistance of harness between combination meter connector (i10) and chassis ground. <b>Connector &amp; terminal</b> <i>(i10) No. 20 (+) — Chassis ground (-):</i>	Is the resistance less than 10 Ω?	Go to step 4.	Repair wiring harness.
4	<b>CHECK GROUND CIRCUIT OF COMBINATION METER.</b> Measure resistance of harness between combination meter connector (i11) and chassis ground. <b>Connector &amp; terminal</b> <i>(i11) No. 16 (+) — Chassis ground (-):</i>	Is the resistance less than 10 Ω?	Replace combination meter.	Repair wiring harness.



# COMBINATION METER SYSTEM

Instrumentation/Driver Info

## 3. CHECK VEHICLE SPEED SENSOR

S907607A1002

No.	Step	Check	Yes	No
1	<p><b>CHECK VEHICLE SPEED SENSOR.</b></p> <p>1) Set the vehicle on a free roller, or lift-up the vehicle and support it with safety stands.</p> <p>2) Remove the combination meter with harness connector.</p> <p><b>WARNING:</b> <b>Be careful not to get caught in the running wheels.</b></p> <p>3) Drive the vehicle at a speed greater than 20 km/h/ (12 MPH).</p> <p>4) Measure voltage between combination meter connector (i10) and chassis ground.</p> <p><b>Connector &amp; terminal</b> <b>(i10) No. 13 (+) — Chassis ground (-):</b></p>	Is the voltage more than 5 V?	Check speedometer. <Ref. to IDI-19 REMOVAL, Speedometer.>	Go to step 2.
2	<p><b>CHECK VEHICLE SPEED SENSOR POWER SUPPLY.</b></p> <p>1) Turn ignition switch to OFF.</p> <p>2) Disconnect vehicle speed sensor harness connector.</p> <p>3) Turn ignition switch to ON.</p> <p>4) Measure voltage between vehicle speed sensor connector (B17) and engine ground.</p> <p><b>Connector &amp; terminal</b> <b>(B17) No. 3 (+) — Engine ground (-):</b></p>	Is the voltage more than 10 V?	Go to step 3.	Check harness for open or short between ignition relay and vehicle speed sensor.
3	<p><b>CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND ENGINE GROUND.</b></p> <p>1) Turn ignition switch to OFF.</p> <p>2) Measure resistance between vehicle speed sensor connector (B17) and engine ground.</p> <p><b>Connector &amp; terminal</b> <b>(B17) No. 2 (+) — Engine ground (-):</b></p>	Is the resistance less than 10 Ω?	Go to step 4.	Repair wiring harness.
4	<p><b>CHECK HARNESS BETWEEN VEHICLE SPEED SENSOR AND COMBINATION METER.</b></p> <p>1) Disconnect connector from combination meter.</p> <p>2) Measure resistance between vehicle speed sensor harness connector and combination meter harness connector.</p> <p><b>Connector &amp; terminal</b> <b>(B17) No. 1 — (i10) No. 13:</b></p>	Is the resistance less than 10 Ω?	Replace vehicle speed sensor.	Repair wiring harness.

## 4. CHECK TRANSMISSION CONTROL MODULE

SS07607A1008

No.	Step	Check	Yes	No
1	<p><b>CHECK AUTOMATIC TRANSMISSION CONTROL MODULE SIGNAL.</b></p> <p>1) Set the vehicle on a free roller, or lift-up the vehicle and support it with safety stands.</p> <p><b>WARNING:</b> <b>Be careful not to get caught in the running wheels.</b></p> <p>2) Drive the vehicle faster than 10 km/h (6 MPH).</p> <p>3) Measure voltage between automatic transmission control module connector (B55) and chassis ground.</p> <p><b>Connector &amp; terminal</b> <b>(B55) No. 13 (+) — Chassis ground (-):</b></p>	<p>Is the voltage less than 5 V ←→ more than 4 V?</p>	<p>Go to step 2.</p>	<p>Check automatic transmission control module. &lt;Ref. to AT-2 Basic Diagnostic Procedure.&gt;</p>
2	<p><b>CHECK HARNESS BETWEEN AUTOMATIC TRANSMISSION CONTROL MODULE AND COMBINATION METER.</b></p> <p>1) Turn ignition switch to OFF.</p> <p>2) Disconnect connector from automatic transmission control module and combination meter.</p> <p>3) Measure resistance between automatic transmission control module harness connector (B55) and combination meter harness connector (i10).</p> <p><b>Connector &amp; terminal</b> <b>(B55) No. 13 — (i10) No. 13:</b></p>	<p>Is the resistance less than 10 Ω?</p>	<p>Check speed meter. &lt;Ref. to IDI-19 REMOVAL, Speedometer.&gt;</p>	<p>Repair wiring harness.</p>

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

## 5. CHECK ENGINE CONTROL MODULE

S907607A1004

No.	Step	Check	Yes	No
1	<b>CHECK ENGINE CONTROL MODULE SIGNAL.</b> 1) Start the engine. 2) Measure voltage between engine control module connector (B134) and engine ground. <b>Connector &amp; terminal</b> <b>(B134) No. 30 (+) — Engine ground (-):</b>	Is the voltage 0 ↔ 13 V or more?	Go to step 2.	Check engine control module. <Ref. to EN(H4)-2 Basic Diagnostic Procedure.>
2	<b>CHECK HARNESS BETWEEN COMBINATION METER AND ENGINE CONTROL MODULE.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from engine control module and combination meter. 3) Measure resistance between engine control module harness connector (B134) and combination meter harness connector (i11). <b>Connector &amp; terminal</b> <b>(B134) No. 30 — (i11) No. 7:</b>	Is the resistance less than 10 Ω?	Check tachometer. <Ref. to IDI-20 REMOVAL, Tachometer.>	Repair wiring harness.

## 6. CHECK FUEL LEVEL SENSOR S907607A1005

No.	Step	Check	Yes	No
1	<b>CHECK FUEL LEVEL SENSOR.</b> Check fuel level sensor. <Ref. to EC(H4)-9 REMOVAL, Main Fuel Level Sensor.>	Is fuel level sensor OK?	Go to step 2.	Replace fuel level sensor.
2	<b>CHECK HARNESS BETWEEN FUEL LEVEL SENSOR AND COMBINATION METER.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from fuel tank cord and combination meter. 3) Measure resistance between rear wiring harness connector (R15) and combination meter harness connector (i10). <b>Connector &amp; terminal</b> <b>(R15) No. 6 — (i10) No. 3:</b>	Is the resistance less than 10 Ω?	Check fuel gauge. <Ref. to IDI-21 REMOVAL, Fuel Gauge.>	Repair wiring harness.

# COMBINATION METER SYSTEM

Instrumentation/Driver Info

## 7. CHECK ENGINE COOLANT TEMPERATURE SENSOR

S907607A1006

No.	Step	Check	Yes	No
1	<b>CHECK ENGINE COOLANT TEMPERATURE SENSOR.</b> Check engine coolant temperature sensor. <Ref. to FU(H4)-40 REMOVAL, Engine Coolant Temperature Sensor.>	Is engine coolant temperature sensor OK?	Go to step 2.	Check engine coolant temperature sensor.
2	<b>CHECK HARNESS BETWEEN ENGINE COOLANT TEMPERATURE SENSOR AND COMBINATION METER.</b> 1) Turn ignition switch to OFF. 2) Disconnect connector from engine coolant temperature sensor and combination meter. 3) Measure resistance between engine coolant temperature sensor harness connector (E8) and combination meter harness connector (i12). <b>Connector &amp; terminal</b> <b>(E8) No. 3 — (i12) No. 8:</b>	Is the resistance less than 10 Ω?	Check water temperature meter. <Ref. to IDI-22 REMOVAL, Water Temperature Gauge.>	Repair wiring harness.

## 8. CHECK OUTSIDE TEMPERATURE INDICATOR

S907607A1009

No.	Step	Check	Yes	No
1	<b>CHECK POWER SUPPLY FOR AMBIENT SENSOR.</b> 1) Turn ignition switch OFF. 2) Disconnect connector from ambient sensor. 3) Turn ignition switch ON. 4) Measure voltage between ambient sensor harness connector terminal and chassis ground. <b>Connector &amp; terminal</b> <b>(F78) No. 1 (+) — Chassis ground (-):</b>	Is the voltage more than 10 V?	Go to step 2.	Check harness for open or short between ambient sensor and combination meter.
2	<b>CHECK AMBIENT SENSOR.</b> 1) Turn ignition switch OFF. 2) Remove ambient sensor. 3) Check ambient sensor. <Ref. to IDI-23 INSPECTION, Ambient Sensor.>	Is the ambient sensor OK?	Go to step 3.	Replace the ambient sensor.
3	<b>CHECK HARNESS BETWEEN AMBIENT SENSOR AND COMBINATION METER.</b> 1) Disconnect connector from combination meter. 2) Measure resistance between ambient sensor harness connector terminal and combination meter harness connector terminal. <b>Connector &amp; terminal</b> <b>(F78) No. 2 — (i10) No. 9:</b>	Is the resistance less than 10 Ω?	Go to step 4.	Repair wiring harness.
4	<b>CHECK OUTSIDE TEMPERATURE INDICATOR.</b> 1) Connect combination meter harness connector. 2) Connect a resistor (2.2 kΩ) between terminals of ambient sensor harness connector. 3) Turn ignition switch ON and check the outside temperature indicator display.	Is the outside temperature indicator indicating 25°C (77°F)?	Outside temperature indicator is OK.	Replace combination meter printed circuit.