
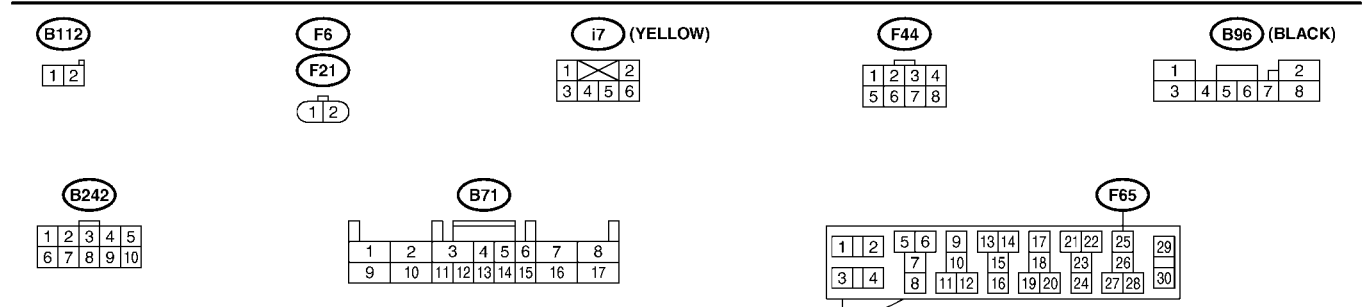


3. Front Fog Light System S914473

A: SCHEMATIC S914473A21


 
 
 
 
 
 

1. FRONT FOG LIGHT 4 CYLINDER ENGINE MODEL S914473A2101

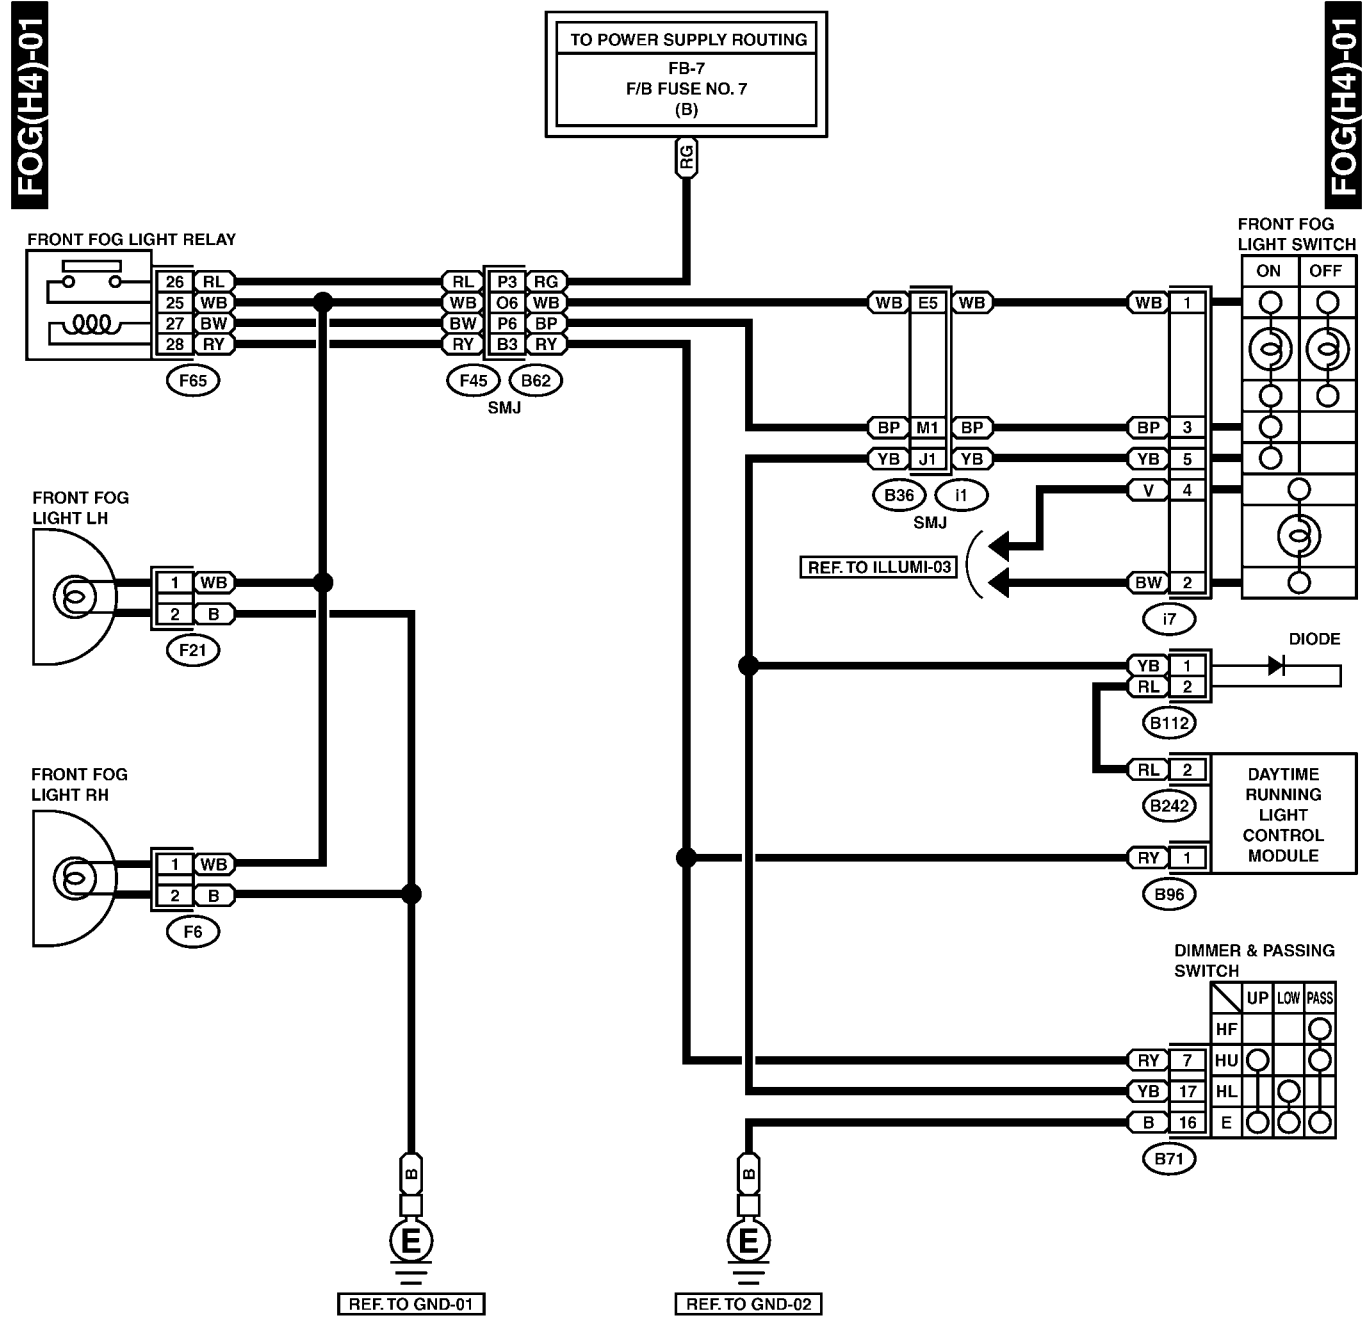

FRONT FOG LIGHT SYSTEM

Lighting System


2. FRONT FOG LIGHT 6 CYLINDER ENGINE MODEL S914473A2102

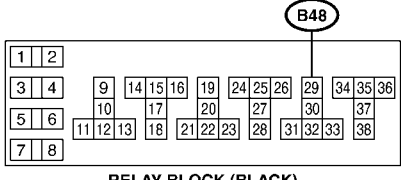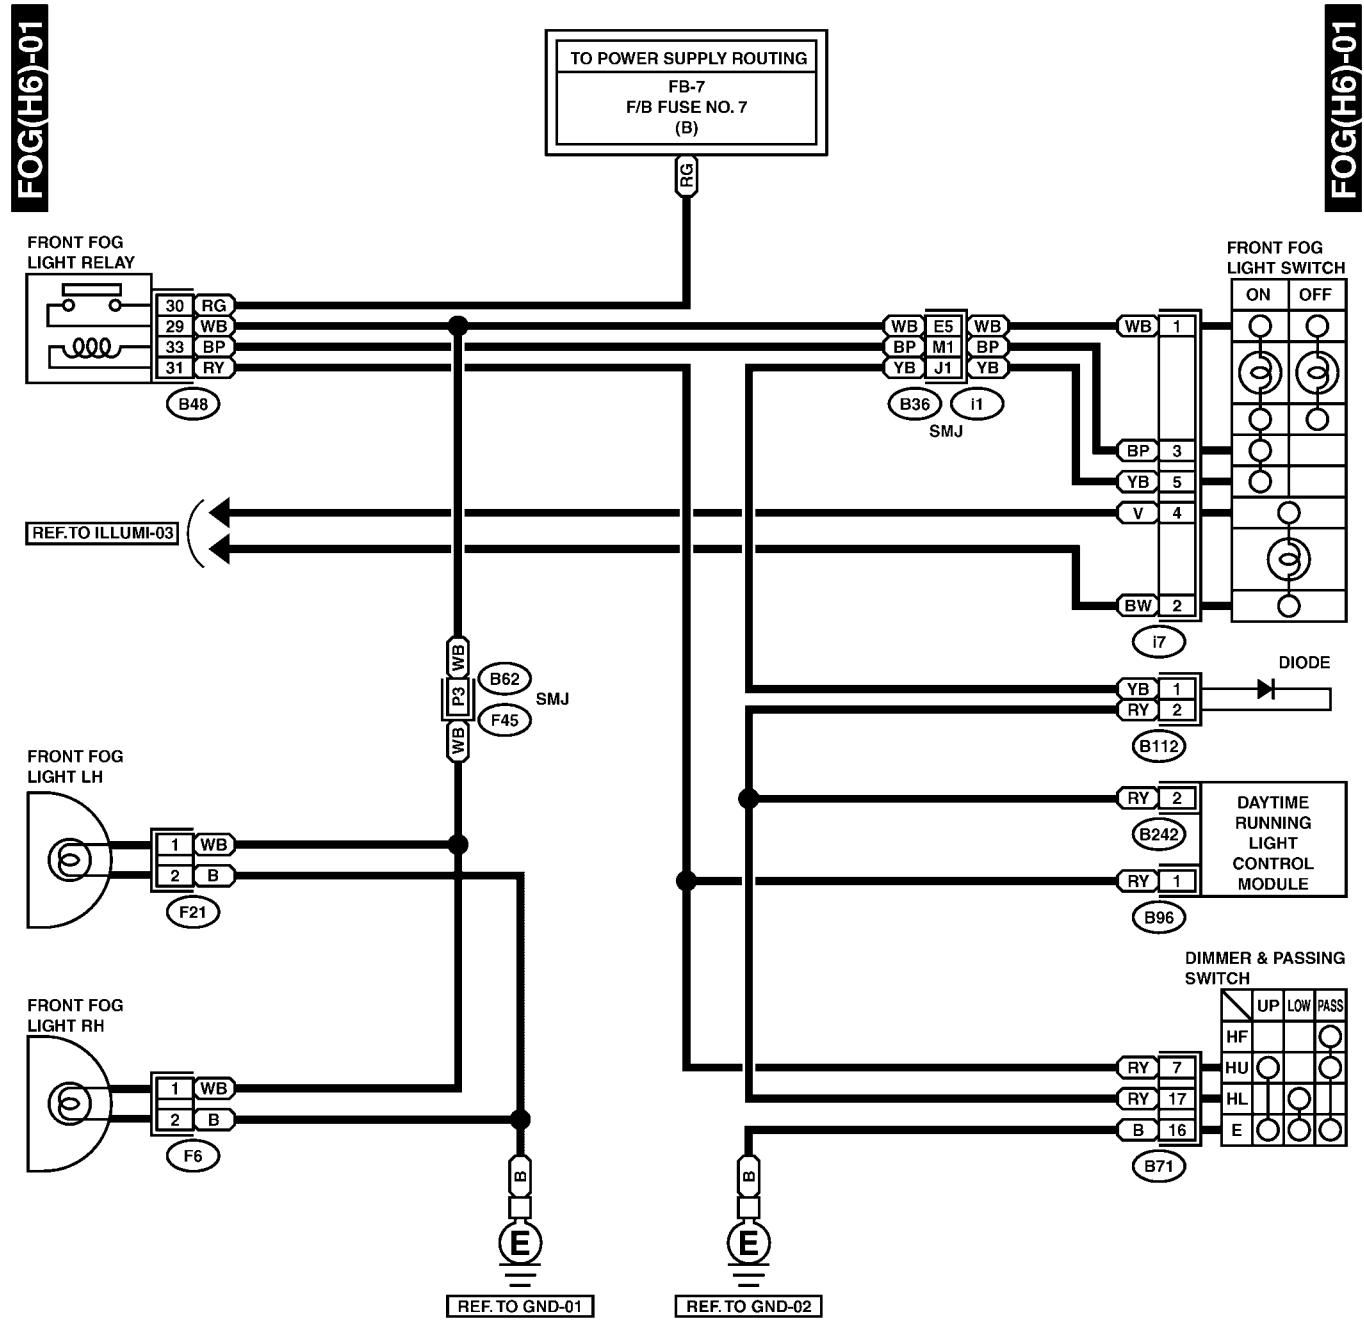

BU22-22

B: INSPECTION S914473A10

1. FRONT FOG LIGHT SWITCH S914473A1001

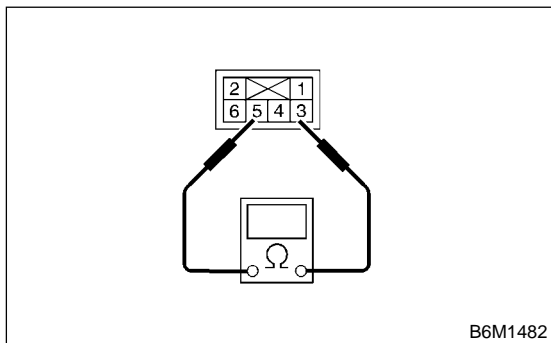

Check continuity between terminals when operating the switch.

Switch position	Tester connection	Specified condition
OFF	—	No continuity
ON	3 - 5	Continuity

2. FRONT FOG LIGHT RELAY S914473A1002

Check continuity between terminals (indicated in table below) when terminal No. 4 is connected to battery and terminal No. 3 is grounded.

When current flows.	Between terminals No. 1 and No. 2	Continuity exists.
When current does not flow.	Between terminals No. 1 and No. 2	Continuity does not exist.
	Between terminals No. 3 and No. 4	Continuity exists.

