


## 25. Trunk Room Light S914393

### A: REMOVAL S914393A18

Disconnect harness connectors and remove trunk room light.

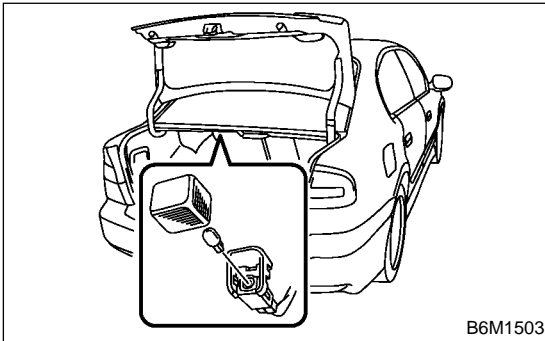

B6M1503

### B: INSTALLATION S914393A11

Install in the reverse order of removal.