


## 5. Front Inner Remote S909344

### A: REMOVAL S909344A18

- 1) Remove the door trim. <Ref. to EI-32 REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13 REMOVAL, Front Sealing Cover.>
- 3) Remove the two rod joints.
- 4) Remove the front inner remote.

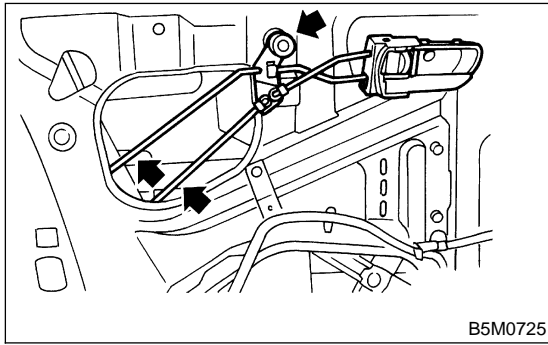

### B: INSTALLATION S909344A11

Install in the reverse order of removal.

#### CAUTION:

**Make sure the lock operates properly after installation.**

### C: INSPECTION S909344A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.