


7. Front Door Latch Assembly

S909334

A: REMOVAL S909334A18

- 1) Remove the front door trim. <Ref. to EI-32 REMOVAL, Front Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-13 REMOVAL, Front Sealing Cover.>
- 3) Remove the front inner remote. <Ref. to SL-34 REMOVAL, Front Inner Remote.>
- 4) Remove the three screws and bolt.

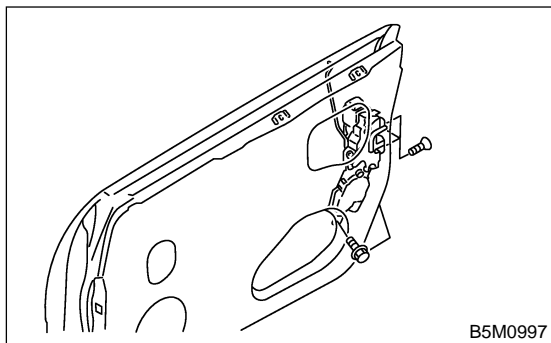

B5M0997

- 5) Disconnect the connector. Remove the front door latch assembly.

B: INSTALLATION S909334A11

Install in the reverse order of removal.

CAUTION:

Make sure the lock operates properly after installation.

C: INSPECTION S909334A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.