


8. Front Door Lock Actuator S909319

A: REMOVAL S909319A18

- 1) Remove the front door latch assembly. <Ref. to SL-36 REMOVAL, Front Door Latch Assembly.>
- 2) Remove the bolt. Remove the front door lock actuator.

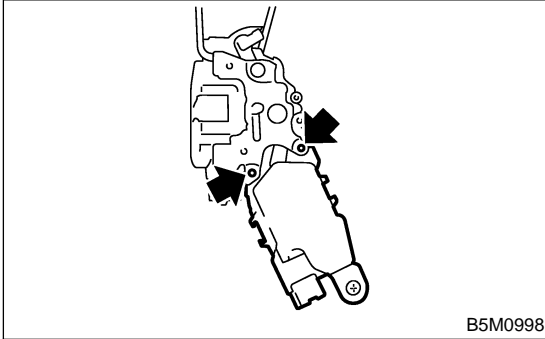


B: INSTALLATION S909319A11

Install in the reverse order of removal.

C: INSPECTION S909319A10

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to the door lock actuator terminals.

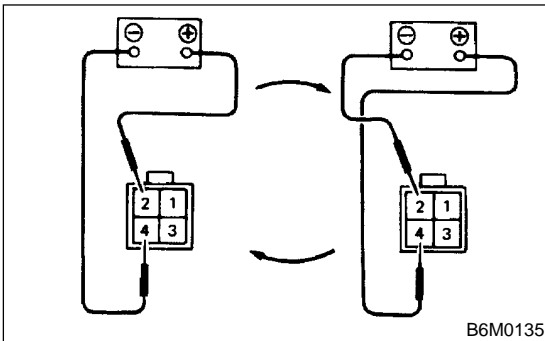

Battery connection	Actuator operation
No. 2 (+) — No. 4 (-)	Unlocked → Locked
No. 4 (+) — No. 2 (-)	Locked → Unlocked

If NG, replace the door lock actuator.