


## 9. Rear Inner Remote S909321

### A: REMOVAL S909321A18

- 1) Remove the rear door trim. <Ref. to EI-33 REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16 REMOVAL, Rear Sealing Cover.>
- 3) Remove the two rod joints.
- 4) Remove the inner remote.

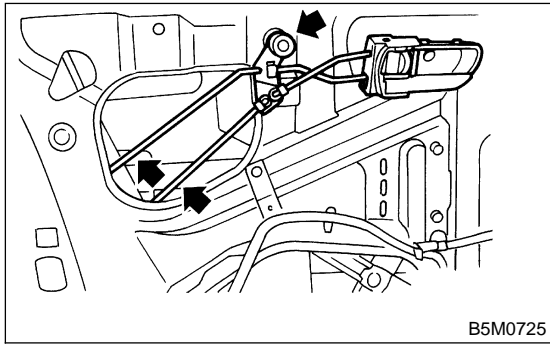

### B: INSTALLATION S909321A11

Install in the reverse order of removal.

#### **CAUTION:**

**Make sure the lock operates properly after installation.**

### C: INSPECTION S909321A10

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.